



Pocket Handbook  
Of Technical Data For  
the **TOSHIBA**  
Range of AC Products



**Additional “Pocket Quick Reference Guides” are available covering.**

Pocket Handbook R410A AC Products.  
VN-M (HE & HE1) Units, Air to Air Heat Exchangers.  
RBC-AMT32E Standard Wired Remote Controller. TCC-Link  
RBC-AMTU31E Standard Wired Remote Controller. TU2C-Link  
AMS41E Wired Remote Controller with 7-day timer. TCC-Link  
RBC-AMS51/54/55E-ES Back Light Wired Remote Controller with  
7-Day Timer. TCC-Link  
RBC-AMSU51-E Back Light Wired Remote Controller with  
7-Day Timer. TU2C-Link  
RBC-ASC11E Compact Simple Controller. TCC-Link  
RBC-ASCU11-E Compact Simple Controller. TU2C-Link  
RBC-MTSC1 / 2 Mini Touch Screen. TCC-Link  
R410A VRF Addressing / Commissioning.  
R410A SMMSe Heat Pump Calculating the Refrigerant Charge.  
R410A SHRMe Heat Recovery Systems.  
R410A Single Fan Mini VRF.  
FPD3 – Full AHU Control Interface.  
FDP3 – Modbus AHU Control Interface.  
RBC-RASNC – RAS Central Controller Interface.  
CDL-VN-M CO2 Kit.  
CDL-BMS01 Interface.  
WIFI options Interface and “Applications”.

**Future Publications coming soon.**

RBC-TBPTS Colour Smart Touch Screen Central Remote Controller.  
RBC-TSI1 Universal Monitoring and Control Interface including Modbus.

You will also find Single Sheet Literature for all the current Toshiba Air Conditioning Units on our web site, along with Installation, Owners and Service manuals.

<http://www.cdlweb.info>

Mechanical Specifications-RAS R410A Outdoor Units	4
Performance & Electrical Specifications - RAS R410A Single Splits	4
Performance & Electrical Specifications - RAS R410A Multi Splits	5
Acoustic Data - RAS Indoor Units	5
RAS R410A Multi Split System Combinations	6
RAS - Auto Restart Function	7
Fault Codes - RAS "N" Series	7
Mechanical Specifications - DI/SDI R410A Single Splits	8
Performance & Electrical Specifications - DI / SDI R410A Single Splits	8
Electrical Specifications - DI/SDI R410A Multi Splits	9
Acoustic Data – DI/SDI Indoor Units	10
Acoustic Data – DI/SDI Outdoor Units	10
Mechanical & Electrical Data - Air-to-Air Heat Exchangers	11
Digital/Super Digital Replacement Refrigerant Pipe Sizing	12
Digital/Super Digital Inverter Twin Splits	13
Refrigerant Charge DI/SDI Twin System	14
Digital/Super Digital Inverter Triple Splits	15
Refrigerant Charge DI/SDI Triple System	16
Digital Inverter Quad Splits	17
Refrigerant Charge DI Quad System	18
Di/SDI Multi Split Wiring Schematic	18
VRF System Make Up Chart	19
VRF Indoor Units Capacity Data	24
Electrical Data - VRF Outdoor Units	24
VRF Additional Refrigerant Charge Amount	25
VRF Additional Refrigerant Charge Calculations Mini VRF Series 4 & 6	27
VRF Additional Refrigerant Charge Calculations Heat Pump SMMSe	28
VRF Additional Refrigerant Charge Calculations Heat Pump SMMSu	29
VRF Additional Refrigerant Charge Calculations Heat Recovery SHRMe	31
VRF Replacement Technology	32
Acoustic Data - MMY Indoor Units	33
Common Sensor Characteristics	34
Trouble Shooting - RAV Series	35
Apps Store Fault Codes - All Commercial & VRF Systems	40
Fault Codes – All Commercial & VRF Systems	41
Error Detected by TCC-Link Central Controller	55
Step by Step Wiping/Re-addressing Of VRF Systems	57
Priority Mode (SMMSi/e Only)	57
Priority Mode (SMMSu Only)	57
Outdoor Fan High Static Pressure Setup	58
Compressor or Outdoor Fan Motor Backup Isolation Setting	58
Opening PMV's on Toshiba 3 Pipe VRF (R410a)	59
VRF Rotary Dial Data Display	60
VRF Testing Criteria	61
TCC-Link / TU2C-Link Controller Guidelines	62
System Configuration Menu	63
VRF SMMSu Outdoor DN Codes	65
TCC-Link /TU2C-Link Optional Control Accessories	67
TCC-Link / TU2C-Link Control - Standard Wired Controller	69
Controller Configuration - Remote Controller RBC-AMT32E/AMTU31E & RBC-AMS41E	72
Data Retrieval Guide - Remote Controllers RBC-AMT32E/AMTU31E, RBC-AMS41E & RBC-AMS51E/AMSU51-E	73
VN-M HE/HE1 Air to Air Heat Exchangers Remote Controller Options	75
VN-M HE Air to Air Heat Exchangers Configuration	76
VN-M HE1 Air to Air Heat Exchangers Configuration	77
VN-M HE1 Air to Air Manual Configuration	78
Network Addressing DI/SDI & VRF Systems	79
VRF – Important Information New Generation "UP" series Indoor Units	80
Second Controller	88
Temperature Sensing	88
Notes	89
Contact Details	92

## Mechanical Specifications - RAS R410A Outdoor Units

Model	Pipe Sizes (")		Min/Max Pipe Sep (m)	Max Height Separation (+/-) (m)	Pre- Charge (m)	Add Charge (g/m)	Base Charge (kg)	Dimensions (mm)	Weight (kg)		
	Liquid	Suction									
<b>RAS Outdoor Units</b>											
RAS-07BAV-E	1/4	3/8	2/15	12	15	N/A	0.48	530x660x240	21		
RAS-10BAV-E							0.52				
RAS-13BAV-E							0.58				
RAS-16BAV-E		20	0.90			550x780x290	34				
RAS-107SAV-E6		3/8	2/15			8	20	N/A	0.63	530x660x240	27
RAS-137SAV-E6											30
RAS-10N3AVP-E		3/8	2/25	10	10	20	1.05	630x800x300	41		
RAS-13N3AVP-E											
RAS-16N3AVP-E		1/2	2/25	10	10	20	1.05	630x800x300	41		
RAS-10G2AVP-E		3/8									
RAS-13G2AVP-E		1/2	2/20	10	15	20	0.8	550x780x290	33		
RAS-10N3AV2-E1		3/8									
RAS-13N3AV2-E1		1/2	2/30	10	30	N/A	1.32	630x800x300	44		
RAS-16N3AV2-E		3/8x2									
RAS-2M14S3AV-E		3/8x2+ 1/2x1	2/50	10	50	N/A	1.50	630x800x300	46		
RAS-2M18S3AV-E											
RAS-3M18S3AV-E		3/8x1+ 1/2x2	3/70	15	40	20	2.40	890x900x320	72		
RAS-3M26S3AV-E											
RAS-4M27S3AV-E	3/8x2+1/2x2	3/80	15	40	20	2.99	890x900x320	78			
RAS-5M34S3AV-E											

## Performance & Electrical Specifications - RAS R410A Single Splits

Model	Capacity (kW)		Energy Rating Cool/Heat	Phase	Power To	Soft Start	Max Run Current (A)	Suggested Fuse Size (A) #	Interconnect Cable
	Cool	Heat							
<b>RAS Split Systems</b>									
RAS-07BAV-E	2.0	2.5	A+/A+	1Ph + N	Indoor/ Outdoor	Yes	3.17	10	3C + E
RAS-10BAV-E	2.5	3.2	A+/A+				4.19	10	
RAS-13BAV-E	3.1	3.6	A+/A+				5.60	10	
RAS-16BAV-E	4.4	5.4	A+/A+				7.05	16	
RAS-107SAV-E6	2.50	3.20	A/A				4.19	10	
RAS-137SAV-E6	3.15	3.60	A/A				5.37	10	
RAS-167SAV-E5	4.40	5.20	A+/A		7.58		16		
RAS-13N3AVP-E	3.52	4.22	A++/A+		4.78		10		
RAS-16N3AVP-E	4.53	5.53	A++/A+		7.12		16		
RAS-10G2AVP-E	2.50	3.20	A+++/A+++		3.52		10		
RAS-13G2AVP-E	3.50	4.00	A+++/A+++		3.57		10		
RAS-16G2AVP-E	4.50	5.50	A++/A++		5.96		16		
RAS-10N3AV2-E1	2.50	3.20	A++/A+		3.60		10		
RAS-13N3AV2-E1	3.50	4.20	A++/A		5.66		10		
RAS-18N3AV2-E	5.00	5.80	A+/A		8.79		16		

# Suggested fuse sizes are for guidance only, the electrical installation must be completed in-line with current electrical regulations, BS 7671:2018+A1, 2020 – 18<sup>th</sup> Edition, IET.

## Performance & Electrical Specifications - RAS R410A Multi Splits

Model	Min-Max Indoors	Capacity (kW)		Energy Rating Cool/Heat	Phase	Power To	Soft Start	Max Run Current (A)	Suggested Fuse Size (A) #	Inter-connect Cable
		Cool	Heat							
<b>RAS Multi Systems</b>										
RAS-2M14S3AV-E	2 – 2	1.60 - 4.90	1.30 - 5.20	A++/A+	1Ph + N	Outdoor	Yes	4.14	10	3C+E
RAS-2M18S3AV-E	2 - 3	1.70 - 6.20	1.30 - 7.50	A++/A++				6.43	16	
RAS-3M18S3AV-E	2 – 3	2.40 - 6.50	1.90 - 8.00	A++/A++				7.54	16	
RAS-3M26S3AV-E	2 – 3	4.10 - 9.00	2.00 - 11.2	A++/A+				10.53	16	
RAS-4M27S3AV-E	2 – 4	4.20 - 9.30	2.90 - 11.7	A++/A+				10.94	16	
RAS-5M34S3AV-E	2 – 5	3.70 - 11.0	2.70 - 14.0	A++/A+				14.26	20	

# Suggested fuse sizes are for guidance only, the electrical installation must be completed in-line with current electrical regulations, BS 7671:2018+A1, 2020 – 18<sup>th</sup> Edition, IET.

## Acoustic Data – RAS Indoor Units

RAS Indoor Units			
Model	High	Med	Low
	dB(A)	dB(A)	dB(A)
RAS-07BKV-E	40	-	22
RAS-10BKV-E	41	-	23
RAS-13BKV-E	42	-	24
RAS-16BKV-E	43	-	26
RAS-107SKV-E6	40	35	27
RAS-137SKV-E6	41	34	28
RAS-167SKV-E5	45	40	30
RAS-B10N3KVP-E	43	35	27
RAS-B13N3KVP-E	44	35	27
RAS-B16N3KVP-E	45	38	27
RAS-10G2KVP-E	43	-	24 (20)
RAS-13G2KVP-E	44	-	25 (21)
RAS-16G2KVP-E	45	-	26 (23)
RAS-B10UFV-E	39	32	26
RAS-B13UFV-E	40	33	27
RAS-B18UFV-E	46	40	34
RAS-B10N3KV2-E1	39	33	28
RAS-B13N3KV2-E1	40	33	28
RAS-B16N3KV2-E	45	40	30
RAS-M10SMUV-E	37	-	30
RAS-M13SMUV-E	38	-	30
RAS-M16SMUV-E	40	-	31
RAS-M10G3DV-E	36	-	25
RAS-M13G3DV-E	38	-	25
RAS-M16G3DV-E	36	-	23

Note: Sound measured in Pressure dB(A)

RAS Multi-Split System Combination Examples					
Outdoor Unit	Indoor Unit Size & Duty				
	Unit 1	Unit 2	Unit 3	Unit 4	Unit 5
RAS-2M14S3AV-E 4.4 kW	10 (2.70kw)				
	13 (3.70kw)				
	10 (2.00kw)	10 (2.00kw)			
	13 (2.31kw)	10 (1.69kw)			
	13 (2.00kw)	13 (2.00kw)			
RAS-2M18S3AV-E 5.6 kW	10 (2.70kw)				
	13 (3.70kw)				
	16 (4.50kw)				
	10 (2.60kw)	10 (2.60kw)			
	13 (3.01kw)	10 (2.19kw)			
	13 (2.60kw)	13 (2.60kw)			
	16 (3.25kw)	10 (1.95kw)			
	16 (2.85kw)	13 (2.35kw)			
RAS-3M18S3AV-E 6.8 kW	16 (2.60kw)	16 (2.60kw)			
	10 (2.70kw)				
	13 (3.40kw)				
	16 (4.50kw)				
	10 (2.60kw)	10 (2.60kw)			
	13 (3.01kw)	10 (1.54kw)			
	13 (2.60kw)	13 (2.60kw)			
	16 (3.25kw)	10 (1.95kw)			
	16 (2.85kw)	13 (2.35kw)			
	16 (2.60kw)	16 (2.60kw)			
RAS-3M26S3AV-E 8.0 kW	10 (1.74kw)	10 (1.73kw)	10 (1.73kw)		
	13 (2.12kw)	10 (1.54kw)	10 (1.54kw)		
	13 (1.90kw)	13 (1.90kw)	10 (1.40kw)		
	16 (2.36kw)	10 (1.42kw)	10 (1.42kw)		
	10 (2.70kw)				
	13 (3.40kw)				
	16 (3.90kw)				
	18 (4.10kw)				
	10 (2.70kw)	10 (2.70kw)			
	13 (3.41kw)	10 (2.49kw)			
	13 (3.15kw)	13 (3.15kw)			
	16 (3.94kw)	10 (2.36kw)			
	16 (3.73kw)	13 (3.07kw)			
	16 (3.60kw)	16 (3.60kw)			
	18 (4.09kw)	10 (2.21kw)			
	18 (3.91kw)	13 (2.89kw)			
	18 (3.79kw)	16 (3.41kw)			
	18 (3.60kw)	18 (3.60kw)			
	10 (2.47kw)	10 (2.47kw)	10 (2.47kw)		
	13 (3.01kw)	10 (2.20kw)	10 (2.20kw)		
	13 (2.71kw)	13 (2.71kw)	10 (1.98kw)		
	13 (2.47kw)	13 (2.47kw)	13 (2.47kw)		
	16 (3.36kw)	10 (2.02kw)	10 (2.02kw)		
	16 (3.06kw)	13 (2.51kw)	10 (1.83kw)		
	16 (2.80kw)	13 (2.30kw)	13 (2.30kw)		
	16 (2.85kw)	16 (2.85kw)	10 (1.71kw)		
	16 (2.66kw)	16 (2.66kw)	13 (2.19kw)		
	16 (2.50kw)	16 (2.50kw)	16 (2.50kw)		
18 (3.56kw)	10 (1.92kw)	10 (1.92kw)			
18 (3.25kw)	13 (2.40kw)	10 (1.75kw)			
18 (2.98kw)	13 (2.21kw)	13 (2.21kw)			
18 (3.03kw)	16 (2.73kw)	10 (1.64kw)			
18 (2.84kw)	16 (2.56kw)	13 (2.10kw)			
18 (2.68kw)	16 (2.41kw)	16 (2.41kw)			

\*\*\*Above duty's(kW) is in the heating mode.\*\*\*

The above is an example only, for full combination tables covering up to 5 indoor units to 1 outdoor, please contact Cool Designs Technical Support.



## RAS – Auto Restart Function

The indoor unit is equipped with an automatic restart facility that allows the unit to restart, at the last set operating conditions, after a power failure. The operation will resume without warning three minutes after power is restored.

This feature is not set up when these systems are shipped from the factory, therefore it will need to be activated by the installing company.

Generally, the process is the same for all RAS products since approx. 2001 and is as follows:

### To initiate auto restart:


1. Turn the power on. Green On/Off light will flash.
2. Set the system to operate using the remote controller. Green On/Off light will be on constantly.
3. Press and hold down the temporary button for three seconds.
4. The indoor unit will beep three times to acknowledge set up. In most cases the green light changes to orange.
5. The system will continue to operate during this set up.
6. After set up the system may be stopped using the remote controller.

### To cancel auto restart:

1. The system is operating. Green On/Off light will be on constantly.
2. Stop the system operating using the remote controller. Green On/Off light will extinguish.
3. Press and hold down the temporary button for three seconds.
4. The indoor unit will beep three times to acknowledge cancellation.
5. The system will have stopped operating.

This feature cannot be set if the timer is in operation.

The louver will not swing, if it was previously set, when the system auto restarts.

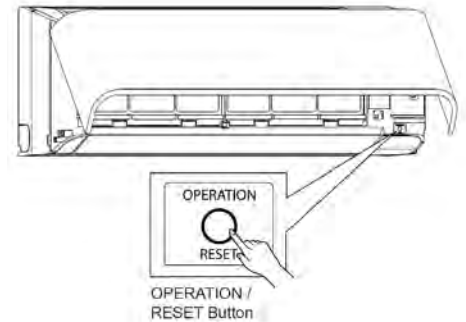





## Fault Codes – RAS “N” Series

**Do Not** turn off the power supply before reading the fault codes, doing so will clear the diagnostic memory. Caution must be taken when removing the access covers as high voltages are present.

**Fault codes** are displayed through the LEDs flashing at 5 times per second. Note, the green LED will flash once per second when the system is initially powered.

More specific codes may be obtained, while in the fault mode through the wireless controller

1. Press CHK to enter service mode
2. Navigate through TIMER ▲▼ buttons until all LEDs flash, accompanied by the internal buzzer – compare the displayed code with the table below
3. Press CLR button to clear the existing fault code (controller displays 7F)
4. Press ON/OFF button to exit service mode.

Initial code/display	Code	Description	
01 	0C	TA sensor open or short circuit	
	0d	TC sensor open or short circuit	
	11	Indoor fan motor problem	
	12	Indoor PCB problem	
01 	04	Indoor to outdoor communication (includes compressor thermostat)	
	05	Indoor to outdoor communication	
02 	14	Inverter low voltage or short circuit protection	
	16	Compressor position circuit	
	17	Compressor current detected during off-cycle	
	18	TE or TS sensor open or short circuit	
	19	Td sensor open or short circuit	
	1A	Outdoor fan motor problem	
	1b	TE sensor fault	
	1C	Compressor drive circuit	
	03 	07	Indoor to outdoor communication (includes compressor thermostat)
		08	Indoor heat exchanger changes temperature – but in wrong direction
1d		Compressor locked rotor current protection	
1E		Compressor - high discharge temperature	
1F		Compressor current remains too high – after current release	

## Mechanical Specifications - DI / SDI R410A Single Splits

Model	Pipe Sizes (")		Min/Max Pipe Sep. (m)	Max height separation (+/-) (m)	Pre-Charge (m)	Add charge (g/m)	Base charge (kg)	Dimensions (mm)	Weight (kg)				
	Liquid	Suction											
<b>Commercial Range</b>													
RAV-SM304ATP-E	1/4	3/8	2/20	30	15	20	0.8	550X780X290	33				
RAV-SM404ATP-E		1/2					5/30		1.4	39			
RAV-SM564ATP-E			1.1		40								
RAV-SM804ATP-E	3/8	5/8	5/50		20	40	1.7		890X900X320	44			
RAV-SM1104ATP-E							2.8	68					
RAV-SM1104AT8P-E							3.1						
RAV-SM1404ATP-E					2.8								
RAV-SM1404AT8P-E					3.1	99							
RAV-SM1603AT-E1					1/2	1 1/8	7.5/70	30		80	5.9	1540X900X320	134
RAV-SM2244AT8-E							5/100					1550X1010X370	142
RAV-SM2246AT8-E	7.5/70	1540X900X320	134										
RAV-SM2804AT8-E	5/100	1550X1010X370	142										
RAV-SM2806AT8-E	1/4	1/2	5/30	20	20	1.0	550X780X290	40					
RAV-SP404ATP-E			5/50			1.4		44					
RAV-SP564ATP-E	3/8	5/8	3/75	30	40	2.1	890X900X320	66					
RAV-SP804ATP-E						3.1		1340X900X320	93				
RAV-SP1104AT-E1									95				
RAV-SP1104AT8-E1				93									
RAV-SP1404AT-E1				95									
RAV-SP1404AT8-E1				3.1	1340X900X320	93							
RAV-SP1604AT8-E1						95							

## Performance & Electrical Specifications – DI/ SDI R410A Single Splits

Model	Capacity kW		Ambient Range °C		Phase	Power To	Soft Start	Max Run Current (A)	Suggested Fuse Size (A) #	Interconnect Cable
	Cool	Heat	Cool	Heat						
<b>Commercial Range</b>										
RAV-SM304ATP-E	2.50	3.40	46 to -15	24 to -15	1Ph + N	Outdoor	Yes	3.86	10	3C+E
RAV-SM404ATP-E	3.60	4.00		15 to -15				5.14		
RAV-SM564ATP-E	5.00	5.30		8.95				16		
RAV-SM804ATP-E	6.70	7.70		11.43				16		
RAV-SM1104ATP-E	10.00	11.20		15.18				20		
RAV-SM1104AT8P-E	10.00	11.20		3.67				10		
RAV-SM1404ATP-E	12.00	12.80		21.30				32		
RAV-SM1404AT8P-E	12.00	12.80		5.37				10		
RAV-SM1603AT-E	14.00	16.00		23.90				32		
RAV-SM2244AT8-E	20.00	22.40		46 to -20				15 to -20	3Ph + N	
RAV-SM2246AT8-E	19.00	22.40	52 to -15	15 to -27	18.0	25				
RAV-SM2804AT8-E	23.00	27.00	46 to -20	15 to -20	15.44	20				
RAV-SM2806AT8-E	22.50	27.00	52 to -15	15 to -27	23.0	25				
RAV-SP404ATP-E	3.60	4.00	43 to -15	15 to -15	1Ph + N	Outdoor	Yes	4.98	10	
RAV-SP564ATP-E	5.30	5.60	43 to -15	15 to -20				6.55	16	
RAV-SP804ATP-E	7.10	8.00						9.02		
RAV-SP1104AT-E	10.00	11.20						10.43		
RAV-SP1404AT-E	12.50	14.00	46 to -15	15 to -20				15.76	25	
RAV-SP1104AT8-E	10.00	11.20						3.72	10	
RAV-SP1404AT8-E	12.50	14.00						5.42	16	
RAV-SP1604AT8-E	14.00	16.00			6.66					

# Suggested fuse sizes are for guidance only, the electrical installation must be completed in-line with current electrical regulations, BS 7671:2018+A1, 2020 – 18<sup>th</sup> Edition, IET.



## Electrical Specifications - DI / SDI R410A Multi Splits

Model Outdoor	Twin Indoor	Triple Indoor	Quad Indoor	Phase	Power To	Suggested Fuse Size (A) #	Inter-Connecting Cable
<b>Commercial Range</b>							
RAV-SM564ATP-E	RAV-SM30*T(P)-E	N/A	N/A	1Ph-N	Outdoor	16	3C+E
RAV-SM80ATP-E	RAV-SM40*T(P)-E					16	
RAV-SM1104ATP-E1	RAV-SM56*T(P)-E	RAV-SM30*T(P)-E		20			
RAV-SM1104AT8P-E1	RAV-SM56*T(P)-E	RAV-SM30*T(P)-E		10			
RAV-SM1404ATP-E1	RAV-SM80*T(P)-E	RAV-SM40*T(P)-E	RAV-SM30*T(P)-E	1Ph-N		32	
RAV-SM1404AT8P-E	RAV-SM80*T(P)-E	RAV-SM40*T(P)-E	RAV-SM30*T(P)-E	3Ph+N		10	
RAV-SM1603AT-E1	RAV-SM80*T(P)-E	RAV-SM56*T(P)-E	RAV-SM40*T(P)-E	1Ph-N		32	
RAV-SM2244AT8-E	RAV-SM110*T(P)-E	RAV-SM80*T(P)-E	RAV-SM56*T(P)-E	3Ph-N		16	
RAV-SM2246AT8-E						25	
RAV-SM2804AT8-E	RAV-SM140*T(P)-E	RAV-SM80*T(P)-E	RAV-SM80*T(P)-E	3Ph-N		20	
RAV-SM2806AT8-E						25	
RAV-SP564ATP-E	RAV-SM30*T(P)-E	N/A	N/A	1Ph+N		16	
RAV-SP804ATP-E	RAV-SM40*T(P)-E					16	
RAV-SP1104AT-E1	RAV-SM56*T(P)-E	RAV-SM30*T(P)-E		16			
RAV-SP1104AT8-E1	RAV-SM56*T(P)-E	RAV-SM30*T(P)-E		10			
RAV-SP1404AT-E1	RAV-SM80*T(P)-E	RAV-SM40*T(P)-E	RAV-SM30*T(P)-E	1Ph-N		25	
RAV-SP1404AT8-E1	RAV-SM80*T(P)-E	RAV-SM40*T(P)-E	RAV-SM30*T(P)-E	3Ph-N	16		
RAV-SP1604AT8-E1	RAV-SM80*T(P)-E	RAV-SM56*T(P)-E	RAV-SM40*T(P)-E	3Ph-N	16		

# Suggested fuse sizes are for guidance only, the electrical installation must be completed in-line with current electrical regulations, BS 7671:2018+A1, 2020 – 18<sup>th</sup> Edition, IET.

NOTES:

### Acoustic Data – DI/SDI Indoor Units

Model Indoor	High dB(A)	Med dB(A)	Low dB(A)	Model Indoor	High dB(A)	Med dB(A)	Low dB(A)
<b>Commercial Range</b>							
RAV-SM307KRTP-E	56	52	44	RAV-SM406BTP-E	48	44	40
RAV-SM407KRTP-E	60	55	45	RAV-SM566BT-E1	48	44	40
RAV-SM566KRT-E	57	54	51	RAV-SM806BT-E1	49	45	41
RAV-SM806KRT-E	62	56	51	RAV-SM1106BT-E1	55	51	48
RAV-SM564UTP-E	47	44	43	RAV-SM1406BT-E	55	51	48
RAV-SM804UTP-E	50	46	43	RAV-SM1606BT-E	55	51	48
RAV-SM1104UTP-E	58	53	48	RAV-SM408CTP-E	52	50	43
RAV-SM1404UTP-E	59	53	49	RAV-SM568CTP-E	52	50	43
RAV-SM1604UTP-E	60	55	51	RAV-SM808CTP-E	56	51	44
RAV-SM304MUT-E	55	51	46	RAV-SM1108CTP-E	59	53	47
RAV-SM404MUT-E	55	51	46	RAV-SM1408CTP-E	61	56	50
RAV-SM564MUT-E	58	54	49	RAV-SM1608CTP-E	61	57	51
RAV-SM304SDT-E	45	43	41	RAV-SM2244DTP-E	79	75	71
RAV-SM404SDT-E	45	43	41	RAV-SM2804DTP-E	81	77	73
RAV-SM564SDT-E	48	46	43	MMF-AP0186H1-E*	64	60	55
RAV-SM406BTP-E (v)	48	44	40	MMF-AP0246H1-E*	67	63	57
RAV-SM566BTP-E (v)	48	44	40	MMF-AP0366H1-E*	69	64	59
RAV-SM806BTP-E (v)	49	45	41	MMF-AP0486H1-E*	72	67	62
RAV-SM1106BTP-E (v)	55	51	48	MMF-AP0566H1-E*	72	67	62
RAV-SM1406BTP-E (v)	55	51	48	MML-AP0094BH1-E*	51	49	47
RAV-SM1606BTP-E (v)	55	51	48	MML-AP0124BH1-E*	51	49	47
(v) = Vertical Mount. * Converted VRF Indoor Units Note: Measured in Power Db(A)				MML-AP0184BH1-E*	51	49	47
				MML-AP0244BH1-E*	57	52	48

### Acoustic Data – DI/SDI Outdoor Units.

Model Outdoor	Cooling dB(A)	Heating dB(A)	Model Outdoor	Cooling dB(A)	Heating dB(A)
SM304ATP-E	61	62	SM1603AT-E1	68	70
SM404ATP-E	64	65	SM2244AT8-E	72	74
SM564ATP-E	63	65	SM2804AT8-E	74	75
SM804ATP-E	65	69	SM2246AT8-E	76	76
SM1104ATP(8)-E	70	71	SM2806AT8-E	78	80
SM1404ATP(8)-E	70	71			
SP404ATP-E	62	64	SP1104AT(8)-E1	66	67
SP564ATP-E	63	64	SP1404AT(8)-E1	68	69
SP804ATP-E	64	65	SP1604AT8-E	68	70
NOTE: Measured in Power Db(A)					

## Mechanical & Electrical Data - Air-to-Air Heat Exchangers

Model (Standard)	Power Consumption Low/High (W)		(L/H) Air Volume (m <sup>3</sup> /hr)		Static Pressure (Pa)		Specific Fan Power (W/l/s)			Dimensions H x W* x D	Weight (kg)	Duct (mm) Supply - Return		Suggested Fuse Size (A) 1Ph+N#	Suggested Fuse Size(A) +Heater#
	Low	High	Low	High	Low	High	Extra	High	Low						
VN-M150HE	42	78	110	150	47	102	0.93	0.80	0.78	900 x 900 x 290	36	100x2	100x2	3	10
VN-M250HE	52	138	155	250	28	98	0.99	0.79	0.69	900 x 900 x 290	36	150x2	150x2	3	10
VN-M350HE	82	182	210	350	65	125	0.94	0.75	0.76	900 x 900 x 290	38	150x2	150x2	6	10
VN-M500HE	128	238	390	500	62	150	0.86	0.70	0.66	1140 x 1140 x 350	53	200x2	200x2	6	16
VN-M650HE	178	290	520	650	61	107	0.81	0.72	0.66	1140 x 1140 x 350	53	200x2	200x2	6	16
VN-M800HE	286	383	700	800	76	158	0.86	0.80	0.77	1189 x 1189 x 400	70	250x2	250x2	6	16
VN-M1000HE1	190	390	700	1000	70	105	1.4	1.2	1.0	1189 x 1189 x 400	62	250x2	250x2	10	16
VN-M1500HE1	320	640	1200	1500	80	140	1.5	1.4	1.0	1189 x 1189 x 810	126	250x4	730x2	10	16
VN-M2000HE1	380	780	1400	2000	70	105	1.4	1.2	1.0	1189 x 1189 x 810	126	250x4	730x2	10	20

# Suggested fuse sizes are for guidance only, the electrical installation must be completed in-line with current electrical regulations, BS 7671:2018+A1, 2020 – 18<sup>th</sup> Edition, IET

\* Width dimension excludes 200mm electrical box

## Mechanical & Electrical Data - Air-to-Air Heat Exchangers + DX Coil

Model MMD (DX Coil)	Capacity (kW)		Power Consumption Low/High (W)			(L/H) Air Volume (m <sup>3</sup> /hr)			Static Pressure (Pa)			Specific Fan Power (W/l/s)			Dimensions H x W* x D	Weight (kg)	Duct (mm) Supply - Return		Suggested Fuse Size (A) 1Ph+N#	Suggested Fuse Size (A) + Heater#	
	Cool	Heat	Low	High	Max	Low	High	Max	Low	High	Max	Extra	High	Low							
VN502HEX1E	4.10	5.53	235	-	300	440	-	500	115	-	120	1.08	1.01	0.96	430 x 1140 x 1690	84	200X2	-	200X2	3	10
VN802HEX1E	6.56	8.61	335	-	505	640	-	800	105	-	120	1.14	1.05	0.94	430 x 1189 x 1739	100	250X2	-	250X2	3	10
VN1002HEX1E	8.25	10.90	485	-	550	820	-	950	105	-	135	1.04	1.03	1.06	430 x 1189 x 1739	101	250X2	-	250X2	6	10

# Suggested fuse sizes are for guidance only, the electrical installation must be completed in-line with current electrical regulations, BS 7671:2018+A1, 2020 – 18<sup>th</sup> Edition, IET

\* Width dimension excludes 200mm electrical box

## Mechanical & Electrical Data - Air-to-Air Heat Exchangers + DX Coil & Humidifier

Model MMD (DX Coil & Humidifier)	Capacity (kW)		Humidifier (kg/hr)	Power Consumption (w)		Air Volume (m <sup>3</sup> /hr)		Static Pressure (Pa)	Specific Fan Power (W/l/s)			Dimensions HxW*xD (mm)	Weight (kg)	Duct (mm) Supply - Return		Suggested Fuse Size (A) 1Ph+N#	Suggested Fuse Size (A) +Heater#
	Cool	Heat		Low	High	Low	High		Extra	High	Low						
VNK502HEXE	4.10	5.53	3.0	240	305	440	500	85 - 95	1.10	1.03	0.98	430x1140x1690	91	200 x 2	200 x 2	6	10
VNK802HEXE	6.56	8.61	5.0	350	530	640	800	85 - 105	1.19	1.09	0.98	430x1189x1739	111	250 x 2	250 x 2	6	10
VNK1002HEXE	8.25	10.90	6.0	520	575	820	950	90 - 115	1.09	1.07	1.14	430x1189x1739	112	250 x 2	250 x 2	6	10

# Suggested fuse sizes are for guidance only, the electrical installation must be completed in-line with current electrical regulations, BS 7671:2018+A1, 2020 – 18<sup>th</sup> Edition, IET.

\* Width dimension excludes 200mm electrical box

## Digital/Super Digital R410A Replacement Technology Refrigerant Pipe Sizing

Existing piping connection with different diameter gas and liquid line is possible using the criteria detailed below

Liquid Pipe Size in" or mm		1/4 - 6.4 (STD)				3/8 - 9.5 (1-size larger)			
Gas Pipe Size in" or mm		3/8 - 9.5 (STD)		1/2 - 12.7 (1-size larger)		3/8 - 9.5 (STD)		1/2 - 12.7 (1-size larger)	
Maximum Pipe Distance		Length	Pre-charged	Length	Pre-charged	Length	Pre-charged	Length	Pre-charged
		(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)
RAV-DI Series 4	SM30*	20	15	20	15	13	7.5	13	7.5

Liquid Pipe Size in" or mm		1/4 - 6.4 (STD)				3/8 - 9.5 (1-size larger)					
Gas Pipe Size in" or mm		3/8 - 9.5 (1-size smaller)		1/2 - 12.7 (STD)		5/8 - 15.9 (1-size larger)		1/2 - 12.7 (STD)		5/8 - 15.9 (1-size larger)	
Maximum Pipe Distance		Length	Pre-charged	Length	Pre-charged	Length	Pre-charged	Length	Pre-charged	Length	Pre-charged
		(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)
RAV-DI Series 4	SM40*	20	15	20	15	20	15	13	7.5	13	7.5
	SM56*			30	20	30	20	20	10	20	10
RAV-SDI Series 4	SP40*	30	20	30	20	30	20	20	10	20	10
	SP56*			50	20	50	20	20	10	20	10

Liquid Pipe Size in" or mm		1/4 - 6.4 (1-size smaller)				3/8 - 9.5 (STD)				1/2 - 12.7 (1-size larger)					
Gas Pipe Size in" or mm		1/2 - 12.7 (1-size smaller)		5/8 - 15.9 (STD)		1/2 - 12.7 (1-size smaller)		5/8 - 15.9 (STD)		3/4 - 19.1 (1-size larger)		5/8 - 15.9 (STD)		3/4 - 19.1 (1-size larger)	
Maximum Pipe Distance		Length	Pre-charged	Length	Pre-charged	Length	Pre-charged	Length	Pre-charged	Length	Pre-charged	Length	Pre-charged	Length	Pre-charged
		(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)
RAV-DI Series 4	SM80*	20	20	20	20	30	20	30	20	30	20				
	SM110*							50	30	50	30	25	15	25	15
	SM140*							50	30	50	30	25	15	25	15
RAV-DI Series 3	SM160*							50	30	50	30	25	15	25	15
	SP80*	30	20	30	20	50	30	50	30	50	30				
RAV-SDI Series 4	SP110*							75	30	75	30	25	15	25	15
	SP140*							75	30	75	30	25	15	25	15

Liquid Pipe Size in" or mm		1/2 - 12.7 (STD)				5/8 - 15.9 (1-size larger)			
Gas Pipe Size in" or mm		7/8 - 22.2 (1-size smaller)		1 1/8 - 28.6 (STD)		7/8 - 22.2 (1-size smaller)		1 1/8 - 28.6 (STD)	
Maximum Pipe Distance		Length	Pre-charged	Length	Pre-charged	Length	Pre-charged	Length	Pre-charged
		(m)	(m)	(m)	(m)	(m)	(m)	(m)	(m)
RAV-DI Series 4	SM224*	70	30	70	30	50	20	50	20
	SM280*	70	30	70	30	50	20	50	20

Smaller Pipe Sizes (Performance capacity is reduced due to the effect of gas pipe size being smaller than standard connection)

Normal Pipe Sizes


Larger Pipe Sizes

Not Compatible

Refrigerant Charge Rate Grams per Metre	
1/4	20
3/8	40
1/2	80
5/8	120

Common Refrigerants for Existing Plant
R12
R134A
R22
R404A
R407C
R417A

## Digital / Super Digital Inverter Twin Splits

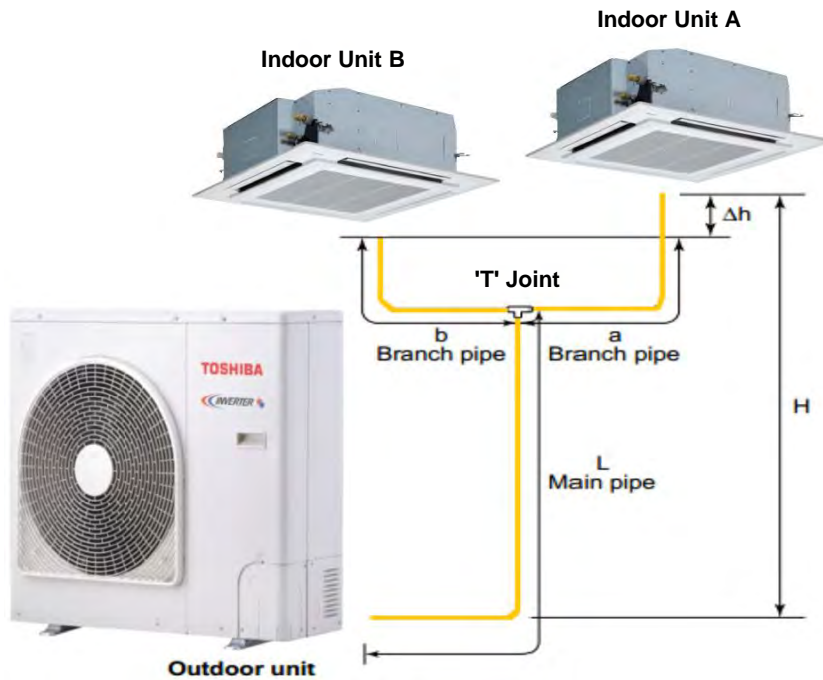

### Pipe Specifications

Model (RAV-)	Allowable Piping Length (m)			Height Difference (m)		Number of Bent Portions Maximum or Less
	*Total Length (L+a or L+b) Maximum (m)	†Branch Piping a or b to Furthest Indoor Maximum (m)	‡Subtractive Piping Length a-b or b-a Maximum (m)	Outdoor to Indoor (H) Maximum (+/-) (m)	Indoor Unit Height Difference (Δh) Maximum (m)	
SM804ATP-E	30	10	5	30	0.5	10
SM1104ATP-E SM1404ATP-E SM1603AT-E SP804ATP-E SP1104AT(8)-E1 SP1404AT(8)-E1 SP1604AT8-E1	50	15	10	30	0.5	10
SM2244/6AT8-E SM2804/6AT8-E	70 (4 Series) 100 (6 Series)	20	10	30	0.5	10

• Data to be ratified by manufacturer.

\*Total length of pipe between furthest indoor and outdoor unit.

†Maximum distance of Branch pipe from main pipe distributor to furthest indoor unit.

‡Maximum subtractive distance between pipe branches. Example: -

#### Example 1

Installed length main pipe L to distributor=38m  
 Installed length branch a=12m  
 Installed length branch b=10m

#### Example 2

Installed length main pipe L to distributor=40m  
 Installed length branch a=14m  
 Installed length branch b=2m

#### Example 3

Installed length main pipe L to distributor=50m  
 Installed length branch a=12m  
 Installed length branch b=10m

#### Example 4

Installed length main pipe L to distributor=60m  
 Installed length branch a=14m  
 Installed length branch b=2m

Example 1 ✓	
Total pipe length L + a	38 + 12 = 50m ✓
Subtractive pipe length a - b	12 - 10 = 2m ✓
Example 2 ✗	
Total pipe length L + a	40 + 14 = 64m ✗
Subtractive pipe length a - b	14 - 2 = 12m ✗

Example 3 ✓	
Total pipe length L + a	50 + 12 = 62m ✓
Subtractive pipe length a - b	12 - 10 = 2m ✓
Example 4 ✗	
Total pipe length L + a	60 + 14 = 74m ✗
Subtractive pipe length a - b	14 - 2 = 12m ✗

### Additional Charge

Model (RAV-)	Main Pipes			Branch Pipes		
	Sizes (") Gas/Liquid	Pre-charge (m) Factor	Add Amount (kg/m) – [ $\alpha$ ]	Sizes (") Gas/Liquid	Pre-charge (m) Factor	Add Amount (kg/m) – [ $\beta$ ]
SM804ATP-E	5/8 - 3/8	18	0.040	1/2 - 1/4	2	0.020
SP804ATP-E						
SM1104ATP-E	5/8 - 3/8	18	0.040	1/2 - 1/4	2	0.020
SP1104AT(8)-E1						
SM1404ATP-E1	5/8 - 3/8	18	0.040	5/8 - 3/8	2	0.040
SP1404AT(8)-E1						
SM1603AT-E	5/8 - 3/8	28	0.040	5/8 - 3/8	4	0.040
SP1604AT8-E1						
SM2244/6AT8-E	1 1/8 - 1/2	28	0.080	5/8 - 3/8	4	0.040
SM2804/6AT8-E						

• Data to be ratified by manufacturer.

Gas calculation - [Main pipe] (L-18) x $\alpha$ + [Branch Pipe] (a+b - 4) x $\beta$ = additional charge
Gas calculation - [Main pipe] (L-28) x $\alpha$ + [Branch Pipe] (a+b - 4) x $\beta$ = additional charge

Example 1

Installed length main pipe L to distributor=38m  
 Installed length branch a=12m  
 Installed length branch b=10m


Example 1 using	SM1104ATP-E			
Total pipe length	L - 18 x $\alpha$	38 - 18	=20 x 0.040=	0.80 +
Branch pipe length	a + b x $\beta$	12 + 10 - 4	=18 x 0.020=	0.36
			Add Amount	1.16 kg

Example 1 using	SM2804AT8-E			
Total pipe length	L - 28 x $\alpha$	38 - 28	=10 x 0.080=	0.80 +
Branch pipe length	a + b x $\beta$	12 + 10 - 4	=18 x 0.040=	0.72
			Add Amount	1.52 kg

NOTES:



## Digital / Super Digital Inverter Triple Splits

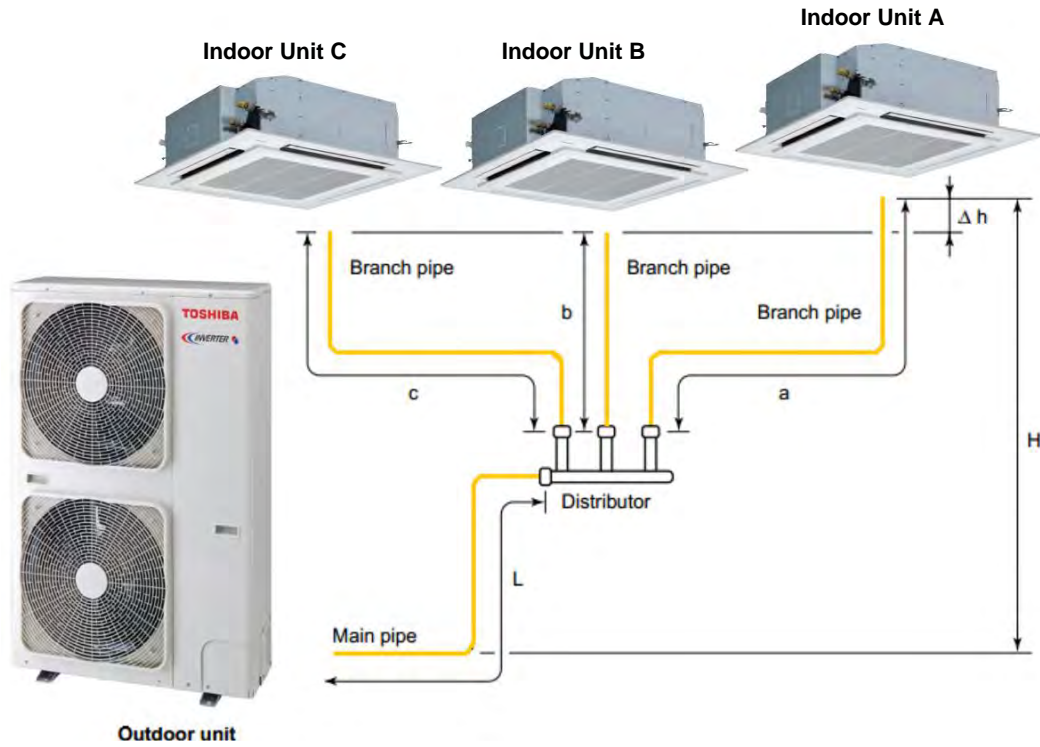

### Pipe Specifications

Model (RAV-)	Allowable Piping Lengths (m)			Height Difference (m)		Number of Bent portions Maximum or Less
	*Total Length La + Lb La + Lc Maximum (m)	†Branch Piping La, Lb or Lc to Furthest Indoor Maximum (m)	‡Subtractive Piping Length Lb - La Lb - Lc Maximum (m)	Outdoor to Indoor (H) Maximum (+/-) (m)	Indoor Unit Height Difference (Δh) Maximum (m)	
SM1603AT-E	50	15	10	30	0.5	10
SP1604AT8-E1						
SM2244/6AT8-E	70 (4 Series)	20	10	30	0.5	10
SM2804/6AT8-E	100 (6 Series)					

• Data to be ratified by manufacturer.

\*Total length of pipe between furthest indoor and outdoor unit.

†Maximum distance of Branch pipe from main pipe distributor to furthest indoor unit.

‡Maximum subtractive distance between pipe branches. Example: -

#### Example 1

Installed length main pipe L to distributor=38m  
Installed length branch =12m  
Installed length branch b=10m Installed length branch c=12m

#### Example 2

Installed length main pipe L to distributor=40m  
Installed length branch a=15m  
Installed length branch b=4m Installed length branch c=12m

#### Example 3

Installed length main pipe L to distributor=40m  
Installed length branch a=12m  
Installed length branch b=12m Installed length branch c=10m

#### Example 4

Installed length main pipe L to distributor=50m  
Installed length branch a=20m  
Installed length branch b =3m  
Installed length branch c = 5m

Example 1 ✓			
Total pipe length L + a	38	+ 12=	50m ✓
Subtractive pipe length a - b	12	- 10=	2m ✓
Subtractive pipe length c - b	12	- 10=	2m ✓
Example 2 ✗			
Total pipe length L + a	40	+ 15=	55m ✗
Subtractive pipe length a - b	15	- 4=	11m ✗
Subtractive pipe length c - b	12	- 4=	8m ✓

Example 3 ✓			
Total pipe length L + a	40	+ 12=	52m ✓
Subtractive pipe length a - b	12	- 12=	0m ✓
Subtractive pipe length c - b	12	- 10=	2m ✓
Example 4 ✗			
Total pipe length L + a	50	+ 20=	70m ✓
Subtractive pipe length a - b	20	- 3=	15m ✗
Subtractive pipe length c - b	5	- 3=	2m ✓

### Additional Charge

Model (RAV-)	Main Pipes			Branch Pipes		
	Sizes (") Gas/Liquid	Pre-charge (m) Factor	Add Amount (kg/m) - [ $\alpha$ ]	Sizes (") Gas/Liquid	Pre-charge (m) Factor	Add Amount (g/m) - [ $\beta$ ]
SM1603AT-E	5/8 – 3/8	28	0.040	5/8 – 3/8	6	0.040
SP1604AT8-E1						
SM2244/6AT8-E	1 1/8 – 1/2	28	0.080	5/8 – 3/8	6	0.040
SM2804/6AT8-E						

• Data to be ratified by manufacturer.

Gas calculation - [Main pipe] (L-28) x $\alpha$ + [Branch Pipe] (a+b+c - 6) x $\beta$ = additional charge
Gas calculation - [Main pipe] (L-28) x $\alpha$ + [Branch Pipe] (a+b+c - 6) x $\beta$ = additional charge

#### Example 1

Installed length main pipe L to distributor=38m  
 Installed length branch a=12m  
 Installed length branch b=10m  
 Installed length branch c=12m

Example 1 above using SM1603AT-E


Total pipe length L - 28 x  $\alpha$  38 - 28 = 10 x 0.040 = 0.40 +  
 Branch pipe length a + b + c x  $\beta$  12+10+ 12- 6 = 28 x 0.040 = 1.12  
 Add Amount 1.52 kg

Example 1 above using SM2804AT8-E

Total pipe length L - 28 x  $\alpha$  38 - 18 = 20 x 0.080 =  
 Branch pipe length a + b + c x  $\beta$  12+10+ 12- 6 = 28 x 0.040 =  
 Add Amount 1.92 kg

### NOTES:

## Digital Inverter Quad Splits

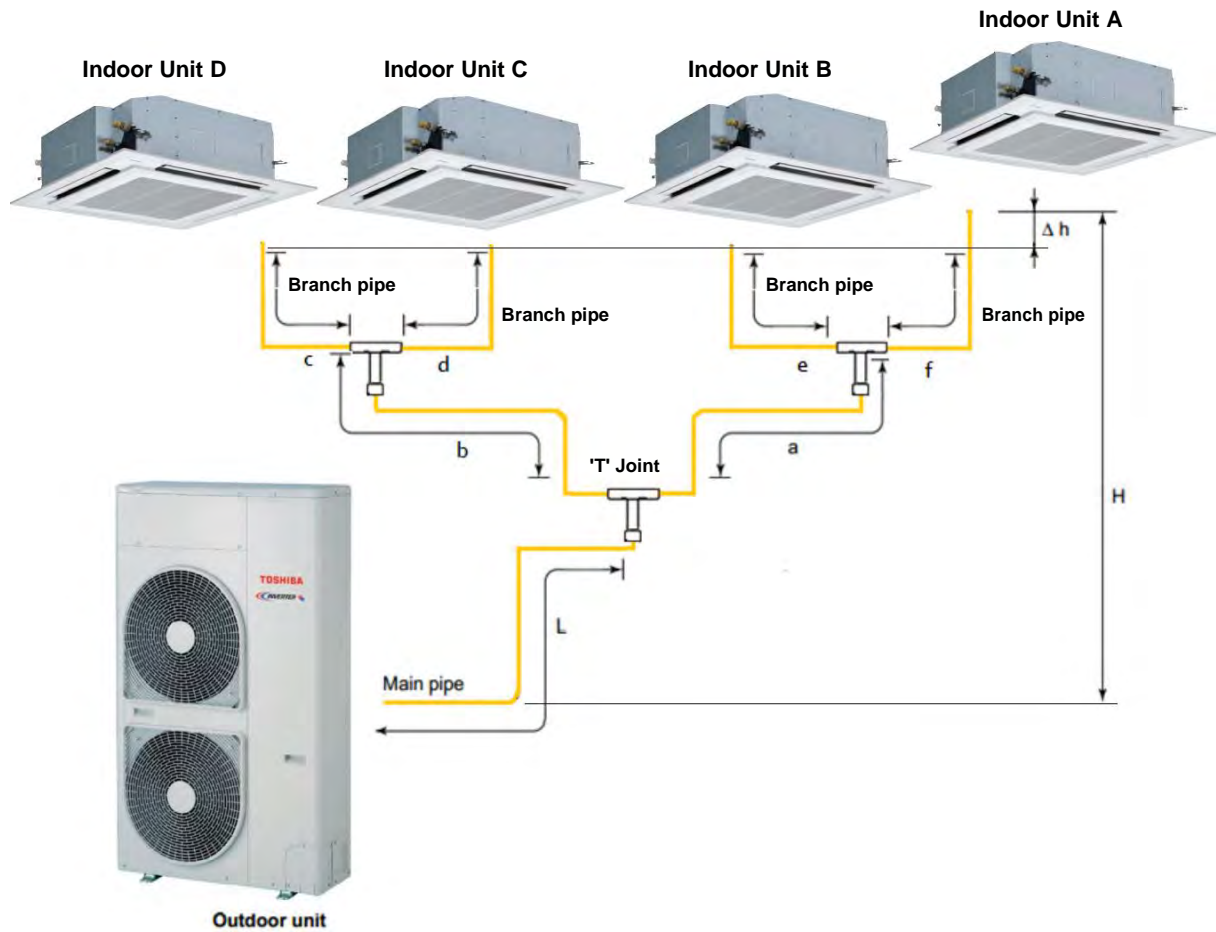

### Pipe Specifications

Model (RAV-)	Allowable Piping Lengths (m)			Height Difference (m)			Number of Bent portions Maximum or Less
	*Total Length (L+b+c) or (L+b+d) or (L+a+e) or (L+a+f) Maximum (m)	†Branch Piping c, d, e & f to Furthest Indoor Maximum (m)	‡Branch Piping b+c b+d a+e a+f Maximum (m)	‡Subtractive Branch Piping (c+b) - (d+b) (c+b) - (e+a) (c+b) - (f+a) (d+b) - (e+a) (d+b) - (f+a) (e+a) - (f+a) Maximum (m)	Outdoor to Indoor (H) Maximum (+/-) (m)	Indoor unit height difference (Δh) Maximum (m)	
SM2244/6AT8-E	70 (4 Series)	15	20	6	30	0.5	10
SM2804/6AT8-E	100 (6 Series)						

• Data to be ratified by manufacturer.

\*Total length of pipe between furthest indoor and outdoor unit.

†Maximum distance of Branch pipe from main pipe distributor to furthest indoor unit.

‡Maximum pipe distance between Branched pairs

‡Maximum subtractive distance between pipe branches. Example: -

#### Example 1

Installed length main pipe L to distributor=20m  
 Installed length branch b=10m  
 Installed length branch c=5m  
 Installed length branch d=5m  
 Installed length branch a=10m  
 Installed length branch e=5m  
 Installed length branch f=5m

#### Example 1 ✓

Total pipe length L + b + c	20 + 10 + 5 =	35m✓
Branch length b + d	10 + 5 =	15m✓
Branch length a + e	10 + 5 =	15m✓
Branch length a + f	10 + 5 =	15m✓
Subtractive pipe length c+b - d+b	5+10 - 5+10 =	0m✓
Subtractive pipe length c+b - e+a	5+10 - 5+10 =	0m✓
Subtractive pipe length c+b - f+a	5+10 - 5+10 =	0m✓
Subtractive pipe length d+b - e+a	5+10 - 5+10 =	0m✓
Subtractive pipe length d+b - f+a	5+10 - 5+10 =	0m✓
Subtractive pipe length e+a - f+a	5+10 - 5+10 =	0m✓

**Example 2**

Installed length main pipe L to distributor=50m  
 Installed length branch b=15m  
 Installed length branch c=10m  
 Installed length branch d=6m  
 Installed length branch a=15m  
 Installed length branch e=5m  
 Installed length branch f=10m

Example 2 ✖			
Total pipe length L + b + c	50+ 15+ 10	=	75m✖
Branch length b + c	15+ 10	=	25m✖
Branch length b + d	15+ 6	=	21m✖
Branch length a + e	15+ 5	=	20m✓
Branch length a + f	15+ 10	=	25m✖
Subtractive pipe length c+b - d+b	10+ 15- 6+ 15	=	4m✓
Subtractive pipe length c+b - e+a	10+ 15- 5+ 15	=	5m✓
Subtractive pipe length c+b - f+a	10+ 15- 10+ 15	=	0m✓
Subtractive pipe length d+b - e+a	6+ 15- 5+ 15	=	1m✓
Subtractive pipe length d+b - f+a	6+ 15- 10+ 15	=	1m✓
Subtractive pipe length e+a - f+a	6+ 15- 10+ 15	=	1m✓

**Additional Charge**

Model (RAV-)	Main Pipes Pre-charge (m)			Branch pipes				
	Sizes (") Gas/Liquid	Factor	Add amount (kg/m) – [α]	Sizes (") Gas/Liquid	Pre-charge (m) Factor	Add amount (g/m) – [β]	Sizes (") Gas/Liquid	Add amount (g/m) – [γ]
SM2244/6AT8-E	1 1/8 – 1/2	28	0.080	5/8 – 3/8	4	0.040	1/2 – 1/4	0.020
SM2804/6AT8-E	1 1/8 – 1/2	28	0.080	5/8 – 3/8	4	0.040	5/8 – 3/8	0.040

• Data to be ratified by manufacturer.


Gas calculation - [Main pipe] (L-28) x α + [Branch Pipe] (a + b - 4) x β + (c+d+e+f) x γ = additional charge

**Example 1**

Installed length main pipe L to distributor=20m  
 Installed length branch b=10m  
 Installed length branch c=5m  
 Installed length branch d=5m  
 Installed length branch a=10m  
 Installed length branch e=5m  
 Installed length branch f=5m

Example 1 using SM2804AT8-E			
Total pipe length	L - 28 x α	20 - 28	= -8 x 0.080 = -0.64 +
Branch pipe length	a + b - 4 x β	10+10- 4	= 16 x 0.040 = 0.64 +
Branch pipe length	c + d + e + f x γ	5+5+5+5	= 20 x 0.040 = 0.80
			Add Amount 0.80 kg

**Digital / Super Digital Multi Split System Wiring Schematic**

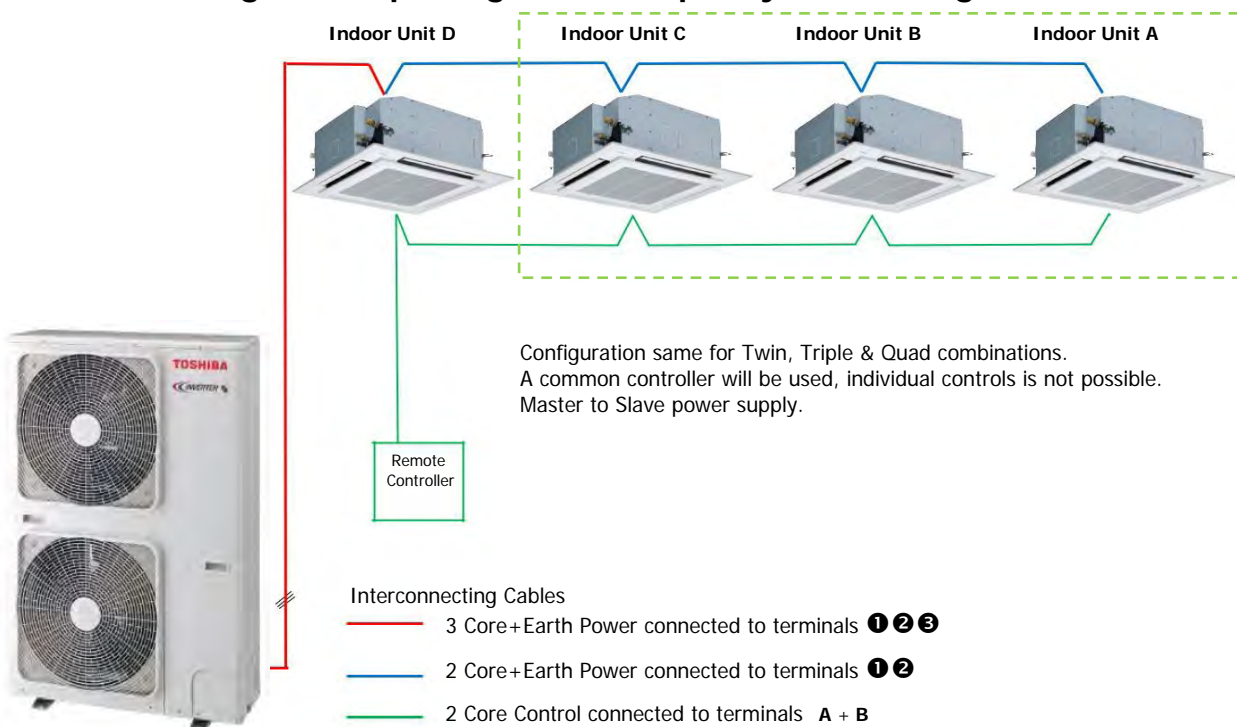

## VRF System Make Up Charts

### Mini Heat Pump – MCY

Model Reference	Duty HP	Cooling Capacity kW	Heating Capacity kW	Outdoor Unit Combination											Max. Indoor Units	Diversity %	
				0401	0501	0601	0806	1006	1206	1406	1606	1806	2006	2206			
MHP0404HS(8)-E	4	12.1	12.5	1												8	80 - 130
MHP0504HS(8)-E	5	14.0	16.0		1											10	
MHP0604HS(8)-E	6	15.5	18.0			1										13	
MHP0406HT-E	4	12.1	12.55	1												8	
MHP0506HT-E	5	14.0	16.0		1											10	
MHP0806HS8-E	8	22.4	25.0 <sup>#</sup>				1									12	
MHP1006HS8-E	10	28.0	31.0 <sup>#</sup>					1								16	

**Note:** - Mini VRF are *NOT* Modular # - Maximum Heating

### SMMSu Heat Pump - MMY

Model Reference	Duty HP	Cooling Capacity kW	Heating Capacity kW	Outdoor Unit Combination									Max. Indoor Units	Diversity %	
				0801	1001	1201	1401	1601	1801	2001	2201	2401			
MUP0801HT8P-E	8	22.4	25.0	1										18	50 – 135*1
MUP1001HT8P-E	10	28.0	31.5		1									22	
MUP1201HT8P-E	12	33.5	37.5			1								27	
MAP1406HT8P-E	14	40.0	45.0				1							31	
MUP1601HT8P-E	16	45.0	50.0					1						36	
MUP1801HT8P-E	18	50.4	56.0						1					40	
MUP2001HT8P-E	20	56.0	63.0							1				45	
MUP2201HT8P-E	22	61.5	69.0								1			49	
MUP2401HT8P-E	24	67.0	70.0									1		54	
UP2611HT8P-E	26	73.5	82.5			1	1							58	
UP2811HT8P-E	28	80.0	90				2							63	
UP3011HT8P-E	30	83.9	93.5			1			1					64	
UP3211HT8P-E	32	89.5	100.5			1				1				65	
UP3411HT8P-E	34	96.0	108.0				1			1				66	
UP3611HT8P-E	36	100.5	107.5			1						1		67	
UP3811HT8P-E	38	107.0	115.0				1						1	68	
UP4011HT8P-E	40	112.0	126.0							2				69	
UP4211HT8P-E	42	117.4	126.0						1				1	70	
UP4411HT8P-E	44	123.0	133.0							1			1	71	
UP4611HT8P-E	46	128.5	139.0								1	1		72	
UP4811HT8P-E	48	134.0	140.0									2		73	

SMMSu Heat Pump – MMY (Cont.)

Model Reference	Duty HP	Cooling Capacity kW	Heating Capacity kW	Outdoor Unit Combination								Max. Indoor Units	Diversity %	
				0801	1001	1201	1401	1601	1801	2001	2201			2401
UP5011HT8P-E	50	140.5	152.5			1	1					1	74	50 – 135*1
UP5211HT8P-E	52	147.0	160.0				2					1	75	
UP5411HT8P-E	54	152.0	171.0				1			2			76	
UP5611HT8P-E	56	156.5	170.5			1				1	1		77	
UP5811HT8P-E	58	163.0	178.0				1			1		1	78	
UP6011HT8P-E	60	167.5	177.5			1						2	79	
UP6211HT8P-E	62	174.0	185.0				1					2	80	
UP6411HT8P-E	64	179.0	196.0							2		1	81	
UP6611HT8P-E	66	184.5	202.0							1	1	1	82	
UP6811HT8P-E	68	190.0	203.0							1		2	83	
UP7011HT8P-E	70	195.5	209.0								1	2	84	
UP7211HT8P-E	72	201.0	210.0									3	85	
UP7411HT8P-E	74	207.5	222.5			1	1					2	86	
UP7611HT8P-E	76	214.0	230.0				2					2	87	
UP7811HT8P-E	78	219.0	241.0				1			2		1	88	
UP8011HT8P-E	80	223.5	240.5			1				1		2	90	
UP8211HT8P-E	82	230.0	248.0				1			1		2	92	
UP8411HT8P-E	84	234.5	247.5			1						3	94	
UP8611HT8P-E	86	241.0	255.0				1					3	96	
UP8811HT8P-E	88	246.0	266.0							2		2	98	
UP9011HT8P-E	90	251.5	272.0							1	1	2	100	
UP9211HT8P-E	92	257.0	273.0							1		3	102	
UP9411HT8P-E	94	262.5	279.0								1	3	104	
UP9611HT8P-E	96	268.0	280.0									4	106	
UP9811HT8P-E	98	274.5	292.5			1	1					3	108	
UP10011HT8P-E	100	281.0	30.0				2					3	110	
UP10211HT8P-E	102	286.0	311.0				1			2		2	112	
UP10411HT8P-E	104	290.5	310.5			1				1		3	114	
UP10611HT8P-E	106	297.0	318.0				1			1		3	116	
UP10811HT8P-E	108	301.5	317.5			1						4	118	
UP11011HT8P-E	110	308.0	325.0				1					4	120	
UP11211HT8P-E	112	313.0	336.0							2		3	122	
UP11411HT8P-E	114	318.5	342.0							1	1	3	124	
UP11611HT8P-E	116	324.0	343.0							1		4	126	
UP11811HT8P-E	118	329.5	349.0								1	4	128	
UP12011HT8P-E	120	335.0	350.0									5	128	



**SMMS<sub>e</sub> Heat Pump – MMY**

Model Reference	Duty HP	Cooling Capacity kW	Heating Capacity kW	Outdoor Unit Combination										Max. Indoor Units	Diversity %		
				0401	0501	0601	0806	1006	1206	1406	1606	1806	2006			2206	
MAP0806HT8P-E	8	22.4	25.0				1									18	50 – 135%
MAP1006HT8P-E	10	28.0	31.5					1								22	
MAP1206HT8P-E	12	33.5	37.5						1							27	
MAP1406HT8P-E	14	40.0	45.0							1						31	
MAP1606HT8P-E	16	45.0	50.0								1				1	36	
MAP1806HT8P-E	18	50.4	56.0									1				40	
MAP2006HT8P-E	20	56.0	63.0										1			45	
MAP2206HT8P-E	22	61.5	64.0											1		49	
AP2416HT8P-E	24	67.0	75.0						2							54	
AP2616HT8P-E	26	73.5	82.5						1	1						58	
AP2816HT8P-E	28	78.5	87.5						1		1					63	
AP3016HT8P-E	30	85.0	95.0							1	1					64	
AP3216HT8P-E	32	90.0	100.0								2						
AP3416HT9P-E	34	95.4	106.0								1	1					
AP3616HT8P-E	36	101.0	113.0								1		1				
AP3816HT8P-E	38	106.5	114.0								1				1		
AP4016HT8P-E	40	112.0	126.0										2				
AP4216HT8P-E	42	117.5	127.0										1	1			
AP4416HT8P-E	44	123.0	128.0												2		
AP4616HT8P-E	46	130.0	145.0							1	2						
AP4816HT8P-E	48	135.0	150.0								3						
AP5016HT8P-E	50	140.4	156.0								2	1					
AP5216HT8P-E	52	146.0	163.0								2		1				
AP5416HT8P-E	54	151.5	164.0								2		1				
AP5616HT8P-E	56	157.0	176.0								1		2				
AP5816HT8P-E	58	162.5	177.0								1		1	1			
AP6016HT8P-E	60	168.0	178.0								1				2		

**SMMSe High Efficiency Heat Pump – MMY**

Model Reference	Duty HP	Cooling Capacity kW	Heating Capacity kW	Outdoor Unit Combination										Max. Indoor Units	Diversity %	
				0401	0501	0601	0806	1006	1206	1406	1606	1806	2006			2206
AP2026HT8P-E	20	56.0	63.0					2							45	50 – 135%
AP2226HT8P-E	22	61.5	69.0					1	1					49		
AP3626HT8P-E	36	100.5	112.5						3					64		
AP3826HT8P-E	38	107.0	120.0						2	1						
AP4026HT8P-E	40	113.5	127.5						1	2						
AP4226HT8P-E	42	120.0	135.0							3						
AP4426HT8P-E	44	125.0	140.0							2	1					
AP5426HT8P-E	54	152.0	171.0							1			2			

**SHRMSe Heat Recovery – MMY**

Model Reference	Duty HP	Cooling capacity Kw	Heating capacity Kw	Outdoor unit Combinations								Max. Indoor Units	Diversity %		
				0401	0501	0601	0806	1006	1206	1406	1606			1806	2006
MAP0806FT8P-UK	8	22.4	25.0				1							18	70 – 135%
MAP1006FT8P-UK	10	28.0	31.5					1						22	
MAP1206FT8P-UK	12	33.5	37.5						1					27	
MAP1406FT8P-UK	14	40.0	45.0							1				31	
MAP1606FT8P-UK	16	45.0	50.0								1			36	
MAP1806FT8P-UK	18	50.4	56.5									1		40	
MAP2006FT8P-UK	20	56.0	58.0										1	41	
AP2216FT8P-UK	22	61.5	69.0					1	1					49	
AP2416FT8P-UK	24	68.0	76.5					1		1				54	
AP2616FT8P-UK	26	73.5	82.5						1	1				58	
AP2816FT8P-UK	28	80.0	90.0							2				63	
AP3016FT8P-UK	30	85.0	95.0							1	1			64*	
AP3216FT8P-UK	32	90.4	101.5							1	1				
AP3416FT8P-UK	34	95.4	106.5								1	1			
AP3616FT8P-UK	36	100.8	113.0									2			
AP3816FT8P-UK	38	106.4	114.5								1	1			
AP4016FT8P-UK	40	112.0	116.0										2		
AP4216FT8P-UK	42	120.0	135.0							3					

\* Total count drops to 54 when connected to a Central Remote Control / BMS Gateway

**SHRMe High Efficiency Heat Recovery - MMY**

Model Reference	Duty HP	Cooling capacity kW	Heating Capacity Kw	Outdoor unit Combinations										Max. Indoor Units.	Diversity %	
				0401	0501	0601	0806	1006	1206	1406	1606	1806	2006			
AP1626FT8P-UK	16	44.8	50.0				2								36	70 – 135%
AP1826FT8P-UK	18	50.4	56.5				1	1							40	
AP2026FT8P-UK	20	56.0	63.0					2							41	
AP2426FT8P-UK	24	67.2	75.0				3								54	
AP2626FT8P-UK	26	72.8	81.5				2	1							58	
AP2826FT8P-UK	28	78.4	88.0				1	2							63	
AP3026FT8P-UK	30	85.0	95.0					3							64*	
AP3626FT8P-UK	36	100.8	113.0						3							
AP4226FT8P-UK	42	120.0	135.0					1			2					

\*Total count drops to 54 when connected to a Central Remote Control / BMS Gateway

Notes

### Capacity Data – VRF Indoor Units

Indoor Unit Model	Capacity Code HP	Capacity Code kW
003*	0.3	0.9
005*	0.6	1.7
007*	0.8	2.2
009*	1	2.8
012*	1.3	3.6
015*	1.7	4.5
018*	2	5.6
024*	2.5	7.1
027*	3	8.0
030*	3.2	9.0
036*	4	11.2
048*	5	14.0
056*	6	16.0
072*	8	22.4
096*	10	28.0

### Electrical Data – VRF Outdoor Units

Model (Outdoor)	HP	Phase	Power To	Soft Start	MCA (A)	MOCP (A)	Inter-Connecting Cable
<b>Mini Heat Pump</b>							
MCY-MHP0404HS-E	4	1Ph+N	Indoor + Outdoor	Y	23.5	32	2C Screened
MCY-MHP0504HS-E	5				26.5	32	
MCY-MHP0604HS-E	6				28.0	32	
MCY-MHP0406HS-E	4				26.5	32	
MCY-MHP0506HS-E	5				28.0	32	
MCY-MHP0404HS8-E	4	3Ph+N			12.5	16	
MCY-MHP0504HS8-E	5				12.5	16	
MCY-MHP0604HS8-E	6				12.5	16	
MCY-MHP0806HS8-E	8				17.0	20	
MCY-MHP1006HS8-E	10				20.0	25	
<b>Heat Pump (SMMSu)</b>							
MMY-MUP0801HT8P-E	8	3Ph-N	Indoor + Outdoor	Y	17	20	2C Screened
MMY-MUP1001HT8P-E	10				23	32	
MMY-MUP1201HT8P-E	12				27	32	
MMY-MUP1401HT8P-E	14				31	40	
MMY-MUP1601HT8P-E	16				34	40	
MMY-MUP1801HT8P-E	18				38	50	
MMY-MUP2001HT8P-E	20				40	50	
MMY-MUP2201HT8P-E	22				57	63	
MMY-MUP2401HT8P-E	24				60	80	
<b>Heat Pump (SMMSe)</b>							
MMY-MAP0806HT8P-E	8	3Ph-N	Indoor + Outdoor	Y	20.5	25	2C Screened
MMY-MAP1006HT8P-E	10				21.5	25	
MMY-MAP1206HT8P-E	12				26.1	32	
MMY-MAP1406HT8P-E	14				31.0	40	
MMY-MAP1606HT8P-E	16				35.8	40	
MMY-MAP1806HT8P-E	18				40.6	50	
MMY-MAP2006HT8P-E	20				44.9	63	
MMY-MAP2206HT8P-E	22				49.3	63	
Note: The electrical installation needs to meet current electrical regulations BS7671:2018 the 18th Edition of the IET regulations.							

Model (Outdoor)	HP	Phase	Power To	Soft Start	MCA (A)	MOCP (A)	Inter-Connecting Cable
<b>Heat Recovery (SHRMe)</b>							
MMY-MAP0806FT8P-UK	8	3Ph+N	Indoor + Outdoor	Y	21.5	25	2C Screened
MMY-MAP1006FT8P-UK	10				26.1	32	
MMY-MAP1206FT8P-UK	12				31.0	40	
MMY-MAP1406FT8P-UK	14				35.8	50	
MMY-MAP1606FT8P-UK	16				40.6	50	
MMY-MAP1806FT8P-UK	18				44.9	50	
MMY-MAP2006FT8P-UK	20				49.3	63	
Note: The electrical installation needs to meet current electrical regulations BS7671:2018 the 18th Edition of the IET regulations.							

### VRF Additional Refrigerant Charge Amount

Additional Refrigerant Charge Amount per metre					
Liquid Pipe Size	Mini SMMS Mini SMMS <sub>e</sub>	SMMS SMMS/	SMMS <sub>u</sub>	SMMS <sub>e</sub>	SHRM SHRM/ SHRM <sub>e</sub>
inch" - mm	kg/m	kg/m	kg/m	kg/m	kg/m
1/4 - 6.4	0.025	0.025	0.025	0.030	0.0325
3/8 - 9.5	0.055	0.055	0.055	0.066	0.0715
1/2 - 12.7	0.105*	0.105	0.105	0.126	0.1365
5/8 - 15.9		0.160	0.160	0.192	0.2080
3/4 - 19.1		0.250	0.250	0.300	0.3250
7/8 - 22.2		0.350	0.350	0.420	0.4550
1 - 25.4		N/A	0.470	N/A	N/A

\* 8 & 10hp ONLY

Notes

## Heat Pump VRF Additional Refrigerant Charge Calculations

Factory Charge			Trim Charge					Correction Factor kg
HP	SMMSe	Base Charge kg	Condenser Combinations					
			1	2	3	4	5	
4	MCY-MHP0404HS(8)-E	6.4	4					0.0
5	MCY-MHP0504HS(8)-E	6.4	5					0.4
6	MCY-MHP0604HS(8)-E	6.4	6					0.8
4	MCY-MHP0406HT-E	3.3	4					-1.6
5	MCY-MHP0506HT-E	3.3	5					-1.6
8	MCY-MHP0806HS8-E	4.4	8					-1.0
10	MCY-MHP1006HS8-E	4.4	10					-1.0
8	MAP0806HT8P-E	11.5	8					-3.5
10	MAP1006HT8P-E	11.5	10					-3.5
12	MAP1206HT8P-E	11.5	12					-1.5
14	MAP1406HT8P-E	11.5	14					-1.0
16	MAP1606HT8P-E	11.5	16					-0.5
18	MAP1806HT8P-E	11.5	18					1.5
20	MAP2006HT8P-E	11.5	20					1.5
20	AP2026HT8P-E	23.0	10	10				7.0
22	MAP2206HT8P-E	11.5	22					1.5
22	AP2226HT8P-E	23.0	12	10				-7.0
24	AP2416HT8P-E	23.0	12	12				-3.0
26	AP2616HT8P-E	23.0	14	12				-2.5
28	AP2816HT8P-E	23.0	16	12				-2.0
30	AP3016HT8P-E	23.0	16	16				-1.5
32	AP3216HT8P-E	23.0	16	14				-1.0
34	AP3416HT8P-E	23.0	18	16				1.0
36	AP3616HT8P-E	23.0	20	16				1.0
36	AP3626HT8P-E	34.5	12	12	12			-12.5
38	AP3816HT8P-E	23.0	22	16				1.0
38	AP3826HT8P-E	34.5	14	12	12			-10.5
40	AP4016HT8P-E	23.0	20	20				3.0
40	AP4026HT8P-E	34.5	14	14	12			-8.5
42	AP4216HT8P-E	23.0	22	20				3.0
42	AP4226HT8P-E	34.5	14	14	14			-4.5
44	AP4416HT8P-E	23.0	22	22				3.0
44	AP4426HT8P-E	34.5	16	14	14			-4.5
46	AP4616HT8P-E	34.5	16	16	14			-6.5
48	AP4816HT8P-E	34.5	16	16	16			-6.5
50	AP5016HT8P-E	34.5	18	16	16			-0.5
52	AP5216HT8P-E	34.5	20	16	16			-0.5
54	AP5416HT8P-E	34.5	22	16	16			-0.5
54	AP5426HT8P-E	34.5	20	20	14			-4.5
56	AP5616HT8P-E	34.5	20	20	16			2.5
58	AP5816HT8P-E	34.5	22	20	16			2.5
60	AP6016HT8P-E	34.5	22	22	16			2.5
<b>Key:</b>	Mini VRF 4 Series	Mini VRF 6 Series	SMMSe	High Efficiency	Minus Figure			

Fig 1

### Notes



## Heat Pump Mini VRF 4 Series and 6 Series

Calculation of Additional Refrigerant Charge for 4-Series Mini VRF 4-5-6hp			
Liquid Line Pipe Diameter Ø	kg/m	Length (m)	Additional Amount of refrigerant
Inch	mm		
1/4	- 6.4	0.025 x	= kg
3/8	- 9.5	0.055 x	= kg
<b>Additional Amount of Refrigerant</b>			= kg
1. Compensation by outdoor HP. (Correction Factor) (kg0=4hp, 0.4kg=5hp, 0.8kg=6hp)			
2. Liquid line diameter & length X pipe charge rate			
<b>Note: if a negative result occurs the additional refrigerant amount is 0 kg</b> <b>*** No additional refrigerant charge or change to Factory charge is required ***</b> <b>Total System Charge = Base Charge + Additional Refrigerant Charge</b>			

Fig 2

### Calculation.

Correction factor (fig 1- 0kg-4hp, 0.4kg-5hp,0.8kg-6hp)= \_ kg + Additional for liquid line (fig 2) = \_ kg = Total additional charge = \_ kg

Total system charge. Factory Charge (fig 1-6.4kg) + Total Additional charge = \_kg

### Example 4 series.

1 x MCY-MHP0604HS-E (6hp) with 12m of ¼" liquid line and 28m of 3/8" liquid line. **(No Compensation for Indoor Units.)**

Additional Charge: Correction factor = 0.8kg + (12x0.025 = 0.3kg) + (28 x 0.055 = 1.54kg) = 0.8+0.30+1.54 = 2.64kg

Total System Charge: Additional Charge = 2.64kg + Factory Charge = 6.4kg Total System Charge = 2.64+6.4 = 9.04kg

Calculation of Additional Refrigerant Charge for 6- Series Mini VRF 4-5-8-10hp				Indoor Unit Compensation												
Liquid Line Pipe Diameter Ø	kg/m	Length (m)	Additional Amount Of refrigerant		005	007	009	012	015	018	024	027	030	036	048	
Inch	mm			MMU-AP****HP	-	-	0.4	0.4	0.8	0.8	0.8	0.8	0.8	1.2	1.2	
1/4	- 6.4	0.030	= kg	MMU-AP****MH	0.4	0.4	0.4	0.4	0.6	0.6	-	-	-	-	-	
3/8	- 9.5	0.066	= kg	MMU-AP****WH	-	0.4	0.4	0.4	0.5	0.7	0.7	0.7	0.7	1.1	1.1	
1/2	- 12.7	0.126	= kg	MMU-AP****YH/SH	-	0.4	0.4	0.4	0.5	0.5	0.6	-	-	-	-	
<b>Additional Amount of Refrigerant</b>				= kg	MMD-AP****BHP	-	0.5	0.5	0.5	0.5	0.5	0.7	0.7	0.7	1.1	1.1
				MMD-AP****SPH	0.3	0.3	0.3	0.3	0.5	0.5	0.8	0.8	-	-	-	
				MMD-AP****HP	-	-	-	-	-	0.7	0.7	0.7	-	1.1	1.1	
				MMC-AP****HP	-	-	-	-	0.6	0.6	0.8	0.8	-	1.2	1.2	
				MMK-AP****H	-	0.5	0.5	0.5	0.7	0.7	0.7	-	-	-	-	
				MMK-AP****HP	0.3	0.3	0.3	0.3	-	-	-	-	-	-	-	
				MMF-AP****H	-	-	-	-	0.7	0.7	1.0	1.0	-	1.3	1.3	
				MML-AP****H	-	0.5	0.5	0.5	0.5	0.8	0.8	-	-	-	-	
				MML-AP****BH	-	0.3	0.3	0.3	0.5	0.5	0.7	-	-	-	-	
				MML-AP****NH	-	0.5	0.5	0.5	0.5	0.5	0.5	-	-	-	-	
				(Unit : kg)												
<b>Note: if a negative result occurs the additional refrigerant amount is 0 kg</b> <b>Total System Charge = Base Charge + Additional Refrigerant Charge + HP Correction Factor + Indoor Units (kg/hp)</b>				<b>*** No additional refrigerant charge or change to Factory charge is required ***</b>												

Fig 3

fig 4

### Calculation.

Correction factor (fig 1, -1.6kg-4hp, -1.6kg-5hp, -1.0kg-8hp, -1.0kg-10hp)= \_ kg + Indoor unit compensation (fig 4) = \_kg + Additional for liquid line (fig 3) = \_ kg = Total additional charge = \_ kg

Total system charge. Factory Charge (fig 1 – 3.3kg 4-5hp, 4.4kg, 8-10hp) kg + Total Additional charge = \_kg

### Example 6 series.

1 x MCY-MHP0506HT-E (5hp) with 12m of ¼" liquid line and 28m of 3/8" liquid line.

Additional Charge: Correction factor = -1.6kg + (12x0.025 = 0.3kg) + (28 x 0.055 = 1.54kg) +(Indoor unit compensation, 1xMMUAP024HP (0.8kg)+MMU-AP0184HP (0.8kg)+1XMMU-AP0077MH (0.4kg)+MMD-AP074SPH (0.3kg) = 2.3kg)

-1.6+0.30+1.54+2.3 = 2.54kg

Total System Charge: Additional Charge = 2.54kg + Factory Charge = 3.3kg Total System Charge = 2.54+3.3 = 5.84kg

## Heat Pump VRF SMMSe

Calculation of Additional Refrigerant Charge for SMMSe Standard and High Efficiency					Indoor Unit Compensation (kg/HP)											
Liquid Line Pipe Diameter Ø		Refrigerant	Length (m)	Additional Amount of	HP	Model	X	Kg/HP	=	kg	HP	Model	X	Kg/HP	=	kg
Inch	mm				0.6	005*				0.24	1.7	050*				0.34
1/4	- 6.4	0.030	=	kg	0.8	007*				0.32	2.5	080*	X	0.2	=	0.50
3/8	- 9.5	0.066	=	kg	1	009*				0.40	3.2	100*				0.64
1/2	- 12.7	0.126	=	kg	1.25	012*				0.50	Air to Air Heat Exchanger with DX Coil.					
5/8	- 15.9	0.192	=	kg	1.7	015*				0.68						
3/4	- 19.1	0.300	=	kg	2	018*				0.80						
7/8	- 22.2	0.420	=	kg	2.5	024*	X	0.4	=	1.00	5	048*		0.2	=	1.00
<b>Additional Amount of Refrigerant</b>				=	kg	3	027*			1.20	8	056*	X	0.2	=	1.60
1. Compensation by outdoor HP. (Correction Factor) 2. Indoor unit type & quantity X factor. (kg/HP) 3. Liquid line diameter & length X pipe charge rate					3.2	030*				1.28	10	096*		0.2	=	2.00
					4	036*			1.60	Fresh Air Intake Units						
					5	048*			2.00	Standard Indoor Units						
					6	056*			2.40							
					8	072*			3.20							
					10	096*			4.00							
Note: if a negative result occurs the additional refrigerant amount is 0 kg					*** No additional refrigerant charge or change to Factory charge is required ***											
Total System Charge = Base Charge + Additional Refrigerant Charge + HP Correction Factor + Indoor Units (kg/hp); <b>SMMSe ONLY</b>																

Fig 5

Fig 6

### Calculation.

Correction factor (fig 1) = \_ kg + Indoor unit compensation (fig 5) = \_kg + Additional for liquid line (fig 5) = \_ kg = Total additional charge = \_ kg

Total system charge. Factory Charge (fig 1) \_kg + Total Additional charge = \_kg

### Example SMMSe.

1 x MMY-MAP1406HT8P-E (14hp) with 5 x MM#024\* = ( 5 x 2.5 (hp) x 0.4 = **5.0kg**), 1 x MM#036\* ( 4 (hp) x 0.4 = **1.6kg**), 1 x MM#072\* ( 8 (hp) x 0.4 = **3.2kg**) with 10m of 1/4" liquid line, 20m of 3/8" liquid line, 15m of 1/2" liquid line, 40m of 5/8" liquid line.  
 Additional Charge: Correction factor = **-1.0kg** + (**5.0+1.6+3.2 = 9.8kg**) + (10 x 0.03 = 0.3kg + = 20 x 0.066 = 1.32kg + 15 x 0.126 = 1.89kg + 40 x 0.192 = 7.68kg) = 11.19kg

**-1.0+9.8+11.19 = 19.99kg**

Total System Charge: Additional Charge = 19.99kg + Factory Charge = 11.5kg Total System Charge = 19.99+11.5 = 31.49kg

### Notes

## Heat Pump VRF Additional Refrigerant Charge Calculations

Factory Charge			Trim Charge					Correction Factor kg
HP	SMMSU	Base Charge kg	Condenser Combinations					
			1	2	3	4	5	
8	MUP0801HT8P-E	6.0	8					1.5
10	MUP1001HT8P-E	6.0	10					1.7
12	MUP1201HT8P-E	6.0	12					2.3
14	MUP1401HT8P-E	6.0	14					2.3
16	MUP1616HT8P-E	9.0	16					1.0
18	MUP1801HT8P-E	9.0	18					2.0
20	MUP2001HT8P-E	9.0	20					4.0
22	MUP2201HT8P-E	9.0	22					5.0
24	MUP2401HT8P-E	9.0	24					5.5
26	UP2611HT8P-E	12	14	12				4.6
28	UP2811HT8P-E	12	14	14				4.6
30	UP3011HT8P-E	15	18	12				4.3
32	UP3211HT8P-E	15	20	12				6.3
34	UP3411HT8P-E	15	20	14				6.3
36	UP3611HT8P-E	15	24	12				7.8
38	UP3811HT8P-E	15	24	14				7.8
40	UP4011HT8P-E	18	20	20				8.0
42	UP4211HT8P-E	18	24	18				7.5
44	UP4411HT8P-E	18	24	20				9.5
46	UP4611HT8P-E	18	24	22				10.5
48	UP4811HT8P-E	18	24	24				11.0
50	UP5011HT8P-E	21	24	14	12			10.1
52	UP5211HT8P-E	21	24	14	14			10.1
54	UP5411HT8P-E	24	20	20	14			10.3
56	UP5611HT8P-E	24	24	20	12			11.8
58	UP5811HT8P-E	24	24	20	14			11.8
60	UP6011HT8P-E	24	24	24	12			13.3
62	UP6211HT8P-E	24	24	24	14			13.3
64	UP6411HT8P-E	27	24	20	20			13.5
66	UP6611HT8P-E	27	24	22	20			14.5
68	UP6811HT8P-E	27	24	24	20			15.0
70	UP7011HT8P-E	27	24	24	22			16.0
72	UP7211HT8P-E	27	24	24	24			16.5
74	UP7411HT8P-E	30	24	24	14	12		15.6
76	UP7611HT8P-E	30	24	24	14	14		15.6
78	UP7811HT8P-E	33	24	20	20	14		15.8
80	UP8011HT8P-E	33	24	24	20	12		17.3
82	UP8211HT8P-E	33	24	24	20	14		17.3
84	UP8411HT8P-E	33	24	24	24	12		18.8
86	UP8611HT8P-E	33	24	24	24	14		18.8
88	UP8811HT8P-E	36	24	24	20	20		19.0
90	UP9011HT8P-E	36	24	24	22	20		20.0
92	UP9211HT8P-E	36	24	24	24	20		20.5
94	UP9411HT8P-E	36	24	24	24	22		21.5
96	UP9611HT8P-E	36	24	24	24	24		22.0
98	UP9811HT8P-E	39	24	24	24	14	12	21.1
100	UP10011HT8P-E	39	24	24	24	14	14	21.1
102	UP10211HT8P-E	42	24	24	20	20	14	21.3
104	UP10411HT8P-E	42	24	24	24	20	12	22.8
106	UP10611HT8P-E	42	24	24	24	20	14	22.8
108	UP10811HT8P-E	42	24	24	24	24	12	24.3
110	UP11011HT8P-E	42	24	24	24	24	14	24.3
112	UP11211HT8P-E	45	24	24	24	20	20	24.5
114	UP11411HT8P-E	45	24	24	24	22	20	25.5
116	UP11611HT8P-E	45	24	24	24	24	20	26.0
118	UP11811HT8P-E	45	24	24	24	24	22	27.0
120	UP12011HT8P-E	45	24	24	24	24	24	27.5

Fig 7

## Heat Pump VRF SMMSu

Calculation of Additional Refrigerant Charge for SMMSu Standard and High Efficiency					Indoor Unit Compensation (kg/HP)											
Liquid Line Pipe Diameter Ø		Refrigerant	Length (m)	Additional Amount of	HP	Model	X	Kg	=	kg	HP	Model	X	Kg	=	kg
Inch	mm				0.3	003*				0.2	1.0	009*				
1/4	- 6.4	0.025	=	kg	0.6	005*				0.2	1.25	012*	X	0.2	=	0.2
3/8	- 9.5	0.055	=	kg	0.8	007*				0.2	1.7	015*				
1/2	- 12.7	0.105	=	kg	0.9	008*				0.2	2.0	018*				
5/8	- 15.9	0.160	=	kg	1.0	009*	X	0.2	=	0.2	2.5	024*				
3/4	- 19.1	0.250	=	kg	1.1	010*				0.68	3.0	027*				
7/8	- 22.2	0.350	=	kg	1.25	012*				0.80	3.2	030*	X	0.6	=	0.6
1	- 25.4	0.470	=	kg	1.5	014*				1.00	4.0	036*				
<b>Additional Amount of Refrigerant</b>				=	kg	1.7	015*				5.0	048*				
1. Compensation by outdoor HP. (Correction Factor) (fig 7)					2.0	018*				1.20	6.0	056*				
2. Indoor unit type & quantity X factor. (kg) (fig 10)					2.25	020*				1.28	High Efficiency 4-way Cassette					
3. Liquid line diameter & length X pipe charge rate (fig 9)					2.5	024*	X	0.4	=	1.60	2.5	024*				
4. Correction for outdoor unit diversity (fig 8)					3.0	027*				2.00	5	048*	X	0.2	=	0.2
Correction for Outdoor unit Diversity					3.2	030*					Hot Water Module					
Diversity D (%) (kg)					4.0	036*					5	048*				0.0
50%≤D < 60%		-2.5		60%≤D < 70%	-2.0	5.0	048*	X	0.6	=	8	056*				0.0
70%≤D < 80%		-1.5		80%≤D < 90%	-1.0	6.0	056*			2.40	10	096*				0.0
90%≤D < 95%		-0.5		95%≤D	0	8.0	072*			3.20	Fresh Air Indoor Units					
						10.0	096*	X	1.0	=	4.00					
					Standard Indoor Units											
<b>Note: if a negative result occurs the additional refrigerant amount is 0 kg</b> <span style="float: right;">*** No additional refrigerant charge or change to Factory charge is required ***</span>																
<b>Total System Charge = Base Charge + Additional Refrigerant Charge + HP Correction Factor + Indoor Units (kg/hp); SMMSe ONLY</b>																

Fig 9

Fig 10

### Calculation.

Correction factor (fig 7) =      kg + Indoor unit compensation (fig 10) =      kg + Additional for liquid line (fig 9) =      kg +

Correction for Diversity (fig 8) = Total additional charge =      kg

Total system charge. Factory Charge (fig 7)      kg + Total Additional charge =      kg

### Example SMMSu.

1 x MMY-MUP1406HT8P-E (14hp) with a 80% diversity and 5 x MM#024\* = ( 5 (hp) x 0.4 ) = **2.0kg**, 1 x MM#036\* ( 4 (hp) x 0.6 = **0.6kg**), 1 x MM#072\* ( 8 (hp) x 1.0 = **1.0kg**) with 10m of 1/4" = **0.25kg**, liquid line, 20m of 3/8" = **1.1kg**, liquid line, 15m of 1/2" = **1.58kg**, liquid line, 40m of 5/8" = **6.4kg** liquid line.

Additional Charge: Correction factor = **2.3kg - 1.5kg** + (2.0+0.6+1.0 = **3.6kg**) + (10 x 0.025 = **0.25kg**) + (20 x 0.055 = **1.1kg**) + (15 x 0.105 = **1.58kg**) + (40 x 0.160 = **6.40kg**) = **13.73kg**

Total System Charge: Additional Charge = 13.73kg + Factory Charge = 6.0kg    Total System Charge = 13.73+6 = 19.73kg

### Notes

## Heat Recovery VRF SHRMe

Minus Figure		Standard SHRMe	High Efficiency	Trim Charge			Correction Factor kg
Factory Charge				Condenser Combinations			
HP	SHRMe	Base Charge kg	1	2	3		
8	MAP0806FT8P-UK	11.0	8			2.0	
10	MAP1006FT8P-UK	11.0	10			3.0	
12	MAP1206FT8P-UK	11.0	12			8.0	
14	MAP1406FT8P-UK	11.0	14			10.0	
16	MAP1606FT8P-UK	11.0	16			12.0	
16	AP1626FT8P-UK	22.0	8	8		1.0	
18	MAP1806FT8P-UK	11.0	18			14.0	
18	AP1826FT8P-UK	22.0	10	8		3.0	
20	MAP2006FT8P-UK	11.0	20			15.0	
20	AP2026FT8P-UK	22.0	10	10		3.0	
22	AP2216FT8P-UK	22.0	12	10		6.0	
24	AP2416FT8P-UK	22.0	14	10		8.0	
24	AP2426FT8P-UK	33.0	8	8	8	-3.0	
26	AP2616FT8P-UK	22.0	14	12		12.0	
26	AP2626FT8P-UK	33.0	10	8	8	1.0	
28	AP2816FT8P-UK	22.0	14	14		12.0	
28	AP2826FT8P-UK	33.0	10	10	8	1.0	
30	AP3016FT8P-UK	22.0	16	14		14.0	
30	AP3062FT8P-UK	33.0	10	10	10	3.0	
32	AP3216FT8P-UK	22.0	18	14		15.0	
34	AP3416FT8P-UK	22.0	18	16		16.0	
36	AP3616FT8P-UK	22.0	18	18		18.0	
36	AP3626FT8P-UK	33.0	12	12	12	7.0	
38	AP3816FT8P-UK	22.0	20	18		22.0	
40	AP4016FT8P-UK	22.0	20	20		24.0	
42	AP4216FT8P-UK	33.0	14	14	14	14.0	
42	AP4226FT8P-UK	33.0	16	16	10	14.0	

Fig 11

## Heat Recovery VRF Additional Refrigerant Charge Calculation

Calculation of Additional Refrigerant Charge for SHRMe							
Note: If a negative result occurs the additional refrigerant amount is 0kg ***No additional refrigerant charge or change to Factory charge is required*** Total system charge = Base charge + Additional Refrigerant Charge + HP Correction Factor	Liquid line Pipe Diameter Ø		Refrigerant	Length (m)	Additional Amount of		
	Inch	mm					
	1/4	-	6.4	0.0325	x	=	kg
	3/8	-	9.5	0.0715	x	=	kg
	1/2	-	12.7	0.1365	x	=	kg
	5/8	-	15.9	0.208	x	=	kg
	3/4	-	19.0	0.325	x	=	kg
	7/8	-	22.0	0.455	x	=	kg
Additional Amount of Refrigerant					=	kg	

Fig 12

### Calculation.

Correction factor (fig 11) =      kg + Additional for liquid line (fig 12) =      kg = Total additional charge =      kg  
 Total system charge. Factory Charge (fig 11)      kg + Total Additional charge =      kg

### Example SHRMe.

1 x MCY-MAP1006FT8P-UK (10hp) with 10m of 1/4" liquid line, 20m of 3/8" liquid line, 15m of 1/2" liquid line, 40m of 5/8" liquid line.

Additional Charge: Correction factor = 3.0kg + (10 x 0.0325 = 0.325kg) + (20 x 0.0715 = 1.43kg) + (15 x 0.136 = 2.05kg) + (40 x 0.208 = 8.32kg) = 12.12kg) + 3kg = 15.12kg

Total System Charge: Additional Charge = 15.12kg + Factory Charge = 11.0kg Total System Charge = 15.12+11.0 = 26.12kg

## VRF Replacement Technology

### R22 & R407C Replacement Technology for SMMSe/u and SHRMe

Continuing our commitment to more environmentally friendly refrigerants our latest generation Mini SMMSe, SMMSe, SMMSu and SHRMe VRF systems can be used to replace existing R22 and R407C air conditioning plant. R22 (HCFC) was commonly used in air conditioning production up to 2004, on 1st January 2015 R22 equipment become non serviceable, resulting in systems having to be replaced with more environmentally friendly refrigerants that have a lower or zero Ozone Depleting Potential (ODP).

Available for Heat Pump and Heat Recovery systems Re-use existing refrigerant pipework

Cost effective upgrade.

Reduced installation time and expense.

Minimal disruption

Ideal for refurbishment projects where the main risers are no longer accessible.

Lower energy consumption with up to 60% increase in energy efficiency.

Chance to increase or decrease system capacity.

Smaller footprint compared to previous R22 models Can re-use existing power supply.

End of life recycling program for replaced plant.

Pipe Mini SMMSe	Suction (Gas)			Liquid Side		Max. Piping length to 1 <sup>st</sup> Branch Joint (m)
	5/8"	3/4"	7/8"	3/8"	1/2"	
4 hp	✓	✓		✓	✓	65
5 hp	✓	✓		✓	✓	65
6 hp		✓	✓	✓	✓	65

Pipe	Suction Gas				Liquid Side				Discharge Gas				Max. Piping lengths to first Branch joint (m). Height difference Outdoor to Indoor.	
	7/8	1 1/8	1 3/8	1 5/8	1/2	5/8	3/4	7/8	3/4	7/8	1 1/8	1 3/8	Height <3M	Height >3 <70m
SHRMe														
8HP	✓	✓			✓				✓				100	85
10HP	✓	✓			✓				✓					
12HP		✓			✓				✓					
14HP		✓				✓				✓				
16HP		✓					✓			✓				
18HP		✓					✓			✓				
20HP		✓					✓			✓				
22HP			✓				✓				✓			
24HP			✓				✓				✓			
26HP			✓					✓			✓			
28HP			✓					✓			✓			
30HP			✓					✓			✓			
32HP			✓					✓			✓			
34HP			✓					✓			✓			
36HP				✓				✓			✓			
38HP				✓				✓			✓			
40HP				✓				✓			✓			
42HP				✓				✓			✓			

Pipe	Suction Gas						Liquid Side					Max. Piping lengths to first Branch joint (m). Height difference Outdoor to Indoor.	
	3/4	7/8	1 1/8	1 3/8	1 5/8	1 7/8	1/2	5/8	3/4	7/8	1 1/8	Standard Height <70M	High Efficiency Height <70m
SMMSu													
8HP	✓	✓					✓	✓				100	65
10HP		✓	✓				✓	✓					
12HP			✓	✓			✓	✓					
14HP			✓	✓				✓	✓				
16HP			✓	✓				✓	✓				
18HP			✓	✓				✓	✓				
20HP			✓	✓				✓	✓				
22HP			✓	✓	✓			✓	✓	✓			
24HP				✓	✓			✓	✓				
26HP				✓	✓			✓	✓				
28HP				✓	✓			✓	✓				
30HP				✓	✓			✓	✓				
32HP				✓	✓			✓	✓				
34HP				✓	✓			✓	✓				
36HP					✓	✓			✓	✓			
38HP					✓	✓			✓	✓			
40HP					✓	✓			✓	✓			
42HP					✓	✓			✓	✓			
44HP					✓	✓			✓	✓			
46HP					✓	✓			✓	✓			
48HP					✓	✓			✓	✓			
50HP					✓	✓			✓	✓			
52HP					✓	✓			✓	✓			
54HP					✓	✓			✓	✓			
56HP					✓	✓			✓	✓			
58HP					✓	✓			✓	✓			
60HP					✓	✓			✓	✓			
												70	50

Maximum system diversity factor connectable indoor units to outdoor is 105%

The data tables detail the main pipe sizes to the first joint. The pipes can be vertical or horizontal providing they match the data. After the first joint for main pipes all other pipework must follow the same principals/criteria as for new installations as detailed in the installation and data books.

## Acoustic Data - MMY Indoor Units

4 Way Compact Cassette	High dB(A)	Med dB(A)	Low dB(A)
MMU-A(U)P005*MH-E	32	30	29
MMU-A(U)P007*MH-E	37	33	29
MMU-A(U)P009*MH-E	38	33	28
MMU-A(U)P012*MH-E	38	34	30
MMU-A(U)P015*MH-E	40	35	31
MMU-A(U)P018*MH-E	47	39	34
4 Way Cassette	High dB(A)	Med dB(A)	Low dB(A)
MMU-A(U)P009*HP-E	30	29	27
MMU-A(U)P012*HP-E	30	29	27
MMU-A(U)P015*HP-E	31	29	27
MMU-A(U)P018*HP-E	32	29	27
MMU-A(U)P024*HP-E	35	31	28
MMU-A(U)P027*HP-E	35	31	28
MMU-A(U)P030*HP-E	38	33	30
MMU-A(U)P036*HP-E	43	38	32
MMU-A(U)P048*HP-E	46	38	33
MMU-A(U)P056*HP-E	46	40	33
2 Way Cassette	High dB(A)	Med dB(A)	Low dB(A)
MMU-A(U)P007*WH-E	34	32	30
MMU-A(U)P009*WH-E	34	32	30
MMU-A(U)P012*WH-E	34	32	30
MMU-A(U)P015*WH-E	35	33	30
MMU-A(U)P018*WH-E	35	33	30
MMU-A(U)P024*WH-E	38	35	33
MMU-A(U)P027*WH-E	38	35	33
MMU-A(U)P030*WH-E	40	37	34
MMU-A(U)P036*WH-E	42	39	36
MMU-A(U)P048*WH-E	43	40	37
MMU-AP(U)056*WH-E	46	42	39
1 Way Cassette	High dB(A)	Med dB(A)	Low dB(A)
MMU-UP0031YHP-E	37	33	25
MMU-UP0051YHP-E	37	33	25
MMU-A(U)P007*YHP-E	42	39	34
MMU-A(U)P009*YHP-E	42	39	34
MMU-A(U)P012*YHP-E	42	39	34
MMU-A(U)P015*SH-E	37	35	32
MMU-A(U)P018*SH-E	38	36	34
MMU-A(U)P024*SH-E	45	41	37
Slim Ducted	High dB(A)	Med dB(A)	Low dB(A)
MMD-UP0031SPHY-E	29	27	25
MMD-A(U)P005*SPH*-E*	30	28	26
MMD-A(U)P007*SPH*-E*	31	29	26
MMD-A(U)P009*SPH*-E*	32	29	26
MMD-A(U)P012*SPH*-E*	33	30	27
MMD-A(U)P015*SPH*-E*	33	30	28
MMD-A(U)P018*SPH*-E*	34	32	29
MMD-A(U)P024*SPH*-E*	36	33	30
MMD-A(U)P027*SPH*-E*	37	34	32
Standard Ducted	High dB(A)	Med dB(A)	Low dB(A)
MMD-A(U)P0076BHP1-E	29	26	23
MMD-A(U)P0096BHP1-E	30	26	23
MMD-A(U)P0126BHP1-E	30	26	23
MMD-A(U)P0156BHP1-E	33	29	25
MMD-A(U)P0186BHP1-E	33	29	25
MMD-A(U)P0246BHP1-E	36	31	27
MMD-A(U)P0276BHP1-E	36	31	27
MMD-A(U)P0306BHP1-E	36	31	27
MMD-A(U)P0366BHP1-E	40	36	33
MMD-A(U)P0486BHP1-E	40	36	33
MMD-A(U)P0566BHP1-E	40	36	33
High Static Ducted	High dB(A)	Med dB(A)	Low dB(A)
MMD-A(U)P0186HP1-E	37	32	30
MMD-A(U)P0246HP1-E	38	34	31
MMD-A(U)P0276HP1-E	38	34	31
MMD-A(U)P0366HP1-E	41	37	34
MMD-A(U)P0486HP1-E	42	40	35
MMD-A(U)P0566HP1-E	45	42	37
MMD-A(U)P0726HP1-E	44	40	36
MMD-A(U)P0966HP1-E	46	42	38

Ceiling Suspended	High dB(A)	Med dB(A)	Low dB(A)
MMC-A(U)P0157HP1-E	36	34	28
MMC-A(U)P0187HP1-E	37	35	28
MMC-A(U)P0247HP1-E	41	36	29
MMC-A(U)P0277HP1-E	41	36	29
MMC-A(U)P0367HP1-E	44	38	32
MMC-A(U)P0487HP1-E	44	41	35
MMC-A(U)P0567HP1-E	46	42	36
High Wall	High dB(A)	Med dB(A)	Low dB(A)
MMK-A(U)P0073H1	35	31	28
MMK-A(U)P0093H1	37	32	28
MMK-A(U)P0123H1	37	32	28
MMK-A(U)P0153H1	41	36	33
MMK-A(U)P0183H1	41	36	33
MMK-A(U)P0243H1	46	39	34
MMK-AP0054MHP1-E	33	31	29
MMK-AP0074MH1-E	35	32	29
MMK-AP0094MH1-E	36	33	29
MMK-AP0124MH1-E	37	33	29
Concealed Chassis	High dB(A)	Med dB(A)	Low dB(A)
MML-AP0074BH1-E	36	34	28
MML-AP0094BH1-E	36	34	32
MML-AP0124BH1-E	36	34	32
MML-AP0154BH1-E	36	34	32
MML-AP0184BH1-E	36	34	32
MML-AP0244BH1-E	42	37	33
Floor Mounted Console	High dB(A)	Med dB(A)	Low dB(A)
MML-AP0074H1-E	39	37	35
MML-AP0094H1-E	39	37	35
MML-AP0124H1-E	45	41	38
MML-AP0154H1-E	45	41	38
MML-AP0184H1-E	49	44	39
MML-AP0244H1-E	49	44	39
Bi-Flow Console	High dB(A)	Med dB(A)	Low dB(A)
MML-AP0074NH1-E	38	32	26
MML-AP0094NH1-E	38	32	26
MML-AP0124NH1-E	40	34	29
MML-AP0154NH1-E	43	37	31
MML-AP0184NH1-E	47	40	34
Floor Mounted Cabinet	High dB(A)	Med dB(A)	Low dB(A)
MMF-AP0156H1-E	46	42	37
MMF-AP0186H1-E	46	42	37
MMF-AP0246H1-E	49	45	39
MMF-AP0276H1-E	49	45	39
MMF-AP0366H1-E	51	46	41
MMF-AP0486H1-E	54	49	44
MMF-AP0566H1-E	54	49	44
Fresh Air Intake	High dB(A)	Med dB(A)	Low dB(A)
MMD-AP0481HFE	45	43	41
MMD-AP0721HFE	46	45	44
MMD-AP0961HFE	46	45	44
Extra			
Air to Air Heat Exchanger	High dB(A)	High dB(A)	Low dB(A)
MMD-VN502HEX1E	37	36	34
MMD-VN802HEX1E	41	40	38
MMD-VN1002HEX1E	43	42	40
MMD-VNK502HEX1E	36	35	33
MMD-VNK802HEX1E	40	39	38
MMD-VNK1002HEX1E	42	41	39

Sound Pressure Levels measured in an anechoic chamber in accordance with JSI B8616

Note: \* Measured at back air inlet

## Common Sensor Characteristics

There are eight commonly used sensors in the **RAS** and **RAV** systems.

TA = Return Air Sensor; indoor unit

TC = Coil Sensor; indoor unit

TCJ = Coil Sensor; indoor unit

TL = Liquid Pipe Sensor (fan speed); outdoor unit

TE = Heat Exchange Sensor (defrost); outdoor unit

TD = Discharge Pipe Sensor; outdoor unit

TO = Ambient

TS = Suction


TK = Oil sensor (VRF)

The Ta, Tc, Tcj, Ts, To and TE sensors all share the same resistance versus temperature characteristic. They differ however in electrical connections and sensing head style; therefore, it is important to quote the full model type number when ordering any replacement sensors.

The Td, TL and TK sensor has a different resistance characteristic because its sensing range is that much higher than the others.

Sensor	-10	-5	0	5	10	15	20	25	30	35	40	45	50	55	60	100	°C
Ta, Tc, Tcj, TE, To, Ts	60.3	45.3	33.8	26.4	20.35	16	12.59	10	8	6.5	5.2	4.3	3.5	2.9	2.4	-	KΩ
Td, Tk, TL	-	-	161	-	99	80.5	63	50	40	-	26.5	-	17.9	-	12.3	3.4	kΩ

Example for location of Sensors

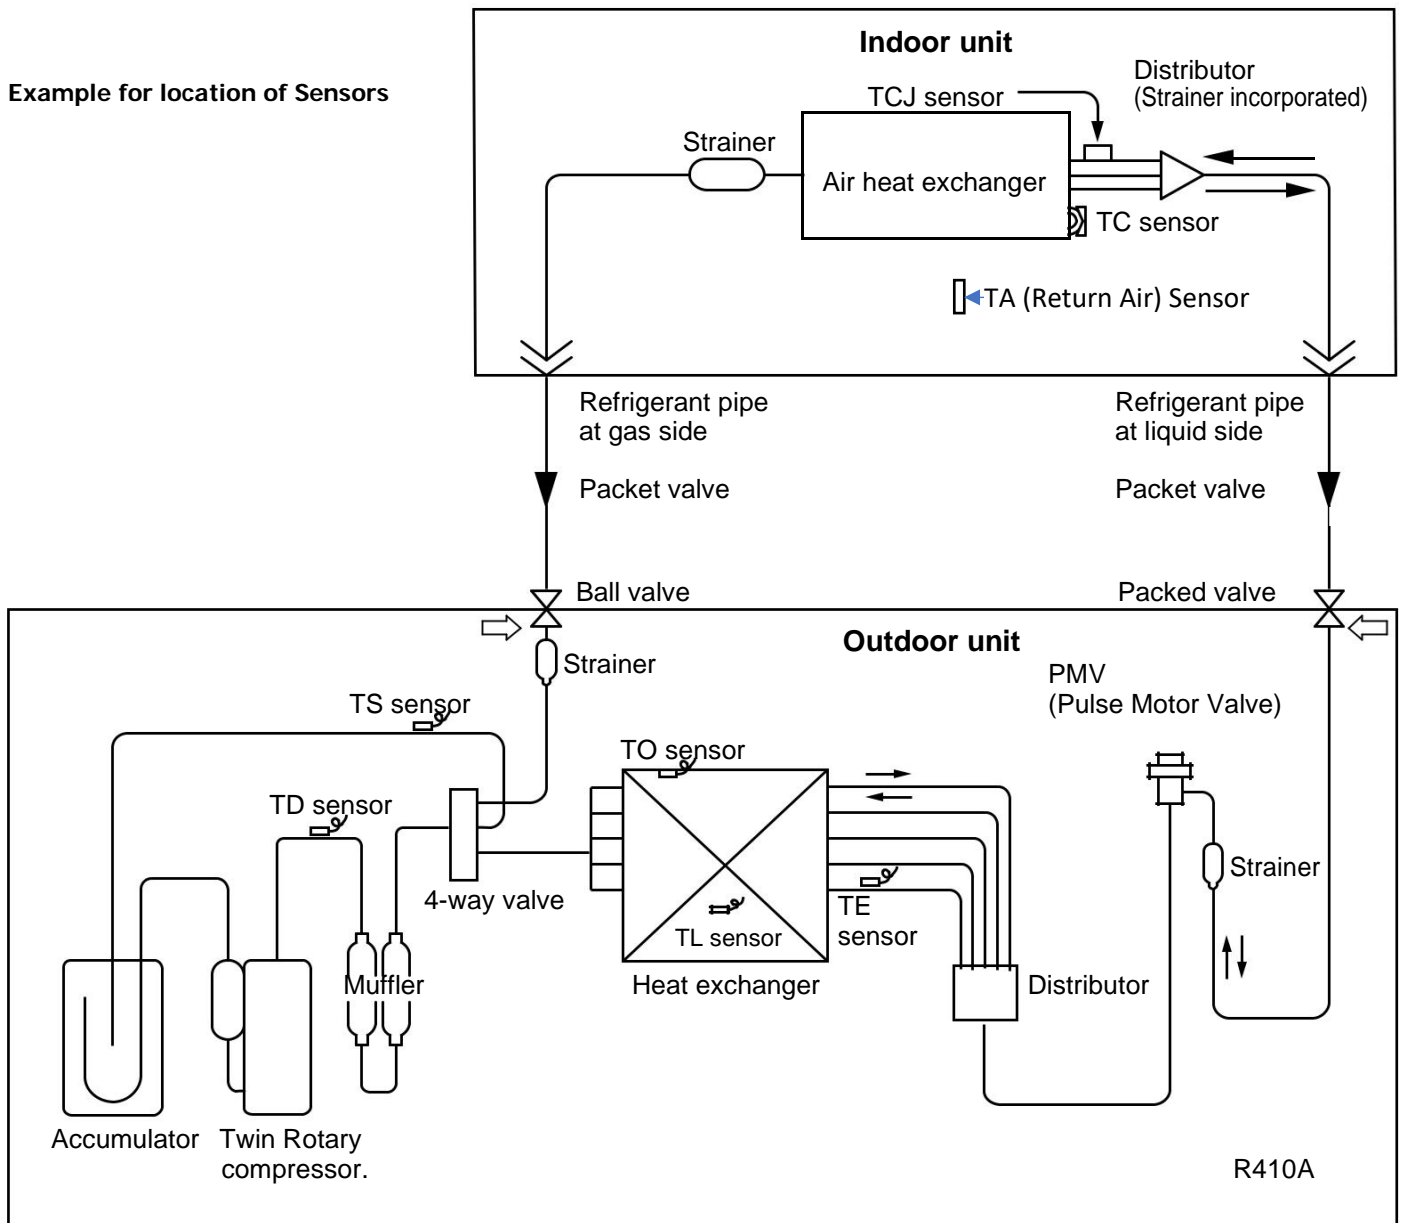



## Indoor Lamp Indication for Trouble Shooting - RAV 6/7KRT (High Wall Only)

● : Go off, ○ : Go on, ⚡ : Flash (0.5 sec.)

Lamp indication	Check code	Cause of trouble occurrence
Ready: ●, Timer: ●, Operation: ● No indication at all	—	Power supply OFF or miswiring between receiving unit and indoor unit.
Ready: ●, Timer: ●, Operation: ⚡ (Flash)	E01	Receiving error } Receiving unit
	E02	Sending error } Miswiring or wire connection error between receiving unit and indoor unit
	E03	Communication stop }
	E08	Duplicated indoor unit No. } Setup error
	E09	Duplicated master units of remote controller }
	E10	Communication error between CPUs on indoor unit P.C. board
E18	Wire connection error between indoor units, Indoor power OFF (Communication stop between indoor master and follower or between main and sub indoor twin)	
Ready: ⚡ (Flash), Timer: ●, Operation: ●	E04	Miswiring between indoor unit and outdoor unit or connection error (Communication stop between indoor and outdoor units)
Ready: ⚡ (Flash), Timer: ⚡ (Flash), Operation: ●	P01	Indoor AC fan error
	P10	Overflow was detected. Protective device of indoor unit worked.
	P12	Indoor DC fan error
Ready: ⚡ (Flash), Timer: ●, Operation: ⚡ (Flash)	P03	Outdoor unit discharge temp. error } Protective device of outdoor unit worked. +1
	P04	Outdoor high pressure system error }
	P04	Case thermostat worked }
	P04	Power supply error }
	P05	Power supply error }
	P07	Heat sink overheat error }
	P15	Gas leak detection error }
	P19	4-way valve system error (Indoor or outdoor unit judged.)
	P20	Outdoor unit high pressure protection
	P22	Outdoor unit: Outdoor unit error } Protective device of outdoor unit worked. +1
P26	Outdoor unit: Inverter Idc operation }	
P29	Outdoor unit: Position detection error }	
P31	Stopped because of error of other indoor unit in a group (Check codes of E03/L03/L07/L08)	
Ready: ⚡ (Flash), Timer: ⚡ (Flash), Operation: ⚡ (Flash)	—	During test run
Ready: ⚡ (Flash), Timer: ⚡ (Flash), Operation: ○	—	Disagreement of cool/heat (Automatic cool/heat setting to automatic cool/heat prohibited model, or setting of heating to cooling-only model)

Lamp indication	Check code	Cause of trouble occurrence
Ready: ●, Timer: ⚡ (Flash), Operation: ⚡ (Flash)	F01	Heat exchanger sensor (TCJ) error } Indoor unit sensor error
	F02	Heat exchanger sensor (TC) error }
	F10	Heat exchanger sensor (TA) error }
Ready: ○, Timer: ⚡ (Flash), Operation: ⚡ (Flash)	F04	Discharge temp. sensor (TD) error } Sensor error of outdoor unit +1
	F06	Temp. sensor (TL, TS, TE) error }
	F07	Temp. sensor (TD) error }
	F08	Temp. sensor (TO) error }
	F12	Temp. sensor (TS) error }
	F13	Heat sink sensor (TH) error }
F15	Temp. sensor miswiring (TE, TS)	
Ready: ●, Timer: ⚡ (Flash), Operation: ⚡ (Flash)	F29	Indoor EEPROM error
Ready: ○, Timer: ⚡ (Flash), Operation: ⚡ (Flash)	F31	Outdoor EEPROM error
Ready: ●, Timer: ⚡ (Flash), Operation: ●	H01	Compressor break down } Outdoor compressor system error +1
	H02	Compressor lock }
	H03	Current detection circuit error } Power supply, outdoor P.C. board error
	H04	Case thermostat worked. } Compressor overheat, outdoor wiring error
Ready: ⚡ (Flash), Timer: ●, Operation: ⚡ (Flash)	L03	Duplicated master indoor units } → AUTO address
	L07	There is indoor unit of group connection in individual indoor unit. } * If group construction and address are not normal when power supply turned on, automatically goes to address setup mode.
	L08	Unsetting of group address. }
	L09	Missed setting (Unset indoor capacity)
Ready: ⚡ (Flash), Timer: ○, Operation: ⚡ (Flash)	L10	Unset model type (Service board)
	L20	Duplicated indoor central addresses
	L29	Temp. sensor (TH) error EEPROM error Communication between outdoor MCU Heat sink overheat error Gas leak detection error 4-way valve error
Ready: ⚡ (Flash), Timer: ○, Operation: ⚡ (Flash)	L30	Outside interlock error

The primary judgement to check whether a fault has occurred in the indoor or outdoor unit is carried out with the following method; method to judge the erroneous position by flashing indication on the display part of the indoor unit. The indoor unit monitors the operating status of the air conditioner and the blocked contents of self-diagnosis are displayed restricted to the above cases if a protective circuit works.

### Check Code List (Indoor)

○ : Go on, ◎ : Flash, ● : Go off ALT (Alternate): Alternate flashing when there are two flashing LED SIM (Simultaneous): Simultaneous flashing when there are two flashing LED

#### (Indoor unit detected)

Check code indication	Sensor lamp indication				Representative defective position	Explanation of error contents	Air conditioner operation	
	Block indication						Automatic reset	Operation continuation
Wired remote controller	Ready	Timer	Operation	Flash				
E03	●	●	◎		Regular communication error between indoor and remote controller	No communication from remote controller and network adapter (Also no communication from central control system)	○	×
E04	◎	●	●		Indoor/Outdoor serial error	There is error on serial communication between indoor and outdoor units	○	×
E08	●	●	◎		Duplicated indoor addresses ◇	Same address as yours was detected.	○	×
E18	●	●	◎		Regular communication error between indoor master and follower units	Regular communication between indoor master and follower units is impossible. Communication between twin master (main) and follower (sub) units is impossible.	○	×
F01	●	◎	◎	ALT	Indoor unit, Heat exchanger (TCJ) error	Open/short was detected on heat exchanger (TCJ).	○	×
F02	●	◎	◎	ALT	Indoor unit, Heat exchanger (TC) error	Open/short was detected on heat exchanger (TC).	○	×
F10	●	◎	◎	ALT	Indoor unit, Room temp. sensor (TA) error	Open/short was detected on room temp. sensor (TA).	○	×
F29	●	◎	◎	SIM	Indoor unit, other indoor P.C. board error	EEPROM error (Other error may be detected. If no error, automatic address is repeated.	×	×
L03	◎	●	◎	SIM	Duplicated setting of indoor group master unit ◇	There are multiple master units in a group.	×	×
L07	◎	●	◎	SIM	There is group cable in individual indoor unit. ◇	When even one group connection indoor unit exists in individual indoor unit.	×	×
L08	◎	●	◎	SIM	Unset indoor group address ◇	Indoor group address is unset.	×	×
L09	◎	●	◎	SIM	Unset indoor capacity	Capacity of indoor unit is unset.	×	×
L20	◎	○	◎	SIM	Duplicated central control system address	Duplicated setting of central control system address	○	×
L30	◎	○	◎	SIM	Outside error input to indoor unit (Interlock)	Abnormal stop by outside error (CN80) input	×	×
P12	◎	◎	●	ALT	Indoor unit, DC fan error	Indoor DC fan error (Over-current/Lock, etc.) was detected.	×	×
P19	◎	●	◎	ALT	4-way valve system error	In heating operation, an error was detected by temp. down of indoor heat exchanger sensor.	○	×
P31	◎	●	◎	ALT	Other indoor unit error	Follower unit in group cannot operate by warning from [E03/L03/L07/L08] of master unit.	○	×

◇ When this warning was detected before group construction/address check finish at power supply was turned on, the mode shifts automatically to AUTO address setup mode.

#### (Remote controller detected)

Check code indication	Sensor lamp indication				Representative defective position	Explanation of error contents	Air conditioner operation	
	Block indication						Automatic reset	Operation continuation
Wired remote controller	Ready	Timer	Operation	Flash				
E01	●	●	◎		No master remote controller, Remote controller communication (Receive) error	Signal cannot be received from indoor unit. Master remote controller was not set. (including 2 remote controllers)	—	—
E02	●	●	◎		Remote controller communication (Send) error	Signal cannot be sent to indoor unit.	—	—
E09	●	●	◎		Duplicated master remote controller	In 2-remote controller control, both were set as master. (Indoor master unit stops warning and follower unit continues operation.)	×	△

#### (Central control devices detected)

Check code indication	Sensor lamp indication				Representative defective position	Explanation of error contents	Air conditioner operation	
	Block indication						Automatic reset	Operation continuation
TCC-LINK central	Ready	Timer	Operation	Flash				
C05	Is not displayed. (Common use of remote controller, etc.)				Central control system communication (send) error	Signal sending operation of central control system is impossible. There are multiple same central devices. (AI-NET)	—	—
C06					Central control system communication (receive) error	Signal receiving operation of central control system is impossible.	—	—
C12	—				General-purpose device control interface batched warning	An error on device connected to general-purpose device control interface of exclusive to TCC-LINK/AI-NET	—	—
P30	By warning unit (Above-mentioned)				Group follower unit is defective.	Group follower unit is defective. (For remote controller, above-mentioned [***] details are displayed with unit No.	—	—

**NOTE:** Even for the same contents of error such as communication error, the display of check code may differ according to detection device. When remote controller or central controller detects an error, it is not necessarily related to operation of the air conditioner. In this list, the check codes that outdoor unit detects are not described.



## Indoor Lamp Indication for Trouble Shooting - RAV Series

● : Go off, ○ : Go on, ✱ : Flash (0.5 sec.)

Lamp indication	Check code	Cause of trouble occurrence
Operation Timer Ready ● ● ● No indication at all	—	Power supply OFF or miswiring between receiving unit and indoor unit
Operation Timer Ready ✱ ● ● Flash	E01	Receiving error } Receiving unit } Sending error } Communication stop } Miswiring or wire connection error between receiving unit and indoor unit
	E02	
	E03	
	E08	Duplicated indoor unit No. } Duplicated master units of remote controller } Setup error
	E09	
	E10	Communication error between CPUs on indoor unit P.C. board
E18	Wire connection error between indoor units, Indoor power OFF (Communication stop between indoor master and follower or between main and sub indoor twin)	
Operation Timer Ready ● ● ✱ Flash	E04	Miswiring between indoor unit and outdoor unit or connection error (Communication stop between indoor and outdoor units)
Operation Timer Ready ● ✱ ✱ Alternate flash	P10	Overflow was detected. } Indoor DC fan error } Protective device of indoor unit worked.
	P12	
Operation Timer Ready ✱ ● ✱ Alternate flash	P03	Outdoor unit discharge temp. error } Outdoor high pressure system error } Protective device of outdoor unit worked. ※1
	P04	
	P05	Negative phase detection error } Heat sink overheat error } Gas leak detection error } Outdoor unit error
	P07	
	P15	
	P19	4-way valve system error (Indoor or outdoor unit judged.)
	P20	Outdoor unit high pressure protection
	P22	Outdoor unit: Outdoor unit error } Outdoor unit: Inverter Idc operation } Outdoor unit: Position detection error } Protective device of outdoor unit worked. ※1
	P26	
P29		
P31	Stopped because of error of other indoor unit in a group (Check codes of E03/L03/L07/L08)	
Operation Timer Ready ✱ ✱ ✱ Simultaneous flash	—	During test run
Operation Timer Ready ○ ✱ ✱ Alternate flash	—	Disagreement of cool/heat (Automatic cool/heat setting to automatic cool/heat prohibited model, or setting of heating to cooling-only model)

Lamp indication	Check code	Cause of trouble occurrence
Operation Timer Ready ✱ ✱ ● Alternate flash	F01	Heat exchanger sensor (TCJ) error Heat exchanger sensor (TC) error Heat exchanger sensor (TA) error Indoor unit sensor error
	F02	
	P10	
Operation Timer Ready ✱ ✱ ○ Alternate flash	F04	Discharge temp. sensor (TD) error Temp. sensor (TE) error Temp. sensor (TL) error Temp. sensor (TO) error Temp. sensor (TS) error Temp. sensor (TH) error Temp. Sensor miswiring (TE, TS) Sensor error of outdoor unit ※1
	F06	
	F07	
	F08	
	F12	
	F13	
F15		
Operation Timer Ready ✱ ✱ ● Simultaneous flash	F29	Indoor EEPROM error
Operation Timer Ready ✱ ✱ ○ Simultaneous flash	F31	Outdoor EEPROM error
Operation Timer Ready ● ✱ ● Flash	H01	Compressor break down Compressor lock Current detection circuit error Case thermostat worked. Outdoor compressor system error ※1 Outdoor unit low pressure system error
	H02	
	H03	
	H04	
	H06	
Operation Timer Ready ✱ ● ✱ Simultaneous flash	L03	Duplicated master indoor units There is indoor unit of group connection → AUTO address in individual indoor unit. Unsetting of group address Missed setting (Unset indoor capacity) * If group construction and address are not normal when power supply turned on, automatically goes to address setup mode.
	L07	
	L08	
	L09	
Operation Timer Ready ✱ ○ ✱ Simultaneous flash	L10	Unset model type (Service board) Duplicated indoor central addresses Outdoor unit and other error Outside interlock error Negative phase error Others
	L20	
	L29	
	L30	
	L31	

The primary judgment to check whether a fault has occurred in the indoor unit or outdoor unit is carried out with the following method; method to judge the erroneous position by flashing indication on the display part of the indoor unit. The indoor unit monitors the operating status of the air conditioner and the blocked contents of self-diagnosis are displayed restricted to the above cases if a protective circuit works.

## Indoor Lamp Indication for Trouble Shooting - RAV Series

### Check Code List (Indoor)

○ : Go on, ◎ : Flash, ● : Go off ALT (Alternate): Alternate flashing when there are two flashing LED SIM (Simultaneous): Simultaneous flashing when there are two flashing LED

#### (Indoor unit detected)

Check code indication TCC-LINK central & Wired remote controller	Indoor Sensor lamp indication			Representative defective position	Explanation of error contents	Air conditioner operation	
	Block indication					Automatic reset	Operation continuation
	Operation Timer	Ready	Flash				
E03	◎	●	●	Regular communication error between indoor and remote controller	No communication from remote controller and network adapter (Also no communication from central control system)	○	×
E04	●	●	◎	Indoor/Outdoor serial error	There is error on serial communication between indoor and outdoor units	○	×
E08	◎	●	●	Duplicated indoor addresses	◇ Same address as yours was detected.	○	×
E10	◎	●	●	Communication error between indoor MCU	MCU communication error between main motor and micro computer	○	×
E18	◎	●	●	Regular communication error between indoor master and follower units	Regular communication between indoor master and follower units is impossible, Communication between twin master (main) and follower (sub) units is impossible.	○	×
F01	◎	◎	●	ALT Indoor unit, Heat exchanger (TCJ) error	Open/short was detected on heat exchanger (TCJ).	○	×
F02	◎	◎	●	ALT Indoor unit, Heat exchanger (TC) error	Open/short was detected on heat exchanger (TC).	○	×
F10	◎	◎	●	ALT Indoor unit, Room temp. sensor (TA) error	Open/short was detected on room temp. sensor (TA).	○	×
F29	◎	◎	●	SIM Indoor unit, other indoor P.C. board error	EEPROM error (Other error may be detected. If no error, automatic address is repeated.	×	×
L03	◎	●	◎	SIM Duplicated setting of indoor group master unit	◇ There are multiple master units in a group.	×	×
L07	◎	●	◎	SIM There is group cable in individual indoor unit.	◇ When even one group connection indoor unit exists in individual indoor unit.	×	×
L08	◎	●	◎	SIM Unset indoor group address	◇ Indoor group address is unset.	×	×
L09	◎	●	◎	SIM Unset indoor capacity	Capacity of indoor unit is unset.	×	×
L20	◎	○	◎	SIM Duplicated central control system address	Duplicated setting of central control system address	○	×
L30	◎	○	◎	SIM Outside error input to indoor unit (Interlock)	Abnormal stop by outside error (CN80) input	×	×
P01	●	◎	◎	ALT Indoor unit, AC fan error	An error of indoor AC fan was detected. (Fan motor thermal relay worked.)	×	×
P10	●	◎	◎	ALT Indoor unit, overflow detection	Float switch worked.	×	×
P12	●	◎	◎	ALT Indoor unit, DC fan error	Indoor DC fan error (Over-current/Lock, etc.) was detected.	×	×
P19	◎	●	◎	ALT 4-way valve system error	In heating operation, an error was detected by temp. down of indoor heat exchanger sensor.	○	×
P31	◎	●	◎	ALT Other indoor unit error	Follower unit in group cannot operate by warning from [E03/L03/L07/L08] of master unit.	○	×

◇ When this warning was detected before group construction/address check finish at power supply was turned on, the mode shifts automatically to AUTO address setup mode.

#### (Remote controller detected)

Check code indication Wired remote controller	Indoor Sensor lamp indication			Representative defective position	Explanation of error contents	Air conditioner operation	
	Block indication					Automatic reset	Operation continuation
	Operation Timer	Ready	Flash				
E01	◎	●	●	No master remote controller, Remote controller communication (Receive) error	Signal cannot be received from indoor unit. Master remote controller was not set. (including 2 remote controllers)	—	—
E02	◎	●	●	Remote controller communication (Send) error	Signal cannot be sent to indoor unit.	—	—
E09	◎	●	●	Duplicated master remote controller	In 2-remote controller control, both were set as master. (Indoor master unit stops warning and follower unit continues operation.)	×	△

#### (Central control devices detected)

Check code indication TCC-LINK central	Indoor Sensor lamp indication			Representative defective position	Explanation of error contents	Air conditioner operation	
	Block indication					Automatic reset	Operation continuation
	Operation Timer	Ready	Flash				
C05	Is not displayed. (Common use of remote controller, etc.)			Central control system communication (send) error	Signal sending operation of central control system is impossible. There are multiple same central devices. (AI-NET)	—	—
C06				Central control system communication (receive) error	Signal receiving operation of central control system is impossible.	—	—
C12	—			General-purpose device control interface batched warning	An error on device connected to general-purpose device control interface of exclusive to TCC-LINK/AI-NET	—	—
P30	By warning unit (Above-mentioned)			Group follower unit is defective.	Group follower unit is defective. (For remote controller, above-mentioned [***] details are displayed with unit No.	—	—

**NOTE:** Even for the same contents of error such as communication error, the display of check code may differ according to detection device. When remote controller or central controller detects an error, it is not necessarily related to operation of the air conditioner. In this list, the check codes that outdoor unit detects are not described.



## Indoor Lamp Indication for Trouble Shooting - RAV Series

### Check Code List (Outdoor)

○ : Go on, ◎ : Flash, ● : Go off  
 ALT (Alternate): Alternate flashing when there are two flashing LED    SIM (Simultaneous): Simultaneous flashing when there are two flashing LED

Remote controller indication	Indoor Sensor lamp part				Representative defective position	Detection	Explanation of error contents	Automatic reset	Operation continuation
	Block indication								
	Operation	Timer	Ready	Flash					
F04	◎	◎	○	ALT	Outdoor unit Discharge temp. sensor (TD) error	Outdoor	Open/Short of discharge temp. sensor was detected.	×	×
F06	◎	◎	○	ALT	Outdoor unit Temp. sensor (TE, TS, TL) error	Outdoor	Open/Short of heat exchanger temp. sensor was detected. Miswiring between TE sensor and TS sensor	×	×
F08	◎	◎	○	ALT	Outdoor unit Outside temp. sensor (TO) error	Outdoor	Open/Short of outside temp. sensor was detected.	○	○
F07	◎	◎	○	ALT	Outdoor unit Temp. sensor (TL) error	Outdoor	Open/Short of heat exchanger temp. sensor was detected.	×	×
F12	◎	◎	○	ALT	Outdoor unit Temp. sensor (TS) error	Outdoor	Open/Short of suction temp. sensor was detected.	×	×
F13	◎	◎	○	ALT	Outdoor unit Temp. sensor (TH) error	Outdoor	Open/Short of heat sink temp. sensor (Board installed) was detected.	×	×
F15	◎	◎	○	ALT	Outdoor unit Misconnection of temp. sensor (TE, TS)	Outdoor	Misconnection of outdoor heat exchanger temp. sensor and suction temp. sensor was detected.	×	×
F31	◎	◎	○	SIM	Outdoor unit EEPROM error	Outdoor	Outdoor P.C. board part (EEPROM) error was detected.	×	×
H01	●	◎	●		Outdoor unit Compressor break down	Outdoor	When reached min-Hz by current release control, short-circuited current (Idc) after DC excitation was detected.	×	×
H02	●	◎	●		Outdoor unit Compressor lock	Outdoor	Compressor lock was detected.	×	×
H03	●	◎	●		Outdoor unit Current detection circuit error	Outdoor	Current detection circuit error	×	×
H04	●	◎	●		Outdoor unit Case thermostat operation	Outdoor	Case thermostat operation was detected.	×	×
L10	◎	○	◎	SIM	Outdoor unit Setting error of service P.C. board type	Outdoor	When outdoor service P.C. board was used, model type select jumper setting was inappropriate.	×	×
L29	◎	○	◎	SIM	Outdoor unit Other outdoor unit error	Outdoor	1) Defective parts on outdoor P.C. board (MCU communication, EEPROM, TH sensor error) 2) When outdoor service P.C. board was used, model type selection was inappropriate. 3) Other error (Heat sink abnormal overheat, gas leak, 4-way valve inverse error) was detected.	×	×
P03	◎	●	◎	ALT	Outdoor unit Discharge temp. error	Outdoor	Error was detected by discharge temp. release control.	×	×
P04	◎	●	◎	ALT	Outdoor unit High pressure system error, Power supply voltage error	Outdoor	When case thermostat worked, error was detected by high release control from indoor/ outdoor heat exchanger temp. sensor. Power supply voltage error	×	×
P05	◎	●	◎	ALT	Power supply error	Outdoor	Power supply voltage error	×	×
P07	◎	●	◎	ALT	Outdoor unit Heat sink overheat	Outdoor	Abnormal overheat was detected by outdoor heat sink temp. sensor.	×	×
P15	◎	●	◎	ALT	Gas leak detection	Outdoor	Abnormal overheat of discharge temp. or suction temp. was detected.	×	×
P20	◎	●	◎	ALT	Outdoor unit High pressure system error	Outdoor	Error was detected by high release control from indoor/outdoor heat exchanger temp. sensor.	×	×
P22	◎	●	◎	ALT	Outdoor unit Outdoor fan error	Outdoor	Error (Over-current, lock, etc.) was detected on outdoor fan drive circuit.	×	×
P26	◎	●	◎	ALT	Outdoor unit Inverter Idc operation	Outdoor	Short-circuited protective operation of compressor drive circuit element (G-Tr /IGBT) worked.	×	×
P29	◎	●	◎	ALT	Outdoor unit Position detection error	Outdoor	Position detection error of compressor motor was detected.	×	×
E01	◎	●	●		No remote controller master unit Remote controller communication error	Remote controller	Signal was not received from indoor unit. Main remote controller was not set. (including 2 remote controllers)	—	—
E02	◎	●	●		Remote controller send error	Remote controller	Signal cannot be sent to indoor unit.	—	—
E03	◎	●	●		Regular communication error between indoor and remote controller	Indoor	No communication from remote controller and network adapter	○	×
E04	●	●	◎		Indoor/Outdoor serial error	Indoor	Serial communication error between indoor and outdoor	○	×
E08	◎	●	●		Duplicated indoor addresses	◇	Indoor Same address as yours was detected.	○	×
E09	◎	●	●		Duplicated main remote controllers	Remote controller	In 2-remote controller control, both were set as master. (Indoor master unit stops warning and follower unit continues operation.)	×	×
E10	◎	●	●		Communication error between CPU	Indoor	MCU communication error between main motor and micro computer	○	△
E18	◎	●	●		Regular communication error between master and follower indoor units	Indoor	Regular communication was impossible between master and follower indoor units. Communication between twin master (Main unit) and follower (sub unit) was impossible.	○	×
L03	◎	●	◎	SIM	Duplicated indoor master units	◇	Indoor There are multiple master units in a group.	×	×
L07	◎	●	◎	SIM	There is group cable in individual indoor unit.	◇	Indoor When even one group connection indoor unit exists in individual indoor unit	×	×
L08	◎	●	◎	SIM	Unset indoor group address	◇	Indoor Indoor address group was unset.	×	×
L09	◎	●	◎	SIM	Unset indoor capacity	Indoor	Capacity of indoor unit was unset.	×	×
L30	◎	○	◎	SIM	Outside error input to indoor unit (Interlock)	Indoor	Abnormal stop by CN80 outside error input	×	×
P19	◎	●	◎	ALT	4-way valve inverse error	Indoor Outdoor	In heating operation, error was detected by temp. down of indoor heat exchanger or temp. up of TE, TS.	○	×

◇ When this warning was detected before group construction/address check finish at power supply was turned on, the mode shifts automatically to AUTO address setup mode.

## Indoor Lamp Indication for Trouble Shooting - RAV Series

○ : Go on, ◎ : Flash, ● : Go off

ALT (Alternate): Alternate flashing when there are two flashing LED SIM (Simultaneous): Simultaneous flashing when there are two flashing LED

Remote controller indication	Indoor Sensor lamp part			Representative defective position	Detection	Explanation of error contents	Automatic reset	Operation continuation		
	Block indication									
	Operation	Timer	Ready						Flash	
F01	◎	◎	●	ALT	Indoor unit	Heat exchanger sensor (TCJ) error	Indoor	Open/Short of heat exchanger (TCJ) was detected.	○	×
F02	◎	◎	●	ALT	Indoor unit	Heat exchanger sensor (TC) error	Indoor	Open/Short of heat exchanger (TC) was detected.	○	×
F10	◎	◎	●	ALT	Indoor unit	Room temp. sensor (TA) error	Indoor	Open/Short of room temp. (TA) was detected.	○	×
F29	◎	◎	●	SIM	Indoor unit	Other indoor PC. board error	Indoor	EEPROM error (Other error may be detected. If no error, automatic address is repeated.)	×	×
P01	●	◎	◎	ALT	Indoor unit	Indoor fan error	Indoor	Indoor AC fan error was detected. (Fan thermal relay worked.)	×	×
P10	●	◎	◎	ALT	Indoor unit	Overflow detection	Indoor	Float switch worked.	×	×
P12	●	◎	◎	ALT	Indoor unit	Indoor fan error	Indoor	Indoor fan error (Over-current / Lock, etc.) was detected.	×	×
P31	◎	●	◎	ALT	Other indoor unit error		Indoor	Other indoor under condition of warning in group. E03/L07/L03/L08 warning	○	×
—	By unit with warning No.			ALT	Error in indoor group		Network adapter	Sub remote controller error in a group (Details of remote controller are displayed with unit No. Only central control side is displayed.)	—	—
—	—				LAN system communication error		Network adapter/Center	Communication error of central control system signal * Is not displayed on the remote controller	○	○
L20	◎	○	◎	SIM	LAN system communication error		Network adapter/Center	Duplicated indoor address of central control system communication	○	×
—	—				There are multiple communication adapters.		Network adapter	There are multiple communication adapters on remote controller communication line.	○	○

Download **Toshiba Fault Codes** from your Apps store.

Example: 1

Local controller displaying fault code **E04**  
Enter **E04** and select **Find Fault**



VRF fault codes can be model specific and may require condenser model reference in Fault Code

Example: 2

Local controller displaying fault code **L29**  
Condenser displaying sub-code **07**  
Model of condenser **MMY-MAP1604HT8-E**  
Enter **L29071604** and select **Find Fault**

**Note:** codes can be entered with or without character spaces, spaces ignored in text strings.

### Apps Store Fault Codes – All Commercial & VRF Systems

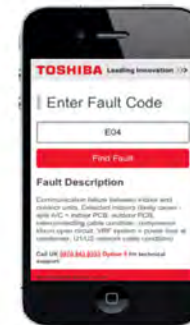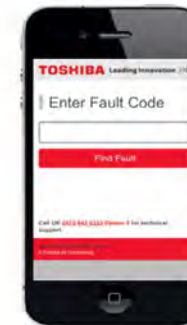

Fault code diagnosis apps now available  
For  
Apple iPhone & Android





## Fault Codes – All Commercial & VRF Systems

**Do Not** turn off the power supply before reading the fault codes, doing so will clear the diagnostic memory.

Caution must be taken when removing the access covers, as high voltages are present.

Fault diagnosis is available at three locations within the Air Conditioning system. :-

- |  |  |
|--|--|
| 1 Remote Controller - press the check button                 | 2 Multi Controller - rotate the display switch to position 1           |
| 3 Central Controller - press the check button (if installed) | 4 Outdoor Unit Switch position (variable dependent upon model): –      |
|  | 2 Pipe Super Multi 2, 3 & 8;      3 Pipe Super Multi 2 & 0;            |
|  | 3 Pipe SMI 2 & 0                      2 Pipe Modular Multi MMY 1, 1, 1 |
|  | 3 Pipe Modular Multi MMY 1, 1, 1                                       |

Code	Fault Description
<b>04</b>	Split A/C equipment indoor to outdoor communication failure / VRF equipment could also be attributed to communication breakdown between condenser PCB's. Likely cause Indoor PCB / condenser PCB / Interconnecting cable damage / transformer used to power condenser PCB
<b>08</b>	Reverse change in temperature. Detected by indoor evaporator sensor (TC). Likely cause 4-way valve. 4 way reversing valve energised for heating operation only
<b>09</b>	Frost conditions detected / No temperature change. Detected indoors by evaporator sensor (TC). Likely cause poor airflow, lack of refrigerant, overheating compressor
<b>11</b>	Indoor fan trouble. Detected indoors. Likely cause fan motor, PCB
<b>12</b>	EEPROM Failure on PCB. Detected indoors (replace indoor PCB)
<b>14</b>	Inverter compressor PCB short circuit. Detected at outdoor. Likely cause blown fuses supplying inverter pack, faulty IPDU (inverter board) or component within inverter pack, electrical fault on inverter compressor
<b>15</b>	Multi-Control box error. Detected indoors (interrogate Multi-Control box for additional faults by setting display switch @ position 1)
<b>17</b>	Abnormal current detection on inverter compressor. Detected at outdoor. (replace IPDU PCB (inverter board))
<b>18</b>	Condenser coil sensor fault. Detected indoors. Likely cause TE/TE1 sensor condition or outdoor PCB fault sensor value 20°C=12.5k ohms
<b>19</b>	Liquid or compressor discharge sensor fault. Likely cause TL, TD sensor condition or PCB fault TL sensor value 20°C=12.5k ohms TD sensor value 20°C=63k ohms
<b>20</b>	Condenser PCB faulty (replace main PCB)
<b>21</b>	2 pipe VRF & Split A/C equipment High Pressure switch activation 425psi-29bar _ 3 pipe VRF equipment, interrogate condenser PCB for additional fault code. Detected at outdoor. Likely cause split A/C equipment faulty H.P. switch, restriction in refrigerant flow, fan motor failure, poor airflows / VRF equipment set condenser interface PCB switches as follows SW1 @ position 2 & SW2 @ position 0 (see sub codes Er21 or ErAd)
<b>22</b>	Excessive high pressure. Detected at outdoor. Likely cause abnormal characteristics of Pd transducer, refrigerant restriction/blockage
<b>80</b>	Multi-Control box Th(A) sensor fault. Likely cause TH(A) sensor or M/C box PCB sensor value 20°C=12.5k ohms
<b>81</b>	Multi-Control box Th(B) sensor fault. Likely cause TH(B) sensor or M/C box PCB sensor value 20°C=12.5k ohms
<b>82</b>	Multi-Control box Th(C) sensor fault. Likely cause TH(C) sensor or M/C box PCB sensor value 20°C=12.5k ohms
<b>83</b>	Multi-Control box Th(D) sensor fault. Likely cause TH(D) sensor or M/C box PCB sensor value 20°C=12.5k ohms
<b>84</b>	Multi-Control box Th(X) sensor fault. Likely cause TH(X) sensor or M/C box PCB sensor value 20°C=12.5k ohms

Code	Fault Description
87	Phase missing phase. Detected at outdoor. Likely cause abnormal power supply
88	Multi-Control box does not recognise condenser capacity. Likely cause interconnecting cable damage, outdoor PCB fault
89	Indoor capacity too high. Likely cause loss of combination within group of modularised condensers
93	Indoor coil sensor fault. Detected indoors. Likely cause TC1 sensor condition or indoor PCB fault sensor value 20°C=12.5k ohms
94	Indoor coil sensor fault. Detected indoors. Likely cause TC2 sensor condition or indoor PCB fault sensor value 20°C=12.5k ohms
95	Communication failure on P&Q network (indoor/outdoor communication). Detected indoors & outdoors. Likely cause network cable condition, PCB failure indoor or outdoor
96	Indoor unit count too high. Detected at outdoor. Likely cause indoor capacity vs. outdoor capacity Incorrect, too many indoor units connected
97	Central control communication error. Detected at central controller & indoors. Likely cause indoor power failure, central address error, cable damage
98	Duplicated zone address. Likely cause incorrectly assigned central control addresses
99	No communication from indoor to remote controller. Detected by hard-wired remote controller. Likely cause faulty indoor PCB, remote controller or cable damage
0b	Indoor float switch open circuit as result of high condensation levels within drip tray. Detected indoors. Likely cause faulty float switch, faulty lift pump, debris blocking drain
0c	Return air sensor fault. Detected indoors. Likely cause TA sensor condition or indoor PCB fault sensor value 20°C=12.5k ohms
0d	Coil sensor fault. Detected indoors. Likely cause TC sensor condition or indoor PCB fault sensor value 20°C=12.5k ohms
1C	Outdoor error. Detected indoors (interrogate condenser for additional faults)
1d	High Inverter dc current. Detected at outdoor. Likely cause imbalance in compressor voltage, excessive amps by inverter compressor
1E	High compressor discharge temperature. Detected at outdoor. Likely cause low refrigerant, poor refrigerant flow, poor airflows, TD sensor condition sensor value 20°C=63k ohms
1F	High Inverter ac current. Detected at outdoor. Likely cause imbalance in compressor voltage, excessive amps by inverter compressor
8d	Outdoor unit quantity fallen (loss of communication between condensers). Detected at outdoor. Likely cause power interruption, BUS communication cable condition
8E	Outdoor unit's quantity too high. Detected at outdoor. Likely cause too many condensers connected
8F	Outdoor unit address incorrect. Detected at outdoor. Likely cause multiple modularised condenser having SW 9 ON, Interface PCB failure
9A	No temperature change on evaporator. Detected by indoor evaporator sensor TC1. Likely cause miss-wiring, restriction in refrigerant flow, lack of refrigerant
9F	Insufficient temperature change on evaporator. Detected indoors. Likely cause miss-wiring, restriction in refrigerant flow, lack of refrigerant, TC1,TC2 & TA sensor condition sensor value 20°C=12.5k ohms
A0	Compressor discharge sensor fault. Detected at outdoor. Likely cause TD1/ThD1 sensor condition or Interface PCB sensor value 20°C=63k ohms
A1	Compressor discharge sensor fault. Detected at outdoor. Likely cause TD2/ThD2 sensor condition or Interface PCB sensor value 20°C=63k ohms
A2	Compressor suction sensor fault. Detected at outdoor. Likely cause TS1/ThS sensor condition or interface PCB sensor value 20°C=12.5k ohms
A6	High compressor discharge temperature. Detected at outdoor. by TD1. Likely cause low refrigerant, poor refrigerant flow and airflows & TD2 sensor condition sensor value 20°C=63k ohms
A7	High compressor suction temperature > 40°C. Detected at outdoor. Likely cause severe gas shortage, TS sensor condition, interface PCB sensor value 20°C=12.5k ohms



Code	Fault Description
<b>AA</b>	High side pressure sensor fault. Detected at outdoor. (Replace Pd pressure transducer)
<b>Ab</b>	Pressure transducer error. Detected at outdoor. Likely cause abnormal running pressures, abnormal PS / Pd characteristics, interface PCB
<b>AE</b>	High compressor discharge temperature @ low inverter speed. Detected at outdoor. Likely cause TD1 sensor condition, insufficient refrigerant sensor value 20°C=63k ohms
<b>AF</b>	Phase rotation incorrect. Detected at outdoor. Likely cause abnormal phase order, missing phase to outdoor unit
<b>b4</b>	Low pressure transducer error or misreading fault. Detected at outdoor. Likely cause incorrect characteristics of suction pressure transducer (PS, interface PCB faulty)
<b>b5</b>	External input activation, refrigerant leak detection system (Call Toshiba's technical helpline for further details 0870 843 0333)
<b>b6</b>	External input activation, refrigerant leak detection system (Call Toshiba's technical helpline for further details 0870 843 0333)
<b>b7</b>	Indoor group follower error. Detected at central controller (interrogate local controller by pressing check for additional fault codes)
<b>b9</b>	Pressure sensor fault. Detected indoors. Likely cause evaporator pressure sensor unplugged, pressure sensor open circuit replace sensor
<b>bb</b>	High compressor discharge temperature. Detected at outdoor. by TD2. Likely cause low refrigerant, poor refrigerant flow and airflows & TD2 sensor condition sensor value 20°C=63k ohms
<b>bE</b>	Low pressure trip. Detected outdoor by PS transducer. Likely cause suction pressure transducer condition (PS), interface PCB fault restriction in refrigerant flow, lack of refrigerant
<b>C05</b>	Command sending error. Detected on Central Controller. Likely cause power loss at indoor unit group, network cable condition)
<b>C06</b>	Command receiving error. Detected on Central Controller. Likely cause power loss at indoor unit group, network cable condition)
<b>d1</b>	Master condenser setup alarm. Detected at outdoor. Likely cause multiple inverter outdoor units connected, faulty interface PCB)
<b>d2</b>	Fault within follower condenser. Detected at outdoor. (retrieve additional fault code from follower condensers)
<b>d3</b>	IPDU PCB overheat (inverter board). Detected at outdoor. Likely cause clogged heat-sink fins, poorly secured or faulty IPDU PCB)
<b>d4</b>	Oil sensor fault. Detected at outdoor. Likely cause TK1 sensor condition or outdoor PCB fault sensor value 20°C=63k ohms)
<b>d5</b>	Oil sensor fault. Detected at outdoor. Likely cause TK2 sensor condition or outdoor PCB fault sensor value 20°C=63k ohms)
<b>d6</b>	Oil sensor fault. Detected at outdoor. Likely cause TK3 sensor condition or outdoor PCB fault sensor value 20°C=63k ohms)
<b>d7</b>	Low oil detection. Detected at outdoor. Likely cause TK1, TK2 & TK3 sensor condition, interface PCB, lack of refrigerant sensor value 20°C=63k ohms)
<b>d8</b>	Oil temperature alarm. Detected at outdoor. Likely cause TK1 sensor location or condition, outdoor PCB fault sensor value 20°C=63k ohms
<b>d9</b>	Oil temperature alarm. Detected at outdoor. Likely cause TK2 sensor location or condition, outdoor PCB fault sensor value 20°C=63k ohms
<b>dA</b>	Abnormal overheat of heat-sink. Detected at outdoor. Likely cause clogged heat-sink fins, poorly secured or faulty IPDU board
<b>db</b>	No oil flow detected. Detected at outdoor. Likely cause TK1, TK2 & TK3 sensor location or condition, interface PCB, blockage within SV3C sensor value 20°C=63k ohms
<b>dC</b>	High temperature oil alarm. Detected at outdoor. Likely cause TK1 sensor condition, interface PCB fault, high ambient running conditions >43°C sensor value 20°C=63k ohms
<b>dd</b>	Temperature change when condensers in off cycle. Detected at outdoor. Likely cause PMV passing within condenser, discharge & suction pressure transducer error (PS & Pd characteristics), interface PCB fault
<b>dE</b>	Indoor unit automatic addressing failure. Detected at outdoor. Likely cause indoor PCB configuration error, indoor PCB faulty
<b>dF</b>	Outdoor unit automatic address failure. Detected at outdoor. Likely cause interface PCB fault

Code	Fault Description
E01	Communication error between indoor unit and remote controller. Detected by remote controller. Likely cause indoor PCB, remote controller, incorrect switch position on rear of remote controller, all switches normally down
E02	Sending error of local remote controller. Detected by remote controller. Likely cause replace remote controller
E03	Communication error between indoor unit and central remote controller. Detected indoors. Likely cause indoor network adapter, central remote controller
E04	Communication failure between indoor and outdoor units. Detected indoors. Likely cause split A/C=indoor PCB, outdoor PCB, interconnecting cable condition, compressor klixon open circuit. VRF system=power loss at condenser, U1/U2 network cable condition
E06	Decrease in quantity of indoor units. Detected indoors. Likely cause power loss at indoor unit, indoor PCB fault, A&B controller cable condition
E07	Communication failure between indoor and outdoor units. Detected at outdoor. Likely cause interconnecting cable condition, outdoor PCB switch position SW30 bit 1 & 2 must be placed in ON position for test
E08	Duplicated indoor address. Detected indoors. Likely cause incorrect setting of BUS addresses when under central control
E09	Duplicated master remote controllers. Detected indoors. Likely cause two local remote controllers connected on A&B network
E1	Activation of high-pressure switch on D.O.L (Fixed speed) compressor 1. Detected at outdoor. Likely cause fan motor trouble, poor airflows, restricted refrigerant flow
e1 80	Multi-Control box 1 Th(A) sensor fault. Likely cause TH(A) sensor or M/C box PCB sensor value 20°C=12.5k ohms
e1 81	Multi-Control box 1 Th(B) sensor fault. Likely cause TH(B) sensor or M/C box PCB sensor value 20°C=12.5k ohms
e1 82	Multi-Control box 1 Th(C) sensor fault. Likely cause TH(C) sensor or M/C box PCB sensor value 20°C=12.5k ohms
e1 83	Multi-Control box 1 Th(D) sensor fault. Likely cause TH(D) sensor or M/C box PCB sensor value 20°C=12.5k ohms
e1 84	Multi-Control box 1 Th(X) sensor fault. Likely cause TH(X) sensor or M/C box PCB sensor value 20°C=12.5k ohms
E10	Communication Error at indoor PCB. Detected indoors. Likely cause replace indoor PCB
E12	Automatic addressing error. Detected at outdoor. Likely cause incorrect self-addressing sequence, repeat self-addressing procedure. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
E12 01	Automatic addressing error. Detected at outdoor. Indoor / Outdoor communication
E12 02	Automatic addressing error. Detected at outdoor. Outdoor / Outdoor communication
E15	Automatic self-addressing failure. Detected at outdoor. Likely cause SW30 bit 1 & 2 in OFF position, switch both ON before self-addressing commenced, interface PCB failure
E16	Indoor unit count or capacity to high. Detected at outdoor. Likely cause if condenser PCB displays sub code 00=indoor capacity vs. condenser to high. If sub code at condenser reads 01=indoor unit count/quantity to high. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
E16 00	Indoor unit capacity to high. Detected at outdoor. Likely cause indoor unit capacity to high vs. condenser capacity
E16 01	Indoor unit count to high. Detected at outdoor. Likely cause indoor unit count to high vs. outdoor upper limit
E18	Communication failure between indoor units. Detected indoors. Likely cause indoor power loss, A&B controller cable condition. Twin, triple & Quad E18 can result from E04 fault code
E19	Outdoor header error. Detected at outdoor. Likely cause if condenser PCB displays sub code 00=power loss to indoor units or U1/U2 network cable condition. If sub code reads 01=incorrect wiring between modularised condensers. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.

Code	Fault Description
<b>E19 00</b>	Outdoor header error. Detected at outdoor. Likely cause power loss to indoor units, U1/U2 network cable condition, SW30 bit 1 & 2 must be ON to test
<b>E19 01</b>	Outdoor header error. Detected at outdoor. Likely cause incorrect wiring between modularised condensers
<b>e2 80</b>	Multi-Control box 2 Th(A) sensor fault. Likely cause TH(A) sensor or M/C box PCB sensor value 20°C=12.5k ohms
<b>e2 81</b>	Multi-Control box 2 Th(B) sensor fault. Likely cause TH(B) sensor or M/C box PCB sensor value 20°C=12.5k ohms
<b>e2 82</b>	Multi-Control box 2 Th(C) sensor fault. Likely cause TH(C) sensor or M/C box PCB sensor value 20°C=12.5k ohms
<b>e2 83</b>	Multi-Control box 2 Th(D) sensor fault. Likely cause TH(D) sensor or M/C box PCB sensor value 20°C=12.5k ohms
<b>e2 84</b>	Multi-Control box 2 Th(X) sensor fault. Likely cause TH(X) sensor or M/C box PCB sensor value 20°C=12.5k ohms
<b>E20</b>	One or more systems connected on network during self-addressing procedure. Detected at outdoor. Likely cause if condenser PCB displays sub code 01= multiple outdoor systems connected on U3/U4 network, miss-wiring or central control relay connector in-place. If sub code reads 02= indoor units from other line connected, miss-wiring or central control relay connector in-place. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
<b>E20 01</b>	Multiple indoor system line numbers connected on network during self-addressing procedure. Detected at outdoor. Likely cause miss-wiring of indoor network cable, central control relay connector together during self-address
<b>E20 02</b>	Multiple outdoor system numbers connected on network during self-address procedure. Detected at outdoor. Likely cause miss-wiring of outdoor units, central control relay/plug connected during self-address
<b>E23</b>	Communication error between outdoor units. Detect outdoors. Likely cause U5/U6 cable condition, interface PCB fault
<b>E25</b>	Duplicated follower outdoor unit address. Detected at outdoor. Likely cause error in manually assigning addresses, allow system to self-address
<b>E26</b>	Decrease in quantity of outdoor units connected. Detected at outdoor. Likely cause power loss at condensers, U5/U6 cable condition
<b>E28</b>	Outdoor follower fault. Detected at outdoor. Likely cause lead condenser OK, follower condenser has suffered fault, retrieve second fault code from follower condenser
<b>E31</b>	IPDU/PCB board communication error. Detected at outdoor. Likely cause loss in communication between condenser PCB's. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
<b>E31 01</b>	Compressor 1 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 IPDU board
<b>E31 02</b>	Compressor 2 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 IPDU board
<b>E31 03</b>	Compressor 1 & 2 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 & 2 IPDU board
<b>E31 04</b>	Communication failure between PCB's within condenser. Detected at outdoor. Fault Code is outdoor model series specific e.g. MMY-MAP###1HT8-E, MMY-AP###2HT8-E or MMY-MAP###4HT8-E therefore example fault code for E3104 will be (MMY-MAP0801HT8-E ( <b>series 1</b> ), MMY-MAP0802HT8-E ( <b>series 2</b> ), MMY-MAP0804HT8-E ( <b>series 4</b> ) search E31041, E31042 or E31044
<b>E31 04 1</b>	Fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace fan IPDU board
<b>E31 04 2</b>	Fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace fan IPDU board
<b>E31 04 4</b>	Compressor 3 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 3 IPDU board

Code	Fault Description
<b>E31 05</b>	Communication failure between PCB within condenser. Fault Code is outdoor model series specific e.g. MMY-MAP###1HT8-E, MMY-AP###2HT8-E or MMY-MAP###4HT8-E therefore example fault code for E3105 will be (MMY-MAP0801HT8-E (series 1), MMY-MAP0802HT8-E (series 2), MMY-MAPO804HT8-E (series 4) search E31051, E31052 or E31054
<b>E31 05 1</b>	Compressor 1 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 IPDU & fan IPDU board
<b>E31 05 2</b>	Compressor 1 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 IPDU & fan IPDU board
<b>E31 05 4</b>	Compressor 1 & 3 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 & 3 IPDU board
<b>E31 06</b>	Communication failure between PCB within condenser. Detected at outdoor. Fault Code is outdoor model series specific e.g. MMY-MAP###1HT8-E, MMY-AP###2HT8-E or MMY-MAP###4HT8-E therefore example fault code for E3106 will be (MMY-MAP0801HT8-E (series 1), MMY-MAP0802HT8-E (series 2), MMY-MAPO804HT8-E (series 4) search E3101, E31062 or E31064
<b>E31 06 1</b>	Compressor 2 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 IPDU & fan IPDU board
<b>E31 06 2</b>	Compressor 2 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 IPDU & fan IPDU board
<b>E31 06 4</b>	Compressor 2 & 3 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 & 3 IPDU board
<b>E31 07</b>	Communication failure between PCB within condenser. Detected at outdoor. (4 Series Condenser Compressor 1, 2 & 3 IPDU board communication error). (1&2 Series condenser communication error between PCB within condenser) likely cause phase missing on power supply, replace interface PCB
<b>E31 07 1</b>	Communication error between PCB within condenser. Detected at outdoor. Likely cause check communication cable linking all PCB's, phase missing on power supply, replace interface PCB
<b>E31 07 2</b>	Communication error between PCB within condenser. Detected at outdoor. Likely cause check communication cable linking all PCB's, phase missing on power supply, replace interface PCB
<b>E31 07 4</b>	Compressor 1, 2 & 3 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1, 2 & 3 IPDU board
<b>E31 08</b>	Fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace fan IPDU board
<b>E31 09</b>	Compressor 1 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 IPDU & fan IPDU board
<b>E31 0A</b>	Compressor 2 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 IPDU & fan IPDU board
<b>E31 0B</b>	Compressor 1 & 2 IPDU board & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 & 2 IPDU PCB & fan IPDU board
<b>E31 0C</b>	Compressor 3 IPDU board & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 3 IPDU board & fan IPDU board
<b>E31 0d</b>	Compressor 1 & 3 IPDU board & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 & 3 IPDU board & fan IPDU board

Code	Fault Description
E31 0E	Compressor 2 & 3 IPDU board & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 & 3 IPDU PCB & fan IPDU board
E31 0F	Communication error between PCB within condenser. Detected at outdoor. Likely cause check communication cable linking all PCB's, phase missing on power supply, replace interface PCB
E5	Activation of high-pressure switch or internal overheat (klixon on INVERTER compressor only. Detected at outdoor. Likely cause fan motor trouble, poor airflows, poor refrigerant flow, insufficient refrigerant
E6	Activation of compressor klixon or contactor overload on D.O.L (Fixed speed compressor 1. Detected at outdoor. Likely cause poor refrigerant flow, insufficient refrigerant, excessive amps by compressor
Eb	Resulting from b6 fault code generated at indoor unit. Detected at outdoor. (b6=External input activation, refrigerant leak detection system (Call Toshiba's technical helpline for further details 0870 843 0333)
Er 14	Inverter compressor low voltage. Detected at outdoor. Likely cause AC fuse disconnection, faulty component within compressor inverter circuit, electrical failure of compressor
Er 1d	High Inverter dc current. Detected at outdoor. Likely cause imbalance in compressor voltage, excessive amps by inverter compressor
Er 1F	High Inverter ac current. Detected at outdoor. Likely cause imbalance in compressor voltage, excessive amps by inverter compressor
Er 21	Inverter compressor trip. Detected at outdoor. Likely cause activation of high-pressure switch 425psi-29bar / internal overheat (klixon) on inverter compressor only
Er A0	Compressor discharge sensor fault. Detected at outdoor. Likely cause TD1/ThD1 sensor condition or Interface PCB sensor value 20°C=63k ohms
Er A1	Compressor discharge sensor fault. Detected at outdoor. Likely cause TD2/ThD2 sensor condition or Interface PCB sensor value 20°C=63k ohms
Er A2	Compressor suction sensor fault. Detected at outdoor. Likely cause TS1/ThS sensor condition or interface PCB sensor value 20°C=12.5k ohms
Er A4	Ambient air sensor fault. Detected at outdoor. Likely cause Th0 sensor condition or interface PCB sensor value 20°C=12.5k ohms
Er A5	Condenser coil sensor fault. Detected at outdoor. Likely cause ThE sensor condition or interface PCB fault sensor value 20°C=12.5k ohms
Er A6	High compressor discharge temperature. Detected at outdoor. by TD1,TD2,ThD1 & ThD2. Likely cause low refrigerant, poor refrigerant flow and airflows & TD sensor condition sensor value 20°C=63k ohms
Er A7	High compressor suction temperature > 40°C. Detected at outdoor. Likely cause severe gas shortage, TS sensor condition, interface PCB sensor value 20°C=12.5k ohms
Er AA	High side pressure sensor fault. Detected at outdoor. (Replace Pd pressure sensor)
Er Ad	Fixed speed compressor trip (D.O.L). Detected at outdoor. Likely cause activation of high-pressure switch 425psi-29bar / internal overheat (klixon) / phase rotation PCB / D.O.L contactor overload trip
Er AE	Low Pressure trip < 3 psig. Detected at outdoor. by L.P. switch. Likely cause refrigerant loss, restriction in refrigerant flow
Er AF	Phase rotation incorrect. Detected at outdoor. Likely cause abnormal phase order, missing phase to outdoor unit
F0	Activation of high-pressure switch on D.O.L (Fixed speed) compressor 2. Detected at outdoor. Likely cause fan motor trouble, poor airflows, restricted refrigerant flow
F01	TCj Coil sensor fault. Detected indoors. Likely cause TCj sensor condition or indoor PCB fault sensor value 20°C=12.5k ohms
F02	TC2 or TC Coil sensor fault. Detected indoors. Likely cause TC2 / TC sensor condition or indoor PCB fault sensor value 20°C=12.5k ohms
F03	TC1 Coil sensor fault. Detected indoors. Likely cause TC1 sensor condition or indoor PCB fault sensor value 20°C=12.5k ohms

Code	Fault Description
<b>F04</b>	Td1 sensor fault. Detected at outdoor. Likely cause compressor discharge sensor condition (Td1) or outdoor PCB fault sensor value 20°C=63k ohms
<b>F05</b>	Td2 sensor fault. Detected at outdoor. Likely cause compressor discharge sensor condition (Td2) or outdoor PCB fault sensor value 20°C=63k ohms
<b>F06</b>	TE or TS Sensor fault. Detected at outdoor. Likely cause Heat exchange sensor condition (TE / TE1 / TE2). Suction line sensor condition (TS) or outdoor PCB fault sensor value 20°C=12.5k ohms. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
<b>F06 01</b>	TE1 Sensor fault. Detected at outdoor. Likely cause Heat exchange sensor condition (TE1) or outdoor PCB fault sensor value 20°C=12.5k ohms
<b>F06 02</b>	TE2 Sensor fault. Detected at outdoor. Likely cause Heat exchange sensor condition (TE2) or outdoor PCB fault sensor value 20°C=12.5k ohms
<b>F07</b>	TL Sensor fault. Detected at outdoor. Likely cause Liquid line sensor condition (TL) or outdoor PCB fault sensor value 20°C=12.5k ohms
<b>F08</b>	TO Sensor fault. Detected at outdoor. Likely cause Ambient air sensor condition (TO) or outdoor PCB fault sensor value 20°C=12.5k ohms
<b>F1</b>	Activation of compressor klixon or contactor overload on D.O.L (Fixed speed compressor 2). Detected at outdoor. Likely cause poor refrigerant flow, insufficient refrigerant, excessive amps by compressor
<b>F10</b>	TA Sensor fault. Detected indoors. Likely cause Return air sensor condition (TA) or indoor PCB fault sensor value 20°C=12.5k ohms
<b>F12</b>	TS Sensor fault. Detected at outdoor. Likely cause Suction line sensor condition (TS / TS1 / TS2) or outdoor PCB fault sensor value 20°C=12.5k ohms
<b>F13</b>	Compressor IPDU board overheat. Detected at outdoor. Likely cause poor contact to heat-sink, IPDU board fault. Fault sub-code required to determine which board has suffered overheat 01=IPDU1 overheated 02=IPDU2 overheated 03=IPDU3 overheated? Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
<b>F13 01</b>	Compressor 1 IPDU board overheat. Detected at outdoor. Likely cause poor contact to heat-sink, replace compressor IPDU board 1
<b>F13 02</b>	Compressor 2 IPDU board overheat. Detected at outdoor. Likely cause poor contact to heat-sink, replace compressor IPDU board 2
<b>F13 03</b>	Compressor 3 IPDU board overheat. Detected at outdoor. Likely cause poor contact to heat-sink, replace compressor IPDU board 3
<b>F15</b>	Outdoor temperature sensor error. Detected at outdoor. Likely cause VRF equipment=Heat exchange (TE) sensor condition/location or Liquid line (TL) sensor condition/location, outdoor PCB fault Split equipment=Suction sensor (TS) condition/location Heat exchange sensor (TE) condition/location, outdoor PCB fault sensor value 20°C=12.5k ohms
<b>F16</b>	Pressure sensors miss-reading. Detected at outdoor. Likely cause incorrect characteristics of compressor discharge (Pd) & compressor suction (PS) pressure sensor or total loss of refrigerant
<b>F22</b>	Td3 sensor fault. Detected at outdoor. Likely cause compressor discharge sensor condition (Td3) or outdoor PCB fault sensor value 20°C=63k ohms
<b>F23</b>	Compressor suction pressure sensor fault. Detected at outdoor. Likely cause Suction transducer (PS) fault, outdoor PCB fault
<b>F24</b>	Compressor discharge pressure sensor fault. Detected at outdoor. Likely cause discharge transducer (Pd) fault, outdoor PCB fault
<b>F29</b>	Indoor PCB fault. Detected indoors. Likely cause replace indoor PCB
<b>F31</b>	Outdoor EEPROM Error. Detected at outdoor. Likely cause VRF equipment=power interruption, replace interface PCB Split equipment=replace condenser CDB board
<b>H01</b>	Excessive amps drawn by compressor. Detected at outdoor. Likely cause imbalance in voltage supplied from IPDU board to compressor, compressor lock / seizure. Retrieve sub-code for VRF from condenser to determine which compressor suffered failure 01=compressor1, 02=compressor2 & 03=compressor3. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
<b>H01 01</b>	Excessive amps drawn by compressor 1. Detected at outdoor. Likely cause imbalance in voltage supplied to compressor 1 from inverter IPDU board 1, compressor 1 lock / seizure



Code	Fault Description
H01 02	Excessive amps drawn by compressor 2. Detected at outdoor. Likely cause imbalance in voltage supplied to compressor 2 from inverter IPDU board 2, compressor 2 lock / seizure
H01 03	Excessive amps drawn by compressor 3. Detected at outdoor. Likely cause imbalance in voltage supplied to compressor 3 from IPDU board 3, compressor 3 lock / seizure
H02	High amps drawn by compressor on start-up. Detected at outdoor. Likely cause imbalance in voltage supplied to compressor from IPDU board, compressor locked / seized. For VRF fault sub-code required to determine which compressor suffered failure 01=compressor1 02=compressor2 03=compressor3. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
H02 01	High amps drawn by compressor 1 on start-up. Detected at outdoor. Likely cause imbalance in voltage supplied to compressor 1 from IPDU board 1, compressor 1 locked / seized
H02 02	High amps drawn by compressor 2 on start-up. Detected at outdoor. Likely cause imbalance in voltage supplied to compressor 2 from IPDU board 2, compressor 2 locked / seized
H02 03	High amps drawn by compressor 3 on start-up. Detected at outdoor. Likely cause imbalance in voltage supplied to compressor 3 from IPDU board 3, compressor 3 locked / seized
H03	Current detected in compressor off cycle. Detected at outdoor. Likely cause replace compressor IPDU board. For VRF fault sub-code required to determine which compressor suffered failure 01=compressor1 02=compressor2 03=compressor3. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
H03 01	Current detected in compressor off cycle. Detected at outdoor. Likely cause replace compressor IPDU board 1
H03 02	Current detected in compressor off cycle. Detected at outdoor. Likely cause replace compressor IPDU board 2
H03 03	Current detected in compressor off cycle. Detected at outdoor. Likely cause replace compressor IPDU board 3
H04	Compressor 1 over-heat. Detected at outdoor. Likely cause compressor klixon activation, loss of refrigerant, poor refrigerant flow reducing cooling effect to compressor
H05	Compressor discharge temperature does not increase while compressor 1 operates. Detected at outdoor. Likely cause compressor discharge sensor (Td1) condition / location, outdoor PCB fault sensor value 20°C=63k ohms
H06	Low pressure protection operation. Detected at outdoor. Likely cause characteristics of suction pressure transducer (PS), system pump-down, interface PCB fault)
H07	Abnormal oil level / temperature alarm. Detected outdoor. Likely cause oil balance service valve, refrigerant loss, oil sensor condition (TK1 / TK2 / TK3 / TK4 / TK5), interface board PCB fault sensor value 20°C=63k ohms)
H08	TK Oil sensor fault. Detected at outdoor. Likely cause oil sensor condition, outdoor PCB fault. Fault sub code required to determine which sensor (TK1 / TK2 / TK3 / TK4 / TK5 sensor value 20°C=63k ohms). Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
H08 01	TK1 Oil sensor fault. Detected at outdoor. Likely cause oil sensor condition (TK1), outdoor PCB fault sensor value 20°C=63k ohms
H08 02	TK2 Oil sensor fault. Detected at outdoor. Likely cause oil sensor condition (TK2), outdoor PCB fault sensor value 20°C=63k ohms
H08 03	TK3 Oil sensor fault. Detected at outdoor. Likely cause oil sensor condition (TK3), outdoor PCB fault sensor value 20°C=63k ohms
H08 04	TK4 Oil sensor fault. Detected at outdoor. Likely cause oil sensor condition (TK4), outdoor PCB fault sensor value 20°C=63k ohms
H08 05	TK5 Oil sensor fault. Detected at outdoor. Likely cause oil sensor condition (TK5), outdoor PCB fault sensor value 20°C=63k ohms
H14	Compressor 2 over-heat. Detected at outdoor. Likely cause compressor klixon activation, loss of refrigerant, poor refrigerant flow reducing cooling effect to compressor

Code	Fault Description
H15	Compressor discharge temperature does not increase while compressor 2 operates. Detected at outdoor. Likely cause compressor discharge sensor (Td2) condition / location, outdoor PCB fault sensor value 20°C=63k ohms
H16	TK oil sensors do not detect temperature change while compressors operate. Detected at outdoor. Likely cause oil line (TK1 / TK2 / TK3 / TK4 / TK5) sensor condition / location, outdoor PCB fault sensor value 20°C=63k ohms. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
H16 01	TK1 oil sensor does not detect temperature change while compressor 1 operates. Detected at outdoor. Likely cause oil line (TK1) sensor condition / location, outdoor PCB fault sensor value 20°C=63k ohms
H16 02	TK2 oil sensor does not detect temperature change while compressor 2 operates. Detected at outdoor. Likely cause oil line (TK2) sensor condition / location, outdoor PCB fault sensor value 20°C=63k ohms
H16 03	TK3 oil sensor does not detect temperature change while compressor 3 operates. Detected at outdoor. Likely cause oil line (TK3) sensor condition / location, outdoor PCB fault sensor value 20°C=63kΩ
H16 04	TK4 oil sensor does not detect temperature change while compressors operate. Detected at outdoor. Likely cause oil line (TK4) sensor condition / location, outdoor PCB fault sensor value 20°C=63kΩ
H16 05	TK5 oil sensor does not detect temperature change while compressors operate. Detected at outdoor. Likely cause oil line (TK5) sensor condition / location, outdoor PCB fault sensor value 20°C=63kΩ
H25	Compressor discharge temperature does not increase while compressor 3 operates. Detected at outdoor. Likely cause compressor discharge sensor (Td3) condition / location, outdoor PCB fault sensor value 20°C=63k ohms
L03	Two or more lead units within group of indoor units. Detected indoors. Likely cause incorrect addressing, alteration in grouped set-up / wiring, requires re-addressing
L04	Duplicated outdoor line address. Detected at outdoor. Likely cause failure to correctly set line address before auto addressing
L05	Duplicated priority indoor unit displayed on priority indoor unit. Detected indoors. Likely cause two units configured as priority units, correct configuration within engineer's menu 04
L06	Duplicated priority indoor unit displayed on other than priority indoor unit. Detected indoors. Likely cause two units configured as priority units, correct configuration within engineering menu code 04
L07	Indoor unit group address incorrectly set. Detected indoors. Likely cause alteration of indoor group set-up, re-address required
L08	Indoor group / addresses unset. Detected at outdoor. Likely cause automatic addressing in-completed
L09	Indoor PCB capacity unset. Detected indoors. Likely cause failure to follow instruction accompanying new PCB
L10	Outdoor PCB capacity unset. Detected at outdoor. Likely cause failure to follow instructions accompanying new PCB
L17	Inconsistency of outdoor unit models. Detected at outdoor. Likely cause incorrect selection on outdoor model references
L18	Flow Selector unit error. Detected indoors. Likely cause indoor unit unable to heat on demand. Check power & communication to F/S Box from local indoor unit. Incorrectly configured indoor group sharing F/S box
L20	Duplicated central controller address. Detected indoors. Likely cause incorrectly set network address. Engineering code 03
L28	Quantity of outdoor units too high. Detected at outdoor. Likely cause too many outdoor units modularised together
L29	IPDU /PCB communication error. Detected at outdoor. Likely cause Split equipment=faulty or overheating inverter PCB. VRF equipment=loss in communication between condenser PCB's. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis. Search fault code (without spaces) for diagnosis e.g. L2901



Code	Fault Description
L29 01	Compressor 1 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 IPDU board
L29 02	Compressor 2 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 IPDU board
L29 03	Compressor 1 & 2 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 & 2 IPDU board
L29 04	Communication failure between PCB within condenser. Detected at outdoor. Fault Code is outdoor model series specific e.g. MMY-MAP###1HT8-E, MMY-AP###2HT8-E or MMY-MAP###4HT8-E therefore example fault code for L2904 will be (MMY-MAP0801HT8-E (series 1), MMY-MAP0802HT8-E (series 2), MMY-MAP0804HT8-E (series 4) search L29041, L29042 or L29044
L29 04 1	Fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace fan IPDU board
L29 04 2	Fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace fan IPDU board
L29 04 4	Compressor 3 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 3 IPDU board
L29 05	Communication failure between PCB within condenser. Detected at outdoor. Fault Code is outdoor model series specific e.g. MMY-MAP###1HT8-E, MMY-AP###2HT8-E or MMY-MAP###4HT8-E therefore example fault code for L2905 will be (MMY-MAP0801HT8-E (series 1), MMY-MAP0802HT8-E (series 2), MMY-MAP0804HT8-E (series 4) search L29051, L29052 or L29054
L29 05 1	Compressor 1 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 IPDU & fan IPDU board
L29 05 2	Compressor 1 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 IPDU & fan IPDU board
L29 05 4	Compressor 1 & 3 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 & 3 IPDU board
L29 06	Communication failure between PCB within condenser. Detected at outdoor. Fault Code is outdoor model series specific e.g. MMY-MAP###1HT8-E, MMY-AP###2HT8-E or MMY-MAP###4HT8-E therefore example fault code for L2906 will be (MMY-MAP0801HT8-E (series 1), MMY-MAP0802HT8-E (series 2), MMY-MAP0804HT8-E (series 4) search L29061, L29062 or L29064
L29 06 1	Compressor 2 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 IPDU & fan IPDU board
L29 06 2	Compressor 2 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 IPDU & fan IPDU board
L29 06 4	Compressor 2 & 3 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 & 3 IPDU board
L29 07	Communication failure between PCB within condenser. Detected at outdoor. Fault Code is outdoor model series specific e.g. MMY-MAP###1HT8-E, MMY-AP###2HT8-E or MMY-MAP###4HT8-E therefore example fault code for L2907 will be (MMY-MAP0801HT8-E (series 1), MMY-MAP0802HT8-E (series 2), MMY-MAP0804HT8-E (series 4) search L29071, L29072 or L29074 for diagnosis
L29 07 1	Communication error between PCB within condenser. Detected at outdoor. Likely cause check communication cable linking all PCB's, phase missing on power supply, replace interface PCB

Code	Fault Description
L29 07 2	Communication error between PCB within condenser. Detected at outdoor. Likely cause check communication cable linking all PCB's, phase missing on power supply, replace interface PCB
L29 07 4	Compressor 1, 2 & 3 IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1, 2 & 3 IPDU board
L29 08	Fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace fan IPDU board
L29 09	Compressor 1 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 IPDU & fan IPDU board
L29 0A	Compressor 2 IPDU & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 IPDU & fan IPDU board
L29 0B	Compressor 1 & 2 IPDU board & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 & 2 IPDU PCB & fan IPDU board
L29 0C	Compressor 3 IPDU board & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 3 IPDU board & fan IPDU board
L29 0d	Compressor 1 & 3 IPDU board & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 1 & 3 IPDU board & fan IPDU board
L29 0E	Compressor 2 & 3 IPDU board & fan IPDU board communication error. Detected at outdoor. Likely cause check communication cable linking all PCB's, replace Compressor 2 & 3 IPDU PCB & fan IPDU board
L29 0F	Communication error between PCB within condenser. Detected at outdoor. Likely cause check communication cable linking all PCB's, phase missing on power supply, replace interface PCB
L30	Auxiliary interlock in indoor unit. Detected indoors. Likely cause external interlock in CN80 socket on indoor unit
P01	Indoor fan motor error. Detected indoors. Likely cause indoor fan motor or wiring to motor
P03	High compressor discharge temperature. Detected at outdoor. by TD1 @ 115°C. Likely cause low refrigerant, poor refrigerant flow and airflows & TD1 sensor condition sensor value 20°C=63k ohms
P04	High pressure switch activation. Detected at outdoor. Likely cause poor airflows over indoor / out dependant on operation, restriction in refrigerant flow, non-condensable mixed with refrigerant. Fault sub code required to determine which H.P Switch activated 01=compressor 1 02=compressor 2 03=compressor 3. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
P04 01	Compressor 1 high pressure switch activation. Detected at outdoor. Likely cause poor airflows over indoor / out dependant on operation, restriction in refrigerant flow, non-condensable mixed with refrigerant
P04 02	Compressor 2 high pressure switch activation. Detected at outdoor. Likely cause poor airflows over indoor / out dependant on operation, restriction in refrigerant flow, non-condensable mixed with refrigerant
P04 03	Compressor 3 high pressure switch activation. Detected at outdoor. Likely cause poor airflows over indoor / out dependant on operation, restriction in refrigerant flow, non-condensable mixed with refrigerant
P05	Phase-missing detection / phase order error, compressor inverter High Voltage. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis. Search fault code (without spaces) for diagnosis e.g. P0501
P05 00	Phase-order incorrect or phase missing. Detected at outdoor. Likely cause issue with power supply to condenser, or phase order wrong, swap L2 & L3

Code	Fault Description
<b>P05 01</b>	Phase-missing detection (series 1 & 2) or High D.C. inverter voltage (series 4). Detected at outdoor. Fault Code is outdoor model series specific e.g. MMY-MAP###1HT8-E, MMY-AP###2HT8-E or MMY-MAP###4HT8-E therefore example fault code for P0501 will be (MMY-MAP0801HT8-E (series 1), MMY-MAP0802HT8-E (series 2), MMY-MAP0804HT8-E (series 4) search P05011, P05012 or P05014
<b>P05 01 1</b>	Phase-missing detection. Detected at outdoor. Likely cause error on power supply to condenser
<b>P05 01 2</b>	Phase-missing detection. Detected at outdoor. Likely cause error on power supply to condenser
<b>P05 01 4</b>	High D.C. inverter voltage. Detected at outdoor. Likely cause compressor 1 IPDU board overheat or failure
<b>P05 02</b>	Phase-order incorrect (series 1 & 2) or High D.C. inverter voltage (series 4). Detected at outdoor. Fault Code is outdoor model series specific e.g. MMY-MAP###1HT8-E, MMY-AP###2HT8-E or MMY-MAP###4HT8-E therefore example fault code for P0502 will be (MMY-MAP0801HT8-E (series 1), MMY-MAP0802HT8-E (series 2), MMY-MAP0804HT8-E (series 4) search P05011, P05012 or P05014
<b>P05 02 1</b>	Phase-order incorrect. Detected at outdoor. Likely cause issue with power supply to condenser, swap L2 & L3 to correct
<b>P05 02 2</b>	Phase-order incorrect. Detected at outdoor. Likely cause issue with power supply to condenser, swap L2 & L3 to correct
<b>P05 02 4</b>	High D.C. inverter voltage. Detected at outdoor. Likely cause compressor 2 IPDU board overheat or failure
<b>P05 03</b>	High D.C. inverter voltage. Detected at outdoor. Likely cause compressor 3 IPDU board overheat or failure
<b>P07</b>	Overheating compressor IPDU / inverter board. Detected at outdoor. Likely cause poorly secured inverter PCB to heat-sink, faulty IPDU. Fault sub code required to determine which IPDU overheated 01=IPDU1 02=IPDU2 03=IPDU3. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
<b>P07 01</b>	Overheating compressor 1 IPDU / inverter board. Detected at outdoor. Likely cause poorly secured inverter PCB to heat-sink, faulty IPDU board 1
<b>P07 02</b>	Overheating compressor 2 IPDU / inverter board. Detected at outdoor. Likely cause poorly secured inverter PCB to heat-sink, faulty IPDU board 2
<b>P07 03</b>	Overheating compressor 3 IPDU / inverter board. Detected at outdoor. Likely cause poorly secured inverter PCB to heat-sink, faulty IPDU board 3
<b>P10</b>	Indoor float switch open circuit as result of high condensation levels within drip tray, detected indoors. Likely cause faulty float switch, faulty lift pump, debris blocking drain
<b>P12</b>	Indoor fan motor trouble. Detected indoors. Likely cause fan motor locked, incorrectly configured PCB, indoor PCB fault
<b>P13</b>	Outdoor liquid back detection in condenser while in OFF cycle. Detected at outdoor. Likely cause increase in pressure within dormant condenser, possible PMV valves passing
<b>P15</b>	High compressor suction or discharge temperature. Detected at outdoor. Likely cause sensor condition (TS1 or TD1, 2 or 3), interface PCB fault, loss of refrigerant TS1 sensor value 20°C=12.5k ohms TD1,2 & 3 sensor value 20°C=63k ohms. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
<b>P15 01</b>	High compressor suction temperature. Detected at outdoor. Likely cause suction sensor condition (TS1), interface PCB fault, loss of refrigerant sensor value 20°C=12.5k ohms
<b>P15 02</b>	High compressor discharge temperature. Detected at outdoor. Likely cause discharge sensor condition (TD1, TD2 or TD3), interface PCB fault, loss of refrigerant sensor value 20°C=63k ohms
<b>P17</b>	High compressor discharge temperature. Detected at outdoor. by TD2 @ 115°C. Likely cause low refrigerant, poor refrigerant flow and airflows & TD2 sensor condition sensor value 20°C=63k ohms
<b>P18</b>	High compressor discharge temperature. Detected at outdoor. by TD3 @ 115°C. Likely cause low refrigerant, poor refrigerant flow and airflows & TD3 sensor condition sensor value 20°C=63k ohms
<b>P19</b>	Incorrect temperature / pressure reading at condenser. Detected at outdoor. Likely cause check characteristics of pressure transducers (PS & Pd) and temperature sensors (TS1, TE1 & TL), interface PCB fault sensor value 20°C=12.5k ohms

Code	Fault Description
P20	High pressure protection detected by discharge pressure transducer reading @ 36bar. Detected at outdoor. Likely cause characteristics of discharge pressure transducer (Pd), interface PCB, poor airflows across condensers
P22	Outdoor fan motor error. Detected at outdoor. Likely cause Split equipment, locked / faulty fan motor, faulty PCB VRF Equipment. Retrieve fault sub-from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis. Search fault code (without spaces) for diagnosis. e.g. P2203
P22 03	Outdoor fan motor error. Detected at outdoor. Likely cause locked / faulty fan motor, faulty fan IPDU PCB. Fan motor has 3 ohms resistance on any 2 wires
P22 34	Outdoor fan motor error. Detected at outdoor. Likely cause locked / faulty fan motor, faulty fan IPDU PCB. Fan motor has 3 ohms resistance on any 2 wires
P22 37	Outdoor fan motor error. Detected at outdoor. Likely cause locked / faulty fan motor, faulty fan IPDU PCB. Fan motor has 3 ohms resistance on any 2 wires
P22 E1	Fan IPDU board error. Detected at outdoor. Likely cause error on DC supply voltage to fan IPDU PCB or problem with mains voltage onto condenser
P22 E2	Fan IPDU board error. Detected at outdoor. Likely cause error on DC supply voltage to fan IPDU PCB or problem with mains voltage onto condenser
P22 E3	Fan IPDU board error. Detected at outdoor. Likely cause error on DC supply voltage to fan IPDU PCB or problem with mains voltage onto condenser
P26	Compressor IPDU PCB Short circuit. Detected at outdoor. Likely cause electrical fault on compressor, faulty compressor inverter board. Before replacing PCB prove compressor is good. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
P26 01	Compressor 1 IPDU PCB Short circuit. Detected at outdoor. Likely cause electrical fault on compressor 1, faulty compressor 1 inverter board. Before replacing PCB prove compressor is good
P26 02	Compressor 2 IPDU PCB Short circuit. Detected at outdoor. Likely cause electrical fault on compressor 2, faulty compressor 2 inverter board. Before replacing PCB prove compressor is good
P26 03	Compressor 3 IPDU PCB Short circuit. Detected at outdoor. Likely cause electrical fault on compressor 3, faulty compressor 3 inverter board. Before replacing PCB prove compressor is good
P29	Compressor position detection error. Detected at outdoor. Likely cause fault on compressor, faulty compressor inverter board. Before replacing inverter PCB prove compressor is good. Retrieve fault sub-code from condenser interface PCB by placing rotary dials to position 1 / 1 / 1 for diagnosis.
P29 01	Compressor 1 position detection error. Detected at outdoor. Likely cause fault on compressor 1, faulty compressor 1 inverter board. Before replacing inverter PCB prove compressor is good
P29 02	Compressor 2 position detection error. Detected at outdoor. Likely cause fault on compressor 2, faulty compressor 2 inverter board. Before replacing inverter PCB prove compressor is good
P29 03	Compressor 3 position detection error. Detected at outdoor. Likely cause fault on compressor 3, faulty compressor 3 inverter board. Before replacing inverter PCB prove compressor is good
P30	Indoor unit other than lead indoor suffering fault. Detected on central controller. Likely cause to diagnose retrieve fault code from local remote controller to indoor group
P31	Indoor unit other than lead indoor suffering fault. Detected indoors. Likely cause to diagnose retrieve fault code from local remote controller to indoor group

## Error Detected by - TCC-Link Central Controller

Check Code			Wireless Remote				Check Code Name	Judging Device	
Central Control Device	Outdoor 7 Segment Display		Sensor Block Display						
		Auxiliary Code	AI Central Controller	O	T	R			F
C05	---	---	---	---				Sending error in TCC-Link central control device	TCC-LINK
C06	---	---	---	---				Receiving error in TCC-Link central control device	TCC-LINK
C12	---	---	---	---				Batch alarm of general-purpose equipment control interface	HA control interface I/F
P30	---	Differs according to error contents of unit with occurrence of alarm					Group control follower unit error	TCC-LINK	
		---	(L20 is displayed)			Duplicated central control addresses			

Black Pear Error Code Cross Reference.					
Black Pear Error Code	Toshiba Error Code	Description	Black Pear Error Code	Toshiba Error Code	Description
1005	C05	Sending error in TCC-Link central control device	3001	F01	Indoor TCCJ sensor error
1006	C06	Receiving error in TCC-Link central control device	3002	F02	Indoor TC2 sensor error
1012	C12	Batch alarm of general-purpose equipment control interface	3003	F03	Indoor TC1 sensor error
			3004	F04	TD1 sensor error
2001	E01	Communication error between indoor and remote controller (Detected at remote controller side)	3005	F05	TD2 sensor error
			3006	F06	TE1 sensor error
2003	E03	Communication error between indoor and remote controller (Detected at indoor side)	3007	F07	TL sensor error
			3008	F08	TO sensor error
2004	E04	Communication circuit error between indoor / outdoor (Detected at indoor side)	3010	F10	TA sensor error
			3012	F12	TS1 sensor error
2006	E06	Decrease of number of indoor units.	3013	F13	TH sensor error
2007	E07	Communication circuit error between indoor / outdoor (Detected at outdoor side)	3015	F15	Outdoor temperature sensor misconnection (TE1-TL)
			3016	F16	Outdoor pressure sensor misconnection (Pd – Ps)
2008	E08	Duplicated indoor addresses	3023	F23	Ps sensor error
2009	E09	Duplicated master remote controllers	3024	F24	Pd sensor error
2010	E10	Communication error between indoor Printed Circuit Boards	3029	F29	Indoor other error
2012	E12	Automatic address start error	3031	F31	Outdoor EEPROM error
2015	E15	No indoor automatic address			
2016	E16	Over capacity / Number of connected indoor units	4001	H01	Compressor break down
2018	E18	Communication error between indoor header and follower units.	4002	H02	Magnetic switch error / Overcurrent relay operation / Compressor error (lock)
2019	E19	Outdoor header unit's quantity error			
2020	E20	Other line connected during automatic address	4003	H03	Current detection circuit error
2023	E23	Sending error in communication between outdoor units	4004	H04	Compressor 1 case thermal operation
2025	E25	Duplicated follower outdoor address	4006	H06	Low pressure protection operation
2026	E26	Decrease of number of connected outdoor units	4007	H07	Low oil level protection
2028	E28	Follower outdoor unit error	4008	H08	Oil level temperature sensor error
2031	E31	IPDU Communication error	4014	H14	Compressor 2 case thermal operation
			4016	H16	Oil level detection circuit error / Magnetic switch error / Overcurrent relay error

Black Pear Error Code Cross Reference.					
Black Pear Error Code	Toshiba Error Code	Description	Black Pear Error Code	Toshiba Error Code	Description
6003	L03	Duplicated indoor header units	7001	P01	Indoor fan motor error
6004	L04	Duplicated outdoor line address	7003	P03	Discharge temperature TD1 error
6005	L05	Duplicated indoor units with priority (Displayed in indoor unit with priority)	7004	P04	High-pressure switch detection error
			7005	P05	Phase-missing detection / Phase order error
6006	L06	Duplicated indoor units with priority (Displayed in unit other than indoor unity with priority)	7007	P07	Heat sink overheat error
			7010	P10	Indoor overflow error
6007	L07	Group line in individual indoor unit	7012	P12	Indoor fan motor error
6008	L08	Indoor group/Address unset	7013	P13	Outdoor liquid back detection error
6009	L09	Indoor capacity unset	7015	P15	Gas leak detection
6010	L10	Outdoor capacity unset	7017	P17	Discharge temperature TD2 error
6020	L20	Duplicated central control addresses	7019	P19	4-way valve inverse error
6028	L28	Maximum number of outdoor units exceeded	7020	P20	High pressure inverse error
6029	L29	Number of IPDU's error	7022	P22	Outdoor fan IPDU error
6030	L30	Auxiliary interlock in indoor unit	7026	P26	Giant Transistor short circuit protection error
6031	L31	IC error	7029	7031	Compressor position detection circuit error
			7030	P30	Follower indoor unit error (Group error)
			7031	P31	Follower indoor unit error (Group error)
Special Black Pear Error Codes					
6999		Unit does not exist on the system			
8000		No error detected			
255		No error detected.			

**Notes**



## Step by Step Wiping/Re-addressing Of VRF Systems


- Dials must be in positions ' 1 – 1 – 1 'with a 7-segment displaying ' U1 - - -'
- To start the wiping of addresses, move rotary dials to ' 2 – 1 – 2' 7 segment display will read ' ad bus'
- Press and hold **SW04** for 4 seconds, ' ad cl' will appear on the 7-segment display
- Once ' ad cl' appears on display release **SW04** and return rotary dials to ' 1 – 1 – 1'
- Approximately 3 minutes later ' U1 L08' will appear, wiping of **BUS** address is now complete
- To start re-address of indoor units, press and hold **SW15** – display will scroll from **AUTO1** to **AUTO9**
- After approx. 10 minutes display will show ' U1 - - -'
- To check the quantity of indoors assigned place rotary dials at ' 1 – 4 – 3'
- e.g. display of ' 10 C 0' the number 10 in this display relates to the number of indoors addressed. Once complete return dials to ' 1 – 1 – 1'

### Priority Mode (SMMS(i/e) Only).


Factory setting - Heating priority, this can be modified to Cooling priority via DIP switch "SW11" bit's 1 & 2 In addition to above priority is factory set at "Any one indoor unit" this can be modified to Percentage, i.e. 60% of units requiring a mode, or Set to One SPECIFIC indoor unit.

SW11		Operation
Bit 1	Bit 2	
OFF	OFF	Heating priority (Factory setting)
ON	OFF	Cooling priority
OFF	ON	Percentage (60%)
ON	ON	Specific indoor unit

### Super Modular Multi (SMMSi) Switch Positions

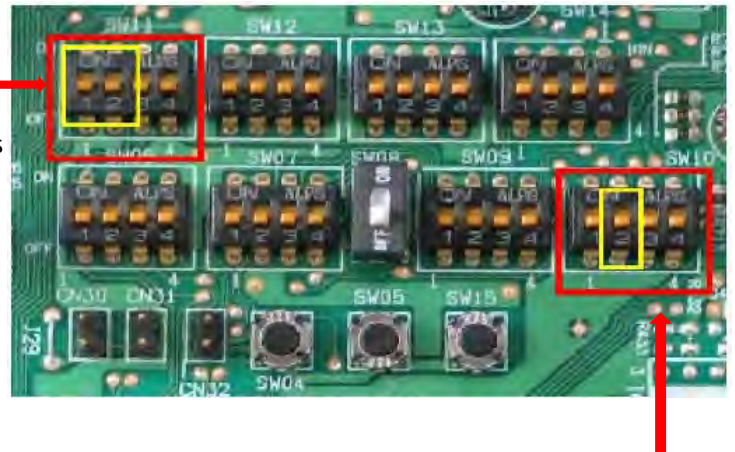

### Priority Mode (SMMSu Only)

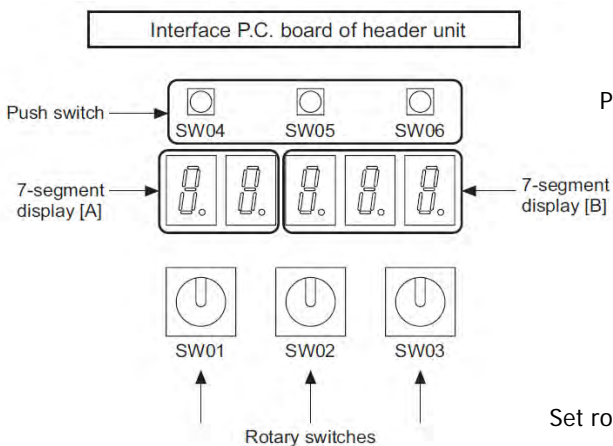

#### With the system powered up but NO indoor units running.

Set the rotary switches, **SW01 = (9)**, **SW02 = (1)** and **SW03 = (1)**

LED display shows "d n.S E t"

Press **SW04** LED display changes to "d n.0 0 1" (Outdoor unit DN Code (0 0 1)

Change "ODU DN code" by pressing **SW05** to advance or **SW06** to return.

When required DN code is reached, (0 1 8) press **SW04**

LED display blinks "d. \* \* \* \*" then the setting data "0 0 0 0" is displayed.

(Priority Heating – Default)

To change the Data, **SW05** to advance and **SW06** to return.

(Available options, 0 0 0 0 = Heating, 0 0 0 1 = Cooling, 0 0 0 2 =

Majority, 0 0 0 3 Specific Indoor Unit)

Select required option, Then press and **HOLD SW04** for more than

2 seconds, (When flashing stops and display is lit, setting is complete.)

Set rotary switches on Interface PCB back to **SW01=(1)**, **SW02=(1)**, **SW03=(1)**

Reset the power to the ODU, power off for one minute or more.


## Outdoor Fan High Static Pressure Setup (SMMSi-e/SHRMe)

This function is used when connecting a duct to the discharge outlet of an outdoor unit. To setup turn ON the DIP switch [SW10, Bit 2] provided on the interface P.C. board of the outdoor unit. This function must be enabled with every discharge duct connected outdoor unit for both of the header and follower units. It is necessary to increase the speed of the propeller fan units on the outdoor fan to allow the installation of a duct with a maximum external static pressure not greater than specified in the table below. If a discharge duct with a resistance greater than 15 Pa (1.5 mmAq) is to be used, enable this function. The maximum external static pressures of singular base units are shown below: -

SMMS(i/e)	Model MMY-MAP	0804/6	1004/6	1204/6	1404/6	160/6	1806	2006	2206	
Maximum external static pressure (Pa)		60	60	40/50 <sup>1</sup>	40	40	50	40	40	
(#) Outdoor unit air flow (m <sup>3</sup> /h)		9900/9700 <sup>1</sup>	10500/9700 <sup>1</sup>	11600/12200 <sup>1</sup>	12000/12200 <sup>1</sup>	13000/12600 <sup>1</sup>	17300 <sup>1</sup>	17900 <sup>1</sup>	18500 <sup>1</sup>	
SHRM(i/e)	Model MMY-MAP	0804/6	1004/6	1204/6	1404/6	1606	1806	2206		
Maximum external static pressure (Pa)		50/60 <sup>1</sup>	40/50 <sup>1</sup>	40/50 <sup>1</sup>	40	40	40	40		
(#) Outdoor unit air flow (m <sup>3</sup> /h)		8700/11000 <sup>1</sup>	9420/11000 <sup>1</sup>	12000/12200 <sup>1</sup>	12960/12500 <sup>1</sup>	17900 <sup>1</sup>	17900 <sup>1</sup>	17900 <sup>1</sup>		
SMMSu	Model MMY-MUP	0801*	1001*	1201*1	1401*	1601*	1801*	2001*	2201*	2401*
Maximum external static pressure (Pa)		80	80	80	80	80	80	80	80	80
(#) Outdoor unit air flow (m <sup>3</sup> /min)		165	175	195	198	255	280	265	275	275

(#) Calculate duct resistance from outdoor unit airflow. When units are combined maximum external static pressure is the lower value of any single unit in the combination, for full details refer to the installation manual supplied with the equipment, or contact Cool Designs technical support 6 Series SMMSe/SHRMe

## SMMSu

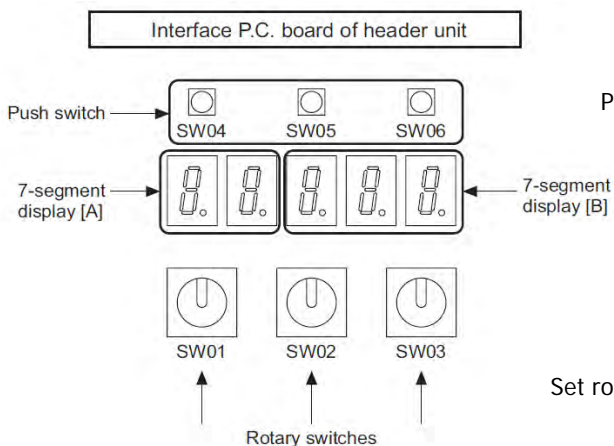

### With the system powered up but NO indoor units running.

Set the rotary switches, **SW01 = (9)**, **SW02 = (1)** and **SW03 = (1)**  
LED display shows "d n.S E t"

Press **SW04** LED display changes to "d n.0 0 1" (Outdoor unit DN Code (0 0 1)  
Change "ODU DN code" by pressing **SW05** to advance or **SW06** to return.

When required DN code is reached, (0 1 9) press **SW04**  
LED display blinks "d. \* \* \* \*" then the setting data "0 0 0 0" is displayed.  
(Priority Normal – Default)

To change the Data, **SW05** to advance and **SW06** to return.  
(Available options, 0 0 0 0 = Normal, 0 0 0 1 = High Static)

Select required option, Then press and **HOLD SW04** for more than 2 seconds, (When flashing stops and display is lit, setting is complete.)


Set rotary switches on Interface PCB back to **SW01=(1)**, **SW02=(1)**, **SW03=(1)**  
Reset the power to the ODU, power off for one minute or more.

## Compressor or Outdoor Fan Motor Backup Isolation Setting (SMMSi/e – SHRMI/e)

In the event of a compressor or fan motor error it is possible to electronically remove the affected item circuit allowing the unaffected circuit(s) to operate normally. This is achieved via DIP switch "SW06". Turn OFF the power to the system and set up DIP switch "SW06" Bits 1 to 4 as per the chart. This solution is a "Temporary Fix" and it is recommended that the faulty item(s) are replaced within 7 days

SW06	DIP Switch Positions			
	Bit1	Bit 2	Bit 3	Bit 4
Factory setting	OFF	OFF	OFF	OFF
No 1 Comp. Defective	ON	OFF	OFF	OFF
No 2 Comp. Defective	OFF	ON	OFF	OFF
No 3 Comp. Defective*	OFF	OFF	ON	OFF

\* SMMSi/SHRMI Not applicable to SMMSe/SHRMe

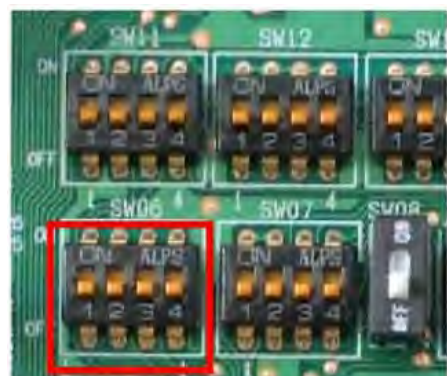




## Compressor or Outdoor Fan Motor Backup Isolation Setting (SMMSu - ONLY)

For singular SMMSu with a single compressor, back-up function is NOT available.

It is recommended to keep the total backup outdoor units lower than 50% of the outdoor units in one system.

In the event of a compressor or fan motor error it is possible to electronically remove the affected item circuit allowing the unaffected circuit(s) to operate normally. This is achieved via DIP switch "SW103". Turn OFF the power to the system and set up DIP switch "SW103" Bits 1 to 4 as per the chart. This solution is a "Temporary Fix" and it is recommended that the faulty item(s) are replaced within 7 days


SW103	DIP Switch Positions			
	Bit1	Bit 2	Bit 3	Bit 4
Factory setting	OFF	OFF	OFF	OFF
No 1 Comp. Defective	ON	OFF	OFF	OFF
No 2 Comp. Defective	OFF	ON	OFF	OFF
SMMSu ONLY				

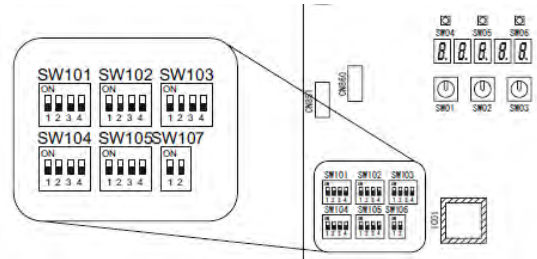

## Opening PMV's on Toshiba 3 Pipe VRF (R410a) – SHRM\*

Step by step guide on how to open up all PMV's on indoor and outdoor units to enable successful refrigerant recovery, pressure test and evacuation

1. Before starting ensure that you have power applied to all indoor and all outdoor units
2. Ensure that on each condenser you have a normal display of U1--- and U2--- dependent on the quantity of outdoors while the yellow rotary dials are at positions 1-1-1
3. Place yellow rotary dials at position 2-3-1 left to right, on the lead condenser U1---, [P ] will appear
4. Press push button SW04 just above the hexadecimal display for several seconds [P ] [ FF] is displayed on the hexadecimal display (meaning that all the PMV's on the indoors are in the open position)
5. You now have a **2-minute** window to turn the power off to the indoor units either at the isolator or distribution board to lock the valves in the open position
6. At condenser U1, bridge out the pins of CN30 on the main interface board for 10 seconds with the blade of a screwdriver and turn off power
7. Complete step 6 in any remaining condensers if modularised

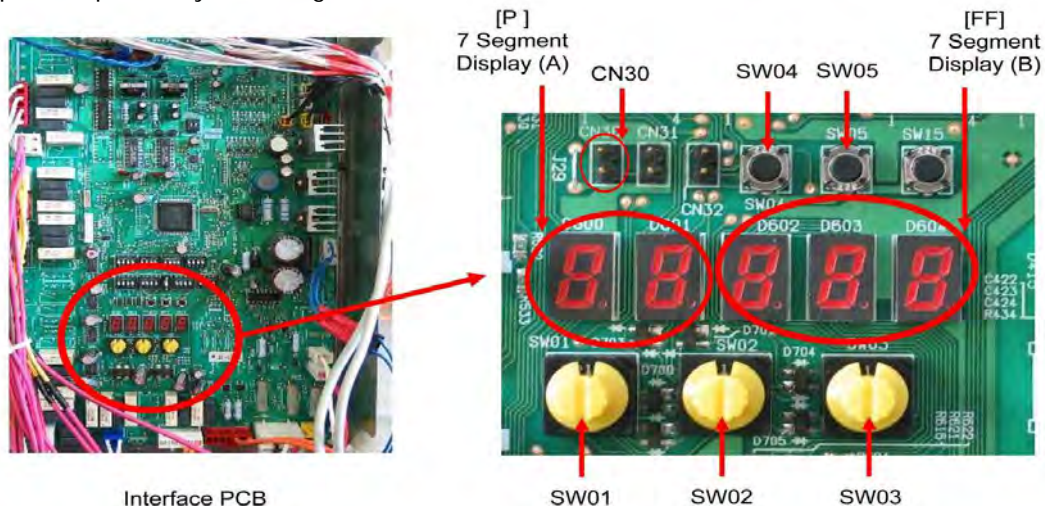

Once your procedures of refrigerant recovery, pressure test or evacuation are complete there are no reverse procedures to follow, the valves will then close automatically once power is applied

## VRF Rotary Dial Data Display - **SMMS(e), SHRM(e) & Mini SMMS(e)**

Model	SW01	SW02	SW03	Display Data
Common	1	1	1	Error data
Common	1	1	2	Pd pressure data (Pd---) (Mpa x 10 = Bar)
Common	1	2	2	Ps pressure data (Ps ---) (Mpa x 10 = Bar)
Common	1	2	3	System capacity (HP---)
Common	1	2	16	Latest error code of follower unit No.1 (U2)
Common	1	3	2	PL pressure conversion data (PL---) (Mpa x 10 = Bar)
Common	1	3	3	No. of outdoor units (qty)
Common	1	3	16	Latest error code of follower unit No.2 (U3)
Common	1	4	1	Outdoor unit HP capacity (HP---)
Common	1	4	2	TD1 sensor data (td1 ---) (°C)
Common	1	4	3	No. of connected indoor units / No. of units with cooling thermo ON (--- C ---)
Common	1	5	2	TD2 sensor data (td2 ---) (°C)
Common	1	5	3	No. of connected indoor units / No. of units with heating thermo ON (---H ---)
Common	2	3	1	Indoor PMV forced full open function
Common	2	4	1	Indoor remote controller discriminating function
Common	2	5	1	Cooling test operation function (Note. Test mode operates for 60 minutes, then returns to normal operation)
Common	2	6	1	Heating test operation function(Note. Test mode operates for 60 minutes, then returns to normal operation)
Common	2	9	1	Fan Test operation function(Note. Test mode operates for 60 minutes, then returns to normal operation)
Common	2	14	2	Adding additional indoor units
Common	2	16	1	Error clear function
SHRM	1	8	2	TE sensor data (te ---) (°C)
SHRM	1	11	2	TK1 sensor data (F1---) (°C)
SHRM	1	12	2	TK2 sensor data (F2---) (°C)
SHRM	1	13	2	TK3 sensor data (F3---) (°C)
SHRM	1	14	2	TK4 sensor data (F4---) (°C)
SHRM	1	9	2	TL sensor data (TL---) (°C)
SHRM	1	10	2	TO sensor data (to---) (°C)
SHRM	1	6	2	TS1 sensor data (TS1--) (°C)
SHRM	1	7	2	TS2 sensor data (TS2--) (°C)
SHRMI/e	3	8	1 to 2	Compressor 1 operating current (----) (A)
SHRMI/e	3	9	1 to 2	Compressor 2 operating current (----) (A)
SHRMI/e	3	10	1 to 2	Compressor 3 operating current (----) (A)
SHRMI/e	3	11	1 to 2	Fan operating current (----) (A)
SHRMI	1	6	2	TD3 sensor data (td3---) (°C)
SHRMI/e	1	9	2	TE1 sensor data (tE1---) (°C)
SHRMI/e	1	10	2	TE2 sensor data (tE2---) (°C)
SHRMI/e	1	1	5	TK1 sensor data (F1---) (°C)
SHRMI/e	1	2	5	TK2 sensor data (F2---) (°C)
SHRMI	1	3	5	TK3 sensor data (F3---) (°C)
SHRMI/e	1	4	5	TK4 sensor data (F4---) (°C)
SHRMI/e	1	5	5	TK5 sensor data (F5---) (°C)
SHRMI/e	1	11	2	TL sensor data (TL---) (°C)
SHRMI/e	1	12	2	TO sensor data (to---) (°C)
SHRMI/e	1	7	2	TS1 sensor data (TS1--) (°C)
SHRMI/e	1	8	2	TS2 sensor data (TS2--) (°C)
SMMS	1	4	16	Latest error code of follower unit No.3 (U4)
SMMS	1	7	2	TE sensor data (tE1---) (°C)
SMMS	1	11	2	TK1 sensor data (F1---) (°C)
SMMS	1	12	2	TK2 sensor data (F2---) (°C)
SMMS	1	13	2	TK3 sensor data (F3---) (°C)
SMMS	1	14	2	TK4 sensor data (F4---) (°C)
SMMS	1	9	2	TL sensor data (TL---) (°C)
SMMS	1	10	2	TO sensor data (to---) (°C)
SMMS	1	6	2	TS sensor data (tS---) (°C)
SMMSI/e	3	8	1 to 3	Compressor 1 operating current (----) (A)
SMMSI/e	3	9	1 to 3	Compressor 2 operating current (----) (A)
SMMSI/e	3	10	1 to 3	Compressor 3 operating current (----) (A)
SMMSI/e	3	11	1 to 3	Fan operating current (----) (A)
SMMSI/e	1	4	16	Latest error code of follower unit No.3 (U4)
SMMSI	1	6	2	TD3 sensor data (tD3---) (°C)
SMMSI/e	1	8	2	TE1 sensor data (tE1---) (°C)
SMMSI/e	1	9	2	TE2 sensor data (tE2---) (°C)
SMMSI/e	1	12	2	TK1 sensor data (F1---) (°C)
SMMSI/e	1	13	2	TK2 sensor data (F2---) (°C)
SMMSI	1	14	2	TK3 sensor data (F3---) (°C)
SMMSI/e	1	15	2	TK4 sensor data (F4---) (°C)
SMMSI/e	1	16	2	TK5 sensor data (F5---) (°C)
SMMSI/e	1	10	2	TL sensor data (TL---) (°C)
SMMSI/e	1	11	2	TO sensor data (to---) (°C)
SMMSI/e	1	7	2	TS sensor data (tS---) (°C)
Mini SMMS/e	1	6	2	TE sensor data (tE---) (°C)
Mini SMMS/e	1	7	2	TL sensor data (TL---) (°C)
Mini SMMS/e	1	8	2	TO sensor data (to---) (°C)
Mini SMMS/e	1	5	2	TS sensor data (tS---) (°C)

CN30 - Force open all outdoor PMV's short CN30 out and kill power within 2 minutes to ensure valves stay in the fully open position.

## VRF Heat Pump and Heat Recovery Systems

Criteria for the difference between suction and discharge temperatures.

### In Cooling operation.

After running the indoor unit in full cooling mode, (Indoor unit set at Cool 18°C) for 30 minutes, if the measured  $\Delta T$  dry bulb temperature difference between suction and discharge air of the indoor unit is **8°C** or more, operation is normal.

### In Heating operation.

After running the indoor unit in full heating mode, (Indoor unit set at Heat 29°C) for 30 minutes, if the measured  $\Delta T$  dry bulb temperature difference between suction and discharge air of the indoor unit is **15°C** or more, operation is normal.

### Criteria for operating electrical current.

Tables below show the maximum current for each outdoor unit, under standard conditions, operating current is approx. 80% below the values shown in the table.

VRF Heat Pump / Heat Recovery										
Outdoor unit	MMY-MAP	0806*	1006*	1206*	1406*	1606*	1806*	2006*		
Current	(A)	21.5	26.1	31.0	35.8	40.6	44.9	49.3		
Outdoor unit	MMY-MUP	0801*	1001*	1201*	1401*	1601*	1801*	2001*	2201*	2401*
Current	(A)	15.4	20.5	24.5	27.5	30.5	34	36	51	54
Mains power fluctuations will affect the above figures.										

### Criteria for operating pressure.

Operating mode	Cooling (1)	Heating (1)	Cooling (2)	Heating (2)
Indoor temperature (°C)	18~32	15~25	18~32	25~35
Outdoor temperature (°C)	25~35	5~10	15~32	5~35
High Pressure (bar)	20~33	25~33	20~33	25~33
Low Pressure (bar)	5~9	5~7	5~9	5~7
	Data obtained after 15 minutes of operation		Data obtained after 14 minutes of operation	
	SMMSi-e / SHRMi-e		SMMSu	

### Criteria for compressor winding resistance.

Turn off power, disconnect compressor leads.

SMMSi-e / SHRMi-e, Windings to earth resistance 10M $\Omega$  or more. Winding to winding 0.1 ~ 1.0 $\Omega$  range.

SMMSu, Winding to earth resistance 10M $\Omega$  or more. Winding to winding 9.3 ~ 11.50 $\Omega$  range.

### Criteria to check inverter output (Comp IPDU)

Turn off power, remove compressor leads from compressor P.C Board (IPDU), for system with two compressors, remove wiring for both compressors, turn on the power start system in cooling or heating mode, check output voltage across each pair. **(WARNING, High voltage present.)**

No.	Measured Leads	Criteria
1	Red - White	380~550V
2	White - Black	
3	Black - Red	
SMMSi-e / SHRMi-e		

No.	Measured Leads	Criteria
1	CN201 - CN202	240~400V
2	CN202 - CN203	
3	CN203 - CN201	
SMMSu		

### Criteria for fan motor winding resistance.

Turn off power, remove fan motor leads from fan IPDU board, rotate the fan by hand, if the fan does not turn – **replace fan motor**. If fan motor turns, measure the phase to phase (windings) resistance.

SMMSi-e / SHRMi-e, Windings to earth resistance 10M $\Omega$  or more. Winding to winding 8.1 ~ 9.9 $\Omega$  range.

SMMSu, Winding to earth resistance 10M $\Omega$  or more. Winding to winding 9.3 ~ 11.50 $\Omega$  range.

## TCC-net Local Hard Wired Controller Guidelines

### RAV & VRF



**RBC-AS41E**



**RBC-ASC11E / RBC-ASCU11E**



**RBC-MTSC1/2**



**RBC-AMT32-E / RBC-AMTU31-E**



**RBC-AMS41-E**



**RBC-AMSU51E**



**RBC-AMS54/55E-ES**



## System Configuration Menu

Hard wired remote controllers which allow access to the configuration menu are:  
RBC-ASC(U)11-E, RBC-AMT32(AMTU31)-E, RBC-AMS41-E, RBC-AMS51(AMSU51)E, RBC-AMS54/55E-ES.

**RBC-AS41E**, Infra-Red Remotes and Central Controllers **Cannot** be utilised for setting configuration items.

A number of items are configurable by a wired controller – if an indoor unit without a wired controller requires configuration, a wired remote can be temporarily connected for the procedure to be undertaken. In order to access the menu.

Press  + SET + CL for 4 seconds (RBC-AMT32, AMTU31/AMS41)

- The indoor units to be configured will be chosen by pressing the UNIT button.
- The indoor unit being configured runs its fan and swings its louvers (if possible).
- Use SET TEMPERATURE up/down buttons to scroll through the configurable items Use TIMER up/down buttons to choose the configuration value for Use
- SET to confirm configuration value Use CL to undo an incorrect setting provided that configurable item has not been changed)
- Use CHECK to return to normal operation.

### EXAMPLES of COMMON CONFIGURABLE OPTIONS

ITEM	DESCRIPTION	VALUE	DEFAULT	
01	Filter alarm time	Filter sign displayed after selected time has elapsed – or by external pressure switch (CN70) 0000: Inactive                      0001: 150 H 0002: 250 H                        0003: 500 H 0004: 1000 H                      0005: External switch	0002	
02	Dirty environment	Allows filter alarm time to be halved if used in a dirty environment 0000: Standard                    0001: Dirty	0000	
03	Network address	When under network control. 0099: Unset                      0001 to 0064 available	00Un/0099	
04	Priority Setting for Remote Controller	0 = Normal    1= Priority (This remote has priority of mode setting) 0000 = Standard                0001 = Priority	0000	
06	Stratification control	Increases effective return air temperature setting in heating mode (0 to 10K) 0000 to 0010    (Up to +6 recommended)	0002; +2°C Floor type 0000; 0°C	
0b	Demand Control (CN73 / CN4)	0000: Demand Input              0001: O2 Sensor Input	0000: Demand input	
		0002: Card Input setup.3        0003: Fire alarm input (Normal open)		
		0004: Card Input setup. 4        0005: Fire alarm input (Normal close)		
		0006: Notice cord (202)        0007: Card input setup. 5		
0c	Preheat	Preheat indication on display 0000 = available                0001 = unavailable	0000	
0d	Auto mode	Enable or disable Auto mode 0000 = available                0001 = unavailable	0000 except SMMS <u>e</u> /u (0001)	
0E	SHRMi only	Used when multiple indoor units are served via a single FS box 0000 = normal 0001= multiple units	0000	
0F	Heat Mode	Enable or disable Heat Mode (Cooling Only) 0000 = available                0001 = unavailable	0000	
10	Indoor unit model	Must be set when replacing indoor printed circuit board	0000: 1-way cassette (s models)	
			0001: 4-way cassette	
			0002: 2-way cassette	
			0003: 1-way cassette (y models)	
			0004: duct (standard)	
			0005: slim duct	
			0006: duct (high static)	
			0007: ceiling	
			0008: hi wall	
			0010: console	
			0011: concealed floor	
			0014: 4-way compact cassette (600 x 600)	
			0013: tall cabinet	
			0016: fresh air intake	
			0050: air to air heat exchanger	
			11	Indoor unit capacity
0044 =0031    -    0012 =027*    80*				
0041 =0051    -    0013 =030*    90*				
0001 =007*    -    0015 =036*    110*				
0003 =009*    30*    0017 =048*    140*				
0005 =012*    -    0018 =056*    160*				
0006    -    40*    0021 =072*    224*				
0007 =015*    -    0023 =096*    280*				
0009 =018*    56*    0024 =1121    -				
0011 =024*    -    0025 =1281    -				
Air to air heat exchanger Type				
0 0 0 1 = 150m <sup>3</sup> /h                      0 0 0 6 = 800m <sup>3</sup> /h				
0 0 0 2 = 250m <sup>3</sup> /h                      0 0 0 7 = 1000m <sup>3</sup> /h				
0 0 0 3 = 350m <sup>3</sup> /h                      0 0 0 8 = 1500m <sup>3</sup> /h				
0 0 0 4 = 500m <sup>3</sup> /h                      0 0 0 9 = 2000m <sup>3</sup> /h				
0 0 0 5 = 650m <sup>3</sup> /h				
12	System number	DI/SDI indoor and outdoor units are automatically addressed, this value may be set manually but it must be done via the wired controller – on an individual basis. Settings are 0001 to 0030 0001: to 0064: No.30 unit – TCC-Link 0001: to 0128: No.128 unit – TU2C-Link 00Un: Unfixed "U" series remote 0099: Unfixed "Non-U" remote	00Un / 0099	
13	Indoor unit number	Indoor units connected to a common outdoor unit (e.g. twinned indoor units) will have the same system number - settings are 0001 to 0064. Automatically allocated – but may be manually overridden. 0001: to 0064: No.64 unit – TCC-Link 0001: to 0128: No.128 unit – TU2C-Link 00Un: Unfixed "U" series remote 0099: Unfixed "Non-U" remote	00Un / 0099	
14	Group master/slave	Allows selection of master indoor unit within group. Automatically allocated but may be manually overridden. 0000: single indoor unit 0001: group master 0002: group slave 00Un: Unfixed "U" series remote 0099: Unfixed "Non-U" remote	00Un / 0099	
15	Temperature Sensor	Compensation for missing temperature sensor (split systems ONLY) other settings produce F03 fault code 0022	0022	

ITEM	DESCRIPTION	VALUE	DEFAULT												
16	Indoor Fan	Indoor fan speed selection. Binary addition	0015 = all speeds available 1 = auto; 2 = low; 4 = medium; 8 = high	0015 except high static 0008											
17	Set point shift	Cooling temperature set point shift. (Shifted by 1 to 10 k)	0000 = no shift, 0001 = 1 k shift, - 0010 = 10 k shift	0000											
19	Louver functions	None, swing only, swing and auto (where applicable)	0000: disabled, 0001: swing only 0004: all options												
1b	Compressor on time	Compressor minimum on time (0 = 5 minutes 1 = 4 minutes)	0000: 0 – 5 min 0001: 1 - 4 min.	0000											
1E	Dead band - auto	Changeover sensitivity in automatic mode (1 to 10 k adjustable) (Ts+/- 5°C)  Ts: Remote controller setup temp.	0000: 0 K, 0010: 10 K	0003 (Ts+/- 1.5°C)											
1F	Max. Setting	Cooling mode maximum temperature setting (18 – 29°C)	0018 = 18°C, 0020 = 20°C 0029 = 29°C	29 ° C											
20	Min. Setting	Cooling mode minimum temperature setting (18 – 29°C)	0018 = 18°C, 0020 = 20°C 0029 = 29°C	18 ° C											
21	Max. Setting	Heating mode maximum temperature setting (18 – 29°C)	0018 = 18°C, 0020 = 20°C 0029 = 29°C	29 ° C											
22	Min. Setting	Heating mode minimum temperature setting (18 – 29°C)	0018 = 18°C, 0020 = 20°C 0029 = 29°C	18 ° C											
23	Max. Setting	Dry mode maximum temperature setting (18 – 29°C)	0018 = 18°C, 0020 = 20°C 0029 = 29°C	29 ° C											
24	Min. Setting	Dry mode minimum temperature setting (18 – 29°C)	0018 = 18°C, 0020 = 20°C 0029 = 29°C	18 ° C											
25	Max. Setting	Auto mode maximum temperature setting (18 – 29°C)	0018 = 18°C, 0020 = 20°C 0029 = 29°C	29 ° C											
26	Min. Setting	Auto mode minimum temperature setting (18 – 29°C)	0018 = 18°C, 0020 = 20°C 0029 = 29°C	18 ° C											
28	Auto restart	Enable or disable	0000: disabled 0001: enabled	0000											
29	Humidifier condition	Operating condition of humidifier	0000: Usual 0001: Condition ignored	0000											
2A	CN70	Selection of optional error input (CN70) (TCB-PCUC2E: CN3)	0000: Filter input 0001: Alarm input, 0002: None	0002											
2d	Modes available	Binary addition of modes available.	0015= all modes 1 = fan; 2 = cool; 4 = dry 8 = heat	0015											
2E	External On / Off control	Making or breaking terminals 1 and 2 of CN61 (indoor PCB) External switching option, remove jumper 01 master indoor PCB allows continuous contact switch- link 01 in place; pulse switch required	0000: Usual 0001: Card input setup. 1 (3) 0002: Fire alarm input (arbitrator contact) 0003: Card input setup. 2 (4) 0004: Notice cord (201) 0005: Card input setup. 5	0000 (HA Terminal)											
31	External fan control	Through remote controller and CN32 indoor PCB Used for setting ON/OFF control for VN-M units when paired with A/C systems	0000 = disable, 0001 = enabled	0000											
32	TA Sensor location	Return air/room sensor OR in local controller	0000: return air sensor 0001: remote sensor	0000											
33	Unit of temperature	Celsius or Fahrenheit	0000 = Celsius, 0001 = Fahrenheit	0000											
36	Remote controller	Temperature display	0000: temperature setting 0001: temperature room sensing	0000											
40	Drain pump	Drain pump control	0000: None 0001: Pump ON 0002: None 0003: Pump OFF	0003											
45	Anti-smudge	4-way cassette anti smudge effect via louver position	0000 = enabled, 0001 = disabled	0000											
5d	1-Way Cassette Airflow Correction Ceiling height (m)	#P015, 018	#P024		0000 0001 0003	0000									
		3.5	3.8												
		4.0	4.0												
		4.2	4.2												
	2-Way Cassette Airflow correction Ceiling height (m)	#P007 to #P030	#P036 to #P056			0000 0001 0003	0000								
		2.7	2.7												
		3.2	3.0												
		3.8	3.5												
	4-Way Cassette Airflow correction Ceiling height (m)	- RAV56*		RAV80*		RAV90*, 110*, 160*		0000 0001 0003	0000						
		#P005 to #P012		#P015 to #P018		#P024 to #P030									
		4-way	3-way	2-way	4-way	3-way	2-way			4-way	3-way	2-way	4-way	3-way	2-way
		2.7	2.8	3.0	2.8	3.2	3.5			3.0	3.3	3.6	3.9	4.2	4.5
		-	-	-	3.2	3.5	3.8			3.3	3.5	3.8	4.2	4.4	4.6
		-	-	-	3.5	3.8	-			3.6	3.8	-	4.5	4.6	-
		4-Way Compact Cassette Airflow correction Ceiling height (m)	- RAV40*		RAV56*						0000 0002 0003	0000			
			#P007 to AP012		#P015		#P018								
			2.7		2.9		3.2								
			-		3.2		3.4								
		Slim Ducted Airflow correction External static pressure	- RAV40*-56*		-						0000 0001 0003 0006	0000			
			#P0054		#P0074 to #P0184		#P0244 to #P0274								
	10 Pa		10 Pa		10 Pa										
	20 Pa		20 Pa		20 Pa										
	35 Pa		35 Pa		35 Pa										
	50 Pa		50 Pa		50 Pa										
	Standard Ducted Airflow correction External static pressure	RAV40*-56*		RAV80*		RAV110*-160*		0001 0000 0003 0002 0004 0005 0006	RAV40* 0001 RAV-80* 0001 RAV110* 0003 RAV140* 0003 RAV160* 0003 AP007-018 0001 AP024-030 0000 AP036-058 0003						
		#P005 to #P018		#P024 to #P030		#P036 to #P058									
		30 Pa		30 Pa		30 Pa									
		40 Pa		40 Pa		40 Pa									
50 Pa		50 Pa		50 Pa											
65 Pa		65 Pa		65 Pa											
80 Pa		80 Pa		80 Pa											
100 Pa		100 Pa		100 Pa											
120 Pa		120 Pa		120 Pa											
Concealed Duct High Static Fresh Air Intake External static pressure		UP0481-1281								0001 0002 0000 0003 0004 0005 0006	0000				
		50Pa													
		75Pa													
	100Pa														
	150Pa														
	125Pa														
	175Pa														
Concealed Duct High Static External Static Pressure	#P0181 - 0561		#0721 - 0961				0001 0002 0000 0003 0004 0005 0006	0000							
	50Pa		50Pa												
	75Pa		83Pa												
	100Pa		150Pa												
	150Pa		217Pa												
	125Pa		117Pa												
	175Pa		183Pa												
	200Pa		250Pa												
	VN-M (HE1)	Maximum Fan Speed Selection	0000: High 0001: Extra High	0000											
60	Timer lock	Locks timer in wired local controller – maintaining last setting	0000: unlocked, 0001: locked	0000											
62	Anti-smudge	4-way cassette – ant smudge via fan speed (Coanda effect)		0001											
69	Louver	Louver restriction when cooling	0000 = restricted to horizontal positions 0001 = full range of movement	0000											

ITEM	DESCRIPTION	VALUE						DEFAULT	
6E	Setting for air direction kit (1)	Smart Cassette ONLY.		GM56	GM80	GM110	GM140	0000	
			Standard	0000	0000	0000	0000		
			3-way air flow	0000	0000	0080	0075		
			2-way air flow	0090	0090	0080	0070		
77	Dual set point	<b>RBC-AMS55E-ES RBC-AM5U51ES ONLY</b>						0000 = Available 0001 = Unavailable	0000
79	Alarm Output setup of header unit	VRF SMMSu only						0000: Not including the state of following unit 0001: Including the state of following unit	0000
88	Setting for air direction kit (2)	Smart Cassette ONLY.		GM56	GM80	GM110	GM140	According to capacity type.	
			Standard	0000	0072	0075	0070		
			3-way air flow	0060	0060	0050	0048		
			2-way air flow	0050	0050	0040	0038		
8b	Heating Correction	Heating output reduction split systems only						0000: None, 0001: Correction	0000
8c	Forced Defrost	Run group in HEAT mode after setting defrost is conducted automatically. Value is reset automatically back to 0000						0000 = disabled 0001 = enabled	0000
A0	Fan & Pump	Fan and pump operation during oil retrieval mode (VRF cassettes ONLY)						0000 = fan off, pump on 0003 = fan on, pump on	0003
b3	Soft Cooling	RBC-AMS55E-ES, RBC-AM5U51ES						0000 = Unavailable 0001 = Available	0001
b5	Occupancy Sensor	Where applicable						0000 = None 0001 = Occupancy sensor provided	0000
b6	Occupancy sensor	Enable / Invalid. Absence time judgement time.						0000 = Invalid, 0001 = 30min, 0002 = 60min, 0004 = 120min, 0005 = 150min.	0002
b7	Occupancy sensor	Operation at absent time.						0000 = Standby 0001 = Operation stop	0000
C2	Energy save	Outdoor unit energy demand 1% increments 50 to 100%						0050 ~ 0100	0075
CE	Replace indoor PCB	4-Way cassette unit capacity code	0000 = disable						0000
			0006 = RAV40*						
			0009 = RAV56*						
			0012 = RAV80*						
			0015 = RAV110*						
			0017 = RAV140*						
			0018 = RAV160*						
CF	Model name	4-way cassette type model name						0000: Standard model model 0001: Larger case model	Depending on model
d0	Power Saving Mode	Whether the power saving mode can be set by the remote controller						0000 = Invalid 0001 = Valid	0001
d3	Self-clean operation	Self-clean dry operation						0000 = disable 0001 = enable	0001
E0	Destination	SMMSu						0000: Japan 0003: China 0004: Global	0004
E6	Wireless Channel	Compact Cassette. Channel selection						0000 = A channel, 0001 = B channel	0000
F0	Swing mode	Compact Cassette. Louver swing options						0001 = Standard, 0002 = Dual swing 0003 = Cycle swing	0001
F1	Louvre lock Flap 1	4-Way cassette 5 fixed positions	0000 Full swing						0000
F2	Louvre lock Flap 2		0001 Fixed position 1 (Horizontal Discharge)						
F3	Louvre lock Flap 3		0002 Fixed position 2						
F4	Louvre lock Flap 4		0003 Fixed position 3						
			0004 Fixed position 4						
F6	Application control kit	Presence of Application Control Kit (TCB-PCUC1/2E-1)						0000 = None, 0001 = Exist	0000
FC	Communication protocol	SMMSu Heat pump only.						0000: TCC-Link 0001: TU2C-Link	0000
Fd	Priority	VRF Heat Recovery. FS unit priority operation mode						0000: Heating 0001: Cooling	0000
FE	FS unit address	VRF Heat recovery. FS unit addressing						0001: to 0064: No.64 unit – TCC-Link 0001: to 0128: No.128 unit – TU2C-Link 00Un: Unfixed "U" series remote 0099: Unfixed "Non-U" remote	00Un / 0000
180 to 189	TU2C-Link	Additional codes						Data to follow	
103	Remote controller	VRF IDU "U" series. Local remote controller used or not used						0000: Use 0001: Do not use	0000
1FB	Central Control	VRF IDU "U" series. Central remote / BMS interface control status						0000: No central device (Remote controller use is possible) 0001: Central device connected (Remote controller use impossible).	0000
1FC	IDU	"U" series IDU Terminating resistance						0000: Off 0001: On	0000

Three-digit DN codes only available with "U" series remote controllers.

VRF SMMSu Outdoor Unit Function Code's (O.DN)									
ITEM	DESCRIPTION	VALUE						DEFAULT	
003	Type Setting	Code range: 0000 to 0255						According to type	
		Type setting		DN Code (03)					
		0		0000					
		1		0001					
		2		0002					
		-		-					
		-		-					
						*DN Code (0003) = 0000: undefined			
004	7-segment display	7-segment Display Contents Control						0000: Outdoor unit No. 0001: Start priority number	0000
005	NFC	Prohibition/Permission of the NFC Setting						0000: Initial state 0001: Prohibition 0002: Permission	0000
007	Compressor	Compressor maintenance period time						0000: 0h 0001 to 0063 (1000h to 63000h)	0000
008	Operation mode	Operation mode selection control						0000: non-selected indoor units keep standby state (thermostat OFF) 0001: Changing non-selected indoor units mode selection	0000
009	Capacity demand	Capacity / Power demand control						0000: Capacity demand 0001: Power demand	0000

Three-digit DN codes only available with "U" series remote controllers.



VRF SMMSu Outdoor Unit Function Code's (O.DN)																																																																
ITEM	DESCRIPTION		VALUE	DEFAULT																																																												
00A	Power consumption	Power consumption upper limit standard value setting Heating (For power demand) - High	Code range: [0A] [0C: 0000 to 0255 (1kW to 255kW)] [0B] [0D]: 0000 to 0099 (0kW to 0.99kW) Power consumption upper limit standard value. <table border="1"> <thead> <tr> <th></th> <th colspan="3">DN Code</th> </tr> </thead> <tbody> <tr> <td>Heating</td> <td>[00A]</td> <td>[00B]</td> <td></td> </tr> <tr> <td>Cooling</td> <td>[00C]</td> <td>[00D]</td> <td></td> </tr> <tr> <td>No power demand function</td> <td>0000</td> <td>0000</td> <td></td> </tr> <tr> <td></td> <td>0.01kW</td> <td>0000</td> <td>0001</td> </tr> <tr> <td></td> <td>0.02kW</td> <td>0000</td> <td>0002</td> </tr> <tr> <td></td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td></td> <td>10kW</td> <td>0010</td> <td>0000</td> </tr> <tr> <td></td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td></td> <td>30.5kW</td> <td>0030</td> <td>0050</td> </tr> <tr> <td></td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>		DN Code			Heating	[00A]	[00B]		Cooling	[00C]	[00D]		No power demand function	0000	0000			0.01kW	0000	0001		0.02kW	0000	0002		-	-	-		10kW	0010	0000		-	-	-		30.5kW	0030	0050		-	-	-	0000: 0kW																
		DN Code																																																														
Heating		[00A]		[00B]																																																												
Cooling		[00C]		[00D]																																																												
No power demand function	0000	0000																																																														
	0.01kW	0000	0001																																																													
	0.02kW	0000	0002																																																													
	-	-	-																																																													
	10kW	0010	0000																																																													
	-	-	-																																																													
	30.5kW	0030	0050																																																													
	-	-	-																																																													
00b	Power consumption upper limit standard value setting Heating (For power demand) - Low		0000: 0kW																																																													
00C	Power consumption upper limit standard value setting Cooling (For power demand) - High		0000: 0kW																																																													
00d	Power consumption upper limit standard value setting Cooling (For power demand) - Low		0000: 0kW																																																													
00E	Demand Control	Setting value during demand control for demand standard specification can be set with DN code [00E], value for expansion specifications can be set in two steps, [DN codes [00F], [010] during normal operation and demand control (Setting value DN code [00E])	<table border="1"> <thead> <tr> <th></th> <th colspan="3">DN Code</th> </tr> <tr> <th>Demand control</th> <th>[00E]</th> <th>[00F]</th> <th>[010]</th> </tr> </thead> <tbody> <tr> <td>100%</td> <td>0</td> <td>0</td> <td>0</td> </tr> <tr> <td>95%</td> <td>1</td> <td>1</td> <td>1</td> </tr> <tr> <td>90%</td> <td>2</td> <td>2</td> <td>2</td> </tr> <tr> <td>85%</td> <td>3</td> <td>3</td> <td>3</td> </tr> <tr> <td>80%</td> <td>4</td> <td>4</td> <td>4 Default</td> </tr> <tr> <td>75%</td> <td>5</td> <td>5</td> <td>5</td> </tr> <tr> <td>70%</td> <td>6</td> <td>6</td> <td>6</td> </tr> <tr> <td>65%</td> <td>7</td> <td>7</td> <td>7</td> </tr> <tr> <td>60%</td> <td>8</td> <td>8 Default</td> <td>8</td> </tr> <tr> <td>55%</td> <td>9</td> <td>9</td> <td>9</td> </tr> <tr> <td>50%</td> <td>10</td> <td>10</td> <td>10</td> </tr> <tr> <td>-</td> <td>11 to 14</td> <td>11 to 14</td> <td>11 to 14</td> </tr> <tr> <td>0%</td> <td>15 Default</td> <td>15</td> <td>15</td> </tr> </tbody> </table>		DN Code			Demand control	[00E]	[00F]	[010]	100%	0	0	0	95%	1	1	1	90%	2	2	2	85%	3	3	3	80%	4	4	4 Default	75%	5	5	5	70%	6	6	6	65%	7	7	7	60%	8	8 Default	8	55%	9	9	9	50%	10	10	10	-	11 to 14	11 to 14	11 to 14	0%	15 Default	15	15	0015: 0% (Forced stop)
	DN Code																																																															
Demand control	[00E]		[00F]	[010]																																																												
100%	0		0	0																																																												
95%	1		1	1																																																												
90%	2		2	2																																																												
85%	3		3	3																																																												
80%	4		4	4 Default																																																												
75%	5		5	5																																																												
70%	6		6	6																																																												
65%	7		7	7																																																												
60%	8		8 Default	8																																																												
55%	9		9	9																																																												
50%	10		10	10																																																												
-	11 to 14		11 to 14	11 to 14																																																												
0%	15 Default	15	15																																																													
00F	Demand control (Expansion 1)		0008: 60%																																																													
010	Demand control (Expansion 2)		0004: 80%																																																													
012	Optional output	Optional output setting control 1 (CN514)	0000: Compressor operation output 0001: Operating rate output	0000																																																												
018	Priority Operation	Priority operation mode setting	0000: Priority Heating 0001: Priority Cooling 0002: Priority operation unit No. 0004: Priority indoor unit	0000																																																												
019	CDU Fan Static	VRF SMMSu Outdoor unit fan static pressure shift	0000: Usual 0001: High static	0000																																																												
01A	Operation standby	Operation standby Heating standby	0000: None 0001: Standby	0000																																																												
01d	System Defrost	System cooperation defrosting setup 1 (the number of cooperation)	0000: None (follower) 0001: Prohibition 0002: 2 system cooperation (Header) 0003: 3 system cooperation (Header) *Set [0002] or [0003] to O.DN [01D] for outdoor unit set to header in O.DN [01F]	0000																																																												
01E	System Defrost	System cooperation defrosting setup 2 (zone address)	0000: None 0001 ~ 0128: Address 0001 in case of not using central remote controller for control of system cooperation defrosting. If using, set 0001 to 0128 according to manual	0000																																																												
01F	System Defrost	System cooperation defrosting setup 3 cooperation address)	0000: none 0001: Header 0002 ~ 0003: Follower 2 ~ 3	0000																																																												
03d	Back Up	Existence of automatic back up	0000: Provided 0001: Not provided	0000																																																												
03F	Operation Control	Operation control during overflow detection of indoor unit (IDU Float Switch)	0000: System abnormal stop 0001: System continuous operation	0000																																																												
040	Abnormal Input	Operation control during outside abnormal input switching control in receiving [L30][L02] from indoor	0000: System continuous operation 0001: System abnormal stop	0000																																																												
082	Communication	Communication setting (TCC-Link – TU2C-Link)	0000: TCC-Link 0003: TU2C-Link	0000																																																												

Three-digit DN codes only available with "U" series remote controllers.

Note: Some options are model specific.

Optional Control Accessories								
	ITEM	RAV	VRF	VN	ESTIA	RAS	DESCRIPTION	DETAILS
Wired Controllers	RBC-AMT32E	✓	✓				Standard Remote Controller	Full Control Including Service Function
	RBC-AMTU31E	✓	✓				Standard Remote Controller	Compatible with TU2C-Link equipment (SMMSu) and TCC-Link (RAV+VRF)
	RBC-AMS41E	✓	✓				Remote Controller Built-in Timer	Full Control Including Service Function and Programmable 24/7 Day Timer
	RBC-AMS51E-ES*	✓	✓				LITE-Vision Plus Remote Controller	Includes Timer and Backlight Display, Power Save Functions, Multilingual.
	RBC-AMS54*/55E-ES	✓	✓				Remote Controller Built-in Timer	Programmable Timer, Backlight, Multilingual, Dual Set Point, Soft Cooling & Return Back Functions.
	RBC-AMSU51ES	✓	✓				Remote Controller Built-in Timer	Compatible with TU2C-Link equipment (SMMSu) and TCC-Link (RAV+VRF)
	RBC-AMS41E2*	✓	✓				Simplified Controller	Ideal for Hotel and Base use Applications, (No Service Function Available)
	RBC-ASC11E	✓	✓				Compact Local Controller	Ideal for Hotel and Base use Applications, (Service Function Available)
	RBC-ASCU11E	✓	✓				Compact Local Controller	Compatible with TU2C-Link equipment (SMMSu) and TCC-Link (RAV+VRF)
	RBC-MTSC1/2	✓	✓				Colour Smart Touch Local Remote	Ideal for Hotel and Base use Applications, (No Service Function Available)
	NRC-01HE				✓		VN-M Remote Controller	Remote controller for Air-to-Air Heat Exchangers.
	RBC-RWS20E					✓	Remote Controller for RAS	Wired Remote Controller for RAS Ducted Units
	TCB-EX21TLE	✓	✓				Scheduled Timer	Use with Central Controllers, BMS-280TLE, BMS-SM1280ETLE, TCB-CC163TLE2, RBC-AMT32E, NRC-01HE
	HWS-AMS54E				✓		Standard Air to Water Remote	Estia Air to water Remote Controller
	HWS-AMSU51E						Standard Air to Water Remote	Compatible with TU2C-Link equipment TU2C-Link and TCC-Link Estia Air to Water
TCB-TC41LE	✓	✓				Auto-configurable Remote Sensor	Automatic control of Room Temperature Sensing Comfort Condition of system.	
Wireless Controllers	RBC-AX32(W/WS-E)	✓	✓				4-Way Cassette Corner Receiver	Replacement Corner Pocket with Built-in Receiver and Remote Controller
	RBC-AX32UM(W)-E	✓	✓				7-Series Compact Cassette Corner Receiver	Replacement Corner Pocket with Built-in Receiver and Remote Controller
	RBC-AX32UW(W)-E		✓				2-Way Cassette Receiver	Replacement Receiver and Remote Controller
	RBC-AX33CE	✓	✓				Under Ceiling Receiver	Replacement Receiver and Remote Controller
	TCB-AX32E2	✓	✓				Independent External Receiver	Receiver and Remote Controller for all Models
Central Controllers	TCB-CC163TLE2*	✓	✓	✓			16 Zone On-Off Controller	Enables the Switching On and Off by Volt Free Contact
	BMS-CM1280TLE*	✓	✓	✓			Compliant Manager	Enables Full Control of up to 128 Indoor Units.
	TCB-SC643TLE	✓	✓	✓			64 Zone Central Remote	Enables Full Control of up to 64 Indoor Units.
	TCB-SC640U-E	✓	✓	✓	✓ <sup>3</sup>		64 Zone TU2C Central remote	Enables Full Control of up to 64 indoor Units, TU2C-Link
	BMS-SM1280ETLE	✓	✓	✓			128 Zone, Smart Manager with Data Analyser	Smart Manager with Remote Access via Web Browser and Data Analysis Features.
	BMS-CT1280E	✓	✓	✓			128 Zone, Colour Touch Screen with Data Analyser	Full Control of up to 128 Indoor Units with Remote Access via Web Browser and Data Analysis Features.
	BMS-CT512E	✓	✓	✓			512 Zone, Colour Touch Screen with Data Analyser	Full Control of up to 512 Indoor Units with Remote Access via Web Browser and Data Analysis Features.
RBC-TBPTS	✓	✓	✓			64 Zone, Colour Touch Screen Central	Colour Touch Screen Central Remote Controller to control up to 64 Indoor Units	
Indoor Interfaces	TCB-SIR41UM-E	✓	✓				7-Series Compact Cassette Occupancy Sensor	Occupancy Sensor (PIR)
	TCB-PCNT30TLE2	✓					Network Adaptor U3/U4 TCCJ Link	Allows connection of RAV units to the TCCJ Link Network
	TCB-PCNT20E	✓					Network Adaptor XY AI Network	Connects a RAV unit to the old AI Network.
	TCB-PX30MUE	✓					Terminal Box	Enclosure when used with all RAV Cassette Units.
	RBC-SMF1	✓	✓				Fan Interface	Interface to provide an output to enable an external fan from the indoor unit.
	RBC-SMIM2	✓	✓				Indicator Module Mode	Interface to Indicate the Mode of Operation, Output for Cool, Heat and Fan Only.
	RBC-SMIM3	✓	✓				Indicator Module ON/OFF and Fault	Interface to indicate Unit Operation and Stopping Fault.
	RBC-SMIM4	✓	✓				Indicator Module ON/OFF, Stopping Fault and Unit Enable	Interface to Indicate Unit Operation and Stopping Fault, also has connections to Enable the Unit.
	RBC-FDP3-PE	✓	✓				BMS Interface	Interface to Connect to a 0 to 10v or Resistance Based BMS, also has Modbus Functionality.
	RBC-TSI1	✓	✓				Monitoring and Control Interface	Interface to Connect to a 0 to 10v or Resistance Based BMS, also has Modbus Functionality.
	RBC-IT2-PE	✓					Timer Interface	Interface to Accept 230v Input from a Timer for R22/R407C Systems.
	RBC-IT3-PE					✓	Daiseikai / Avant Timer Interface	Connects to "HA" Socket on Indoor Unit.
	TCB-PCOS1E2	✓		✓ <sup>1</sup>			Application Control PCB	Compatible models, RAV-SM/SP/GP + VN-M (HE1)
	TCB-PCM03E				✓		External Input PCB	Interface to Provide External ON/OFF for Estia System
	TCB-PCIN3E				✓		Output PCB	Interface to Provide an Output for Estia Fault/Run.
TCB-IFGSM1E	✓					GSM Control Interface	Connects to CN61 at indoor PCB on RAV allowing remote ON/OFF, Operation Status and Alarm Monitoring.	
TCB-KBCN600PE	✓	✓				Operation Status	Operation Status of Indoor Units via Indoor PCB "CN61" socket.	

Notes: \* No longer available, <sup>1</sup> VN-M###HE1 only <sup>3</sup> Estia R32 only

### Optional Control Accessories

	ITEM	RAV	VRF	VN	ESTIA	RAS	DESCRIPTION	DETAILS
Indoor Interfaces	RBC-VNL1			✓			Unit Interface Lead	Volt Free Interface for VN-M##HE units to Control ON/OFF, Fan Speed and Damper Position.
	RBC-CN61	✓	✓	✓ <sup>1</sup>			On/Off Interface	Remotely Switches Unit ON/OFF, via NO VOLT interface, Connects to indoor PCB "CN61" Socket.
	CDL-BMS01	✓	✓	✓ <sup>1</sup>			On/Off Interface with Operation and Fault	Connects to the "CN61" socket on Indoor PCB, allowing for remote VOLT FREE On/OFF, System Operation and System Fault via 12volt Interface
Outdoor Interfaces	TCB-PCDM4E		✓				Power Peak Control	Power Peak Cut Control
	TCB-PCIN4E		✓				Operation Output Display	Operation/Error Output Display, Compressor Operation Control.
	TCB-PCM04E		✓				Operation Control	Night Set Back Control, Snowfall Fan Control, External ON/OFF, Operation Mode Control.
	TCB-PC0S1E2*		✓				Outdoor Control	Peak Power Cut and Noise Reduction, Output for Compressor Operation. (*Not applicable to all units.)
Other Accessories	RBC-FSEX15		✓				3 Series Flow Selector Lead	15m Extension Lead Kit for 3 Series SHRMI/e Flow Selector Box.
	RBC-SMT1	✓ <sup>2</sup>	✓ <sup>2</sup>				Timer Interface Lead	Provides ON/OFF Control from Wired Remote or Central Remote Controllers. (*excludes RBC-AS41E2)
	RBC-CK1*	✓					VRF to RAV Conversion Kit	Kit to Convert VRF Floor/Chassis units to Connect with RAV Outdoor Units (R410A ONLY).
	RBC-CK2*	✓					VRF to RAV Conversion Kit	Kit to Convert VRF Tall Floor Units to Connect with RAV Outdoor Units (R410A ONLY).
	TCB-KB0S2E	✓					Optional Connection Interface	RAVSP804/1604 Peak-Cut Control, Night Operation, Compressor Status.
BMS Interfaces	CDL-BMS02	✓	✓				Modbus Interface	Modbus Interface for control of up to 64 indoor units
	CDL-BMS03	✓	✓				BACnet Interface	BACnet interface for control of up to 64 indoor units
	CDL-BMS04	✓	✓				Trend Interface	Trend interface for control of up to 64 indoor units, requires IQ3/IQ4
	OASIS-064EM1	✓	✓				Control Solution	Control panel for 64 indoor unit's c/w data logging, web server & optimisation
	OASIS-128EM1	✓	✓				Control Solution	Control panel for 128 indoor unit's c/w data logging, web server & optimisation
	TCB-IFMB641TLE	✓	✓				Modbus Interface	Connect the system to a Modbus Building Management System control up to 64 indoor units
	BMS-IFMB1280U-E	✓	✓		✓ <sup>3</sup>		Modbus Interface TU2C-Link	Connect the system to a Modbus Building Management System control up to 128 indoor units TU2C-Link, 64 TCC-Link
	BMS-IFMBOUEW_E				✓		Estia Hydro Unit Modbus Interface	Connect the system to a Modbus Building Management System, one per hydro box, R32 and backward compatible with 5 series Estia
WIFI Interfaces	RB-N103S-G					✓	WIFI Connection	Toshiba RAS WIFI interface, suitable for: Daiseikai-10,13,16, Shorai -18,22,24, Seiya- 24
	RB-N105S-G					✓	WIFI Connection	Toshiba RAS WIFI interface, suitable for: Shorai-10,13,17, Seiya-05.07,10,16,18, Console-10,13,18
	BMS-IWF0320E	✓	✓				WIFI Connection	Toshiba RAV-VRF WIFI interface, maximum quantity of indoor units 32, IOS or Android App.
	RBC-IS-IF-Wifi-1	✓	✓			✓	WIFI Connection	Intensishome WIFI Universal Interface Infrared Remote RAS/RAV/VRF
	RBC-TO-RC-Wifi-1	✓	✓				WIFI Connection	Intensishome WIFI Interface for Wired Remotes RAV/VRF.
Refrigerant Leak Detection	TCB-LDS1	✓	✓				White Ref. Leak Detector	Leak detection concentration sensor with White Faceplate and remote 12 V transformer
	TCB-LDS2	✓	✓				Stainless Steel Ref. Leak Detector	Leak detection sensor with Stainless Steel Faceplate and remote 12 V transformer
	RBC-RCS1	✓	✓				White Ref. Leak Detector	Leak detection concentration sensor with White Faceplate
	RBC-RCS2	✓	✓				Stainless Steel Ref. Leak Detector	Leak detection concentration sensor with Stainless Steel Faceplate
	TCB-LD12V	✓	✓				Remote Power Supply	Leak detection transformer 12 V and cable kit (use with TCB-LDS1/TCB-LDS2)
	TCB-LD1	✓	✓				External Leak Detection and Pump Back panel	Leak Detection Panel VRF SHRMI/SMMSI
	TCB-LD2-UK	✓	✓				External Leak Detection and Pump Back Panel	Leak Detection Panel VRF SHRME/SMMSI
	RBC-RP1	✓	✓				Refrigerant Leak Detection Repeater Panel	Repeater Panel
Auxiliary Options	TCB-GFC1603UE	✓					Fresh air filter chamber	4- Smart Cassette only way
	TCB-GFC1602UE	✓	✓				Fresh air filter chamber	4-way standard cassette only
	TCB-SP1603UE	✓					Spacer for height adjustment	4- Smart Cassette only way
	TCB-SP1602UE	✓	✓				Spacer for height adjustment	4-way standard cassette only
	TCB-BC1603UE	✓					Air discharge direction kit	4- Smart Cassette only way
	TCB-BC1602UE	✓	✓				Air discharge direction kit	4-way standard cassette only
	TCB-FF101URE2	✓	✓				Auxiliary fresh air flange	4-way smart cassette, 4-way standard cassette, compact cassette, slim duct
	TCB-SF56C6BPE	✓	✓				Spigot shaped flange	Suitable for RAV-SM40#/56#BTP-E1-MMD-AP007#/018-HP1-E
	TCB-SF80C6BPE	✓	✓				Spigot shaped flange	Suitable for RAV-SM80#BTP-E1-MMD-AP024#/030#BHP1-E
	TCB-SF160C6BPE	✓	✓				Spigot shaped flange	Suitable for RAV-SM110#/160#BTP-E1-MMD-AP036#/056#BHP1-E

Note: <sup>2</sup> Check with Technical for Compatibility - For additional control options contact Cool Designs Technical Support.

## TU2C-LINK /TCC-Link Control


TCC-Link control logic is used on RAV, SM/SP,GM & GP, plus VRF, Mini VRF (Single and Twin fan versions), Heat pump, SMMS, SMMSi, SMMSe & SMMSu, Heat Recovery, SHRM, SHRMi & SHRMe.  
TU2C-Link is the new control logic used with VRF Heat Pump, SMMSu equipment, remote controllers RBC-AMTU31E, ASCU11E and AMSU51E are compatible with both TU2C-Link and TCC-Link equipment, with additional functions when used with VRF Heat Pump SMMSu equipment.

### Features


- ⇒ 2 wire, screened, non-polarised controller connection
- ⇒ Infrared control available for cassette, under ceiling, high wall, ducted models
- ⇒ Remote temperature sensing available, Unit, Wired controller, Separate room sensor
- ⇒ Automatic addressing of groups and twins
- ⇒ Optional control of external fan, (RBC-SMF1)
- ⇒ High ceiling compensation (code 5d)
- ⇒ Time for filter warning is configurable (code 01)
- ⇒ Each mode of operation (auto – heat – cool – dry) may have a different temperature set point
- ⇒ Auto restart is configurable (code 28)

### Cassette PCB


- ⇒ DC fan motor with feedback circuit
- ⇒ Red LEDs indicate communication with local controller and PCB activity when illuminated.
- ⇒ Wired or infrared control (or both)
- ⇒ Drain pump and float switch

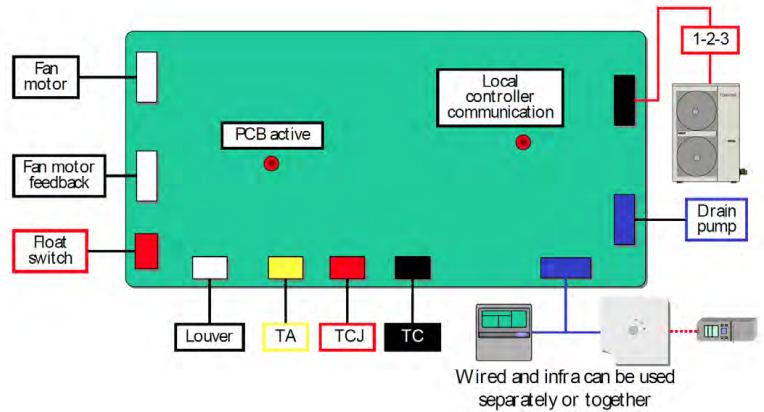

### Wired controller (RBC-AMT32E/AMTU31E/41E)

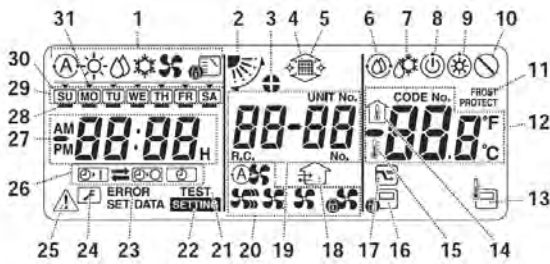


- |                        |                              |                           |
|------------------------|------------------------------|---------------------------|
| 1. Mode of operation   | 11. Frost protection         | 21. TEST                  |
| 2. Louver              | 12. Numeric display          | 22. Setting               |
| 3. Fixed louver        | 13. Remote controller sensor | 23. Error                 |
| 4. Filter              | 14. Not used                 | 24. Servicing             |
| 5. Not used            | 15. Set Temperature          | 25. Inspect               |
| 6. Self-clean function | 16. Central control          | 26. Timer function        |
| 7. Defrosting          | 17. Save Operation           | 27. Numeric display       |
| 8. Ready               | 18. Ventilation operation    | 28. Operation reservation |
| 9. Heating ready       | 19. Numeric display          | 29. Days of the week      |
| 10. Not used           | 20. Air speed                | 30. Special holiday       |

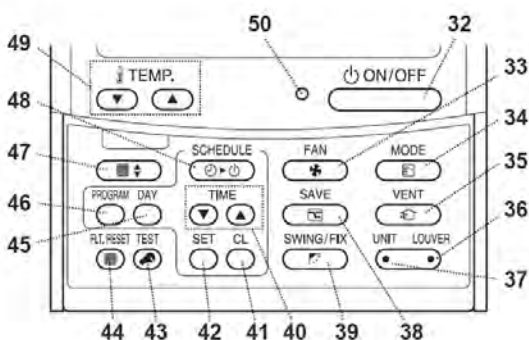


- |                      |                         |
|----------------------|-------------------------|
| 32. On/OFF button    | 42. Set button          |
| 33. Fan button       | 43. Test button         |
| 34. Mode button      | 44. Filter reset button |
| 35. Vent button      | 45. Day button          |
| 36. Louver button    | 46. Program button      |
| 37. Unit button      | 47. Grille button       |
| 38. Save button      | 48. Schedule button     |
| 39. Swing/Fix button | 49. Temperature buttons |
| 40. Time button      | 50. ON/OFF Light        |
| 41. Clear button     |                         |

**Wired controller (RBC-AMS55E-ES/AMSU51E)**

Standard Display

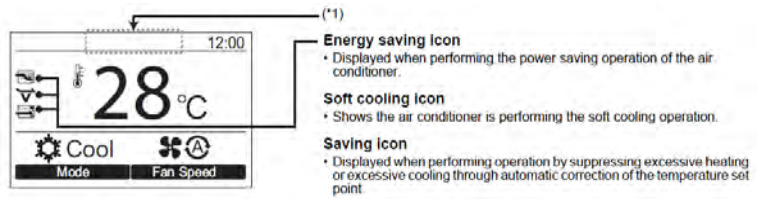


Detailed Display

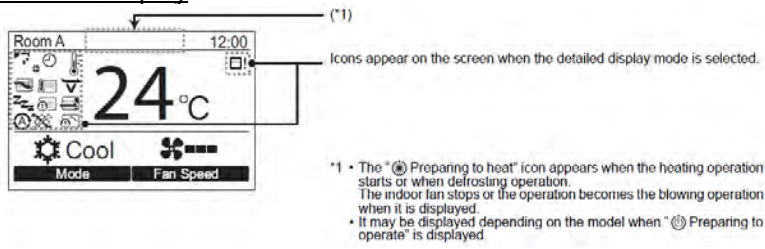

Icon List

	Shows the Energy saving operation is activated. (page 28)		Shows a timer function is activated. (page 19, 21)
	Shows the remote sensor is activated. (*2)		Shows the Louver lock is activated. (page 18)
	Shows the Night operation is activated. (page 25)		Shows the setting of the louver. (page 13, 14)
	Shows the central control device prohibits the use of the remote controller (page 47)		Shows the filter needs to be cleaned. (page 26, 48)
	Shows the saving operation is activated. (page 33)		Shows soft cooling is activated. (page 41)
			Shows operation switching control is in progress.


Buttons

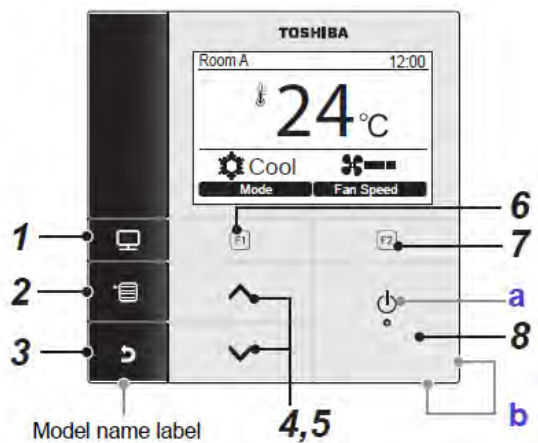



Group control

- Indoor units may be supplied from any phase.
- Up to 8 indoor units per group, TCC-Link, 16 for TU2C-Link. (When TCB-TC41LE remote temperature sensor/ second remote controller is added to a "Group" the quantity of indoor units drops from 8 to 7.)
- Automatic addressing.
- Any indoor unit may be designated as the "Lead Unit".
- Pre-heat indication.
- Filter indication.

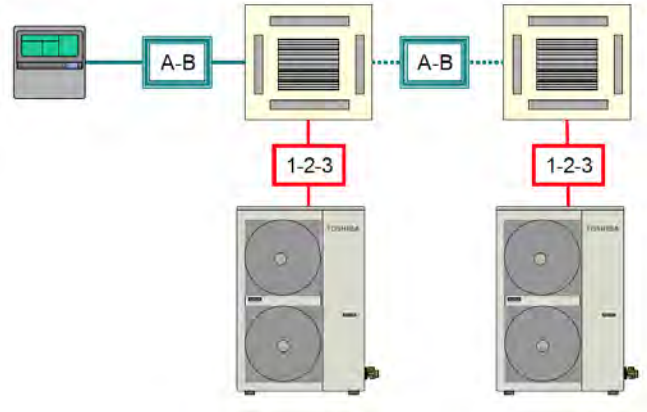

Automatic addressing

This takes place when power is applied and can last up to 5 minutes – the address will be selected automatically.


If a replacement indoor PCB is fitted, the missing address will be re-applied.

The powered controller screen shows the demarcation lines – and does not indicate that the system is either configuring itself – or is ready to use. If the remote temperature sensor is selected (configuration item 32), the associated symbol will appear when the system is ready for use. If a 9<sup>th</sup> indoor unit (which can be a protocol converter) is added to a group, the controller will continue to show the demarcation lines.

Adding a system to an existing group (or powering a group up at different times) will require manual configuration (the fault codes will provide guidance).


Identifying an indoor unit

- Stop operation
- Press **TEST** (43) and **VENT** (35) for 4 seconds
- ALL is displayed
- Indoor fans of the entire group are now energised
- Press **UNIT** (37) to scroll through group
- Indoor fan of selected indoor unit runs
- Press **TEST** (43) to exit.

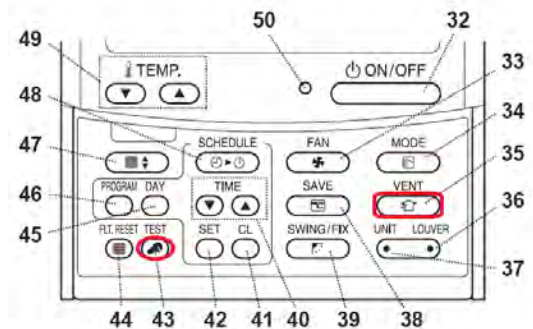

Test operation

- System must be stopped
- Press **TEST** (43) for 4 seconds
- Controller displays TEST
- Press the **ON/OFF** (32) button to start operation
- Select **MODE** (34) of operation
- HEAT or COOL
- Press the **ON/OFF** (32) button to stop test
- System will automatically revert to normal operation after 1 hour
- Press the **TEST** (43) button to leave TEST function

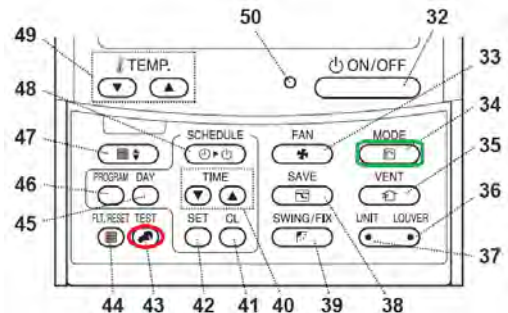

## Controller Configuration - Remote Controller RBC-AMT32E/AMTU31E & RBC-AMS41E

### Quick Reference Guide

To assist service engineers working on Toshiba air conditioning equipment, there is a large quantity of data available via the standard remote controller, either the RBC-AMT32E/AMTU31E or the RBC-AMS41E, this data is **NOT** available via an Infrared remote or the RBC-AS41E2 simplified remote controllers. Accessing the data is a simple process of pressing a sequence of buttons on the remote controller.



### Fault Code Guide

Current fault codes are displayed automatically on the left of the remote controller, (Four figure display in Black) fault code history can be accessed by pressing "**TEST & SET**" together and holding for 4 seconds. Each controller will hold four fault codes per unit controlled, the first displayed fault code is the youngest and the fourth will be the oldest. To scroll through the fault's, use the "**TEMP▲▼**" buttons.

*Refer to the Technical Handbook for fault code diagnosis and descriptions*



### System Data

System data can be obtained by pressing "**TEST & CL**" together and holding for 4 seconds. Codes are displayed on the right of the remote display.

To scroll through the codes, use the "**TEMP▲▼**" buttons. Data is displayed on the left of the remote controller. Data is available for "0, 1, 2, 3 & 4 Series" Digital/Super Digital inverter (R410A SM/SP or R32 GM/GP) and VRF equipment (Mini SMMS/e, SHRM, SHRMi, SHRMe, SMMS, SMMSi, SMMSe & SMMSu).

## Controller Configuration - Remote Controller RBC-AMS51/54/55E-ES/AMSU51E

### Quick Reference Guide


To access this section on the RBC-AMS51/54/55E-ES/AMSU51E



### Fault Code Guide

Current fault codes are displayed automatically on the top of the remote controller, (four figure display in Black) fault code history can be accessed by entering the "Field Setting Menu"

Press and hold the "**MENU**" button and the "**▼**" button at the same time for more than 4 seconds to display the "**Field Setting Menu**" scroll down to "Alarm History". The history holds 10 fault codes per unit controlled.

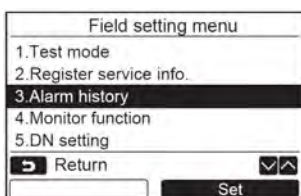

### System Data

System data can be obtained by entering the "Field Setting Menu" and scroll down to "Monitor Function"

When in monitor mode scroll through the data using the up/down buttons.



### System Data

System data can be obtained by pressing "TEST & CL" together and holding for 4 seconds. Codes are displayed on the right of the remote display.

To scroll through the codes, use the "TEMP ▲▼" buttons. Data is displayed on the left of the remote controller. Data is available for "0, 1, 2, 3 & 4 Series" Digital/Super Digital inverter (R410A SM/SP or R32 GM/GP) and VRF equipment (Mini SMMS/e, SHRM, SHRMi, SHRMe, SMMS, SMMSi, SMMSe & SMMSu).

### Data Retrieval Guide –

[Remote Controllers RBC-AMU-31E, RBC-AMT32E, RBC-AMS41E, RBC-AMSU51E, RBC-AMS51/54E-ES](#)

### Digital/Super Digital "0-1-2-3" Series Data

Code	Indoor Data	Code	Outdoor Data
00	Room Temp (Control Temp) (°C)	60	TE Sub-Cooled Liquid Temp (°C)
01	Room Temp (Remote Controller) (°C)	61	TO Ambient Temp (°C)
02	TA Return Air Temp (°C)	62	TD Discharge Temp (°C)
03	TCJ Coil Liquid Temp (°C)	63	TS Suction Temp (°C)
04	TC Coil Vapour Temp (°C)	65	THS Inverter Heat Sink Temp (°C)

### Digital/Super Digital "4" Series

Code	Indoor Data	Code	Outdoor Data
00	Room Temp (Control Temp) (°C)	60	TE Sub-Cooled Liquid Temp (°C)
01	Room Temp (Remote Controller) (°C)	61	TO Ambient Temp (°C)
02	TA Return Air Temp (°C)	62	TD Discharge Temp (°C)
03	TCJ Coil Liquid Temp (°C)	63	TS Suction Temp (°C)
04	TC Coil Vapour Temp (°C)	65	THS Inverter Heat Sink Temp (°C)
07	Fan Speed (rpm)	6A	Operation Current (x1 1/0) (A)
F2	Fan Run Time (x 100h)	70	Compressor Frequency (rps)
F3	Filter Duration Timer (x 1h)	72	Fan Speed (Lower) (rpm)
F8	Discharge Temp (Indoor If fitted) (°C)	73	Fan Speed (Upper) (rpm)
		F1	Compressor Run Time (x 100h)

### VRF Indoor Data

Code	Indoor Data	Code	Indoor Data
00	Room Temp (Control Temp) (°C)	F3	Filter sign time (x 1)
01	Room Temp (Remote Controller) (°C)	F9	Suction temperature of air to air heat exchanger (TOA) (x 1)
02	TA Return Air Temp (°C)	FA	TOA Outside air temperature (°C)
03	TCJ Coil Liquid Temp (°C)	EO	Refrigerant leak detection (0000)=Normal (0001)=Possible refrigerant leak
04	TC2 Coil PMV Pipe Temp (°C)	0A	Number of Connected Indoor Units (No.)
05	TC1 Coil Vapour Temp (°C)	0b	Indoor Capacity (x 10 = HP)
06	Indoor Discharge Temp (If Used) (°C)	0C	Number of Outdoor Units (No.)
07	Indoor fan motor revolutions (x10 = rpm)	0d	Outdoor Capacity (x 10 = HP)
08	PMV Position (pulse 0/10)		

### VRF Outdoor Data for Mini SMMS / SMMs & SHRM Equipment

Code	Outdoor Data	Code	Outdoor Data
*0	Td1 Compressor 1 Discharge Temp (°C)	*7	TO Outside Ambient Temp (°C)
*1	Td2 Compressor 2 Discharge Temp (°C)	*9	Compressor 1 Current (A)
*2	Pd High Pressure Sensor (MPa)	*A	Compressor 2 Current (A)
*3	Ps Low Pressure Sensor (MPa)	*b	PMV1 + 2 Opening (0-100)
*4	TS Suction Temp (°C)	*d	Compressor 1, 2 ON/OFF
*5	TE Outdoor Heat Exchanger Temp (°C)	*E	Outdoor Fan Mode (0-31)
*6	TL Liquid Temp (°C)	*F	Outdoor Unit Size (HP)

Note \* Would be replaced with 1 = U1, 2 = U2, 3 = U3, or 4 = U4 to obtain data from respective outdoor unit.

### VRF Outdoor data for SMMSi equipment

Code	Outdoor Data	Code	Outdoor Data
*0	Pd – High Pressure Sensor (MPa)	#0	Compressor 1 Revolutions (rps)
*1	Ps – Low Pressure Sensor (MPa)	#1	Compressor 2 Revolutions (rps)
*2	Td1 – Compressor 1 Discharge Temp (°C)	#2	Compressor 3 Revolutions (rps)
*3	Td2 – Compressor 2 Discharge Temp (°C)	#3	Outdoor Fan Mode
*4	Td3 – Compressor 3 Discharge Temp (°C)	#4	Compressor IPDU 1 Heat Sink Temp (°C)
*5	TS – Suction Temp (°C)	#5	Compressor IPDU 2 Heat Sink Temp (°C)
*6	TE1 – Outdoor Coil Temp (°C)	#6	Compressor IPDU 3 Heat Sink Temp (°C)
*7	TE2 – Outdoor Coil Temp (°C)	#7	Outdoor Fan IPDU Heat Sink Temp (°C)
*8	TL – Liquid Temp (°C)	#8	Heating / Cooling Recovery Controlled
*9	TO – Outdoor Ambient Temp (°C)	#9	Pressure release
*A	PMV 1 + 2 Opening	#A	Discharge Temp. Release
*B	PMV 4 Opening	#B	Follower Unit Release
*C	Compressor 1 Current (A)	#F	Outdoor Unit Size (HP)
*D	Compressor 2 Current (A)		
*E	Compressor 3 Current (A)		
*F	Outdoor Fan Current (A)		
		<b>Note:</b> * Would be replaced with 1 = U1, 2 = U2, 3 = U3 or 4 = U4 to obtain data from respective outdoor unit. # Would be replaced with either 5 = U1, 6 = U2, 7 = U3 or 8 = U4 to obtain data from respective outdoor unit.	

### VRF Outdoor data for SMMSe/SHRMe equipment

Code	Outdoor Data	Code	Outdoor Data
*0	Pd – High Pressure Sensor (x100) (MPa)	#0	PMV 1 Opening
*1	Ps – Low Pressure Sensor (x100) (MPa)	#1	PMV 3 Opening
*2	Td1 – Compressor 1 Discharge Temp (°C)	#2	PMV 4 Opening
*3	Td2 – Compressor 2 Discharge Temp (°C)	#3	1 Fan model: Comp. 1 Current (x10) (A) 2 Fan model; Comp. 1 and Fan current (x10) (A)
*5	TE1 – Outdoor Coil Temp (°C)	#4	1 Fan model: Comp. 1 Current (x10) (A) 2 Fan model; Comp. 1 and Fan current (x10) (A)
*6	TE2 – Outdoor Coil Temp (°C)	#6	Compressor 1 revolutions
*9	TO – Outdoor Ambient Temp (°C)	#7	Compressor 2 revolutions
*A	TS1 – Suction Temp (°C)	#9	Outdoor fan mode
*B	TS2 – Suction Temp (°C)	#A	Compressor IPDU 1 Heat Sink Temp (°C)
*D	TL – Liquid Temp (°C)	#B	Compressor IPDU 2 Heat Sink Temp (°C)
90	Heating/cooling recovery controlled	#D	Outdoor Fan IPDU 1 Heat Sink Temp (°C)
91	Pressure release	#E	Outdoor Fan IPDU 1 Heat Sink Temp (°C)
92	Discharge temperature release	#F	Outdoor unit horsepower (HP)
93	Follower unit release		
		<b>Note</b> * Would be replaced with 1 = U1, 2 = U2 or 3 = U3 to obtain data from respective outdoor unit. # Would be replaced with 5 = U1, 6 = U2 or 7 = U3 to obtain data from respective outdoor unit.	

### VRF Outdoor data for SMMSu equipment

Code	Outdoor Data	Code	Outdoor Data
*0	Pd – High Pressure Sensor (x100) (MPa)	#0	TK1 – Compressor oil temp. (°C)
*1	Ps – Low Pressure Sensor (x100) (MPa)	#1	TK2 – Compressor oil temp. (°C)
*2	Td1 – Compressor 1 Discharge Temp (°C)	#2	PMV1 – Opening (pls)
*3	Td2 – Compressor 2 Discharge Temp (°C)	#3	PMV2 - Opening
*4	TS1 – Suction Temperature (°C)	#4	PMV3 - Opening
*5	TS3 – Suction Temperature (°C)	#5	PMV4 - Opening
*6	TE1 – Outdoor Coil Temp (°C)	#6	Compressor 1 current (x10) (amps)
*7	TE2 – Outdoor Sub heat exchanger temp. (°C)	#7	Compressor 2 current (x10) (amps)
*8	TE3- Outdoor Sub heat exchanger temp.	#8	Compressor 1 revolutions (x10) (rps)
*9	TO – Outdoor Ambient Temp. (°C)	#9	Compressor 2 revolutions (x10) (rps)
*A	TL1 – Liquid Temp. (°C)	#A	Outdoor fan mode
*B	TS2 – Suction Temp. (°C)	#B	TH1 - Inverter of compressor 1 heat sink temp. (°C)
*C	TS3 – Suction Temp. (°C)	#C	TH2 - Inverter of compressor 2 heat sink temp. (°C)
*D	TG1 – Outdoor coil Temp (°C)	#D	TH fan1 -Inverter of outdoor fan 1 heat sink temp. (°C)
*E	TG2 – Outdoor coil Temp (°C)	#E	TH fan2 -Inverter of outdoor fan 1 heat sink temp. (°C)
*F	TG3 – Outdoor coil Temp (°C)	#F	Outdoor unit horsepower (HP)
		<b>Note</b> * Would be replaced with 1=U1, 2=U2, 3=U3, 4=U4 & 5=U5 to obtain data from respective outdoor unit. # Would be replaced with 6=U1, 7=U2, 8=U3, 9=U4 & A=U5.	

## VN-M HE/HE1 Air to Air Heat Exchangers

### Controller

#### Energy Save operation (RBC-AMSU51-E/AMS51E-ES/AMS54E-ES/RBC-AMTU31E/AMT32E/AMS41E)

The method to control power consumption by limiting the peak of the compressor's electric current.

= To control peak current by limiting \*\*% of the current release

		FCU only function	Combination function with CDU		
			SDI series 4		
			Linked with A2A HEX by TCC link*1	Energy save operation (Limit the peak of electric current)	Night Operation by only New Controller *2
4-way Cassette type	RAV-SM**4UT-E	x	0	0	0*3
	RAV-SM**4UTP-E	x	0	0	0*3
4-way Compact Cassette type	RAV-SM**4MUT-E	0	0	0	0*3
Ducted type	RAV-SM**6BT-E	0	0	0	0*3
Slim duct type	RAV-SM**4SDT-E	x	0	0	0*3
Ceiling type	RAV-SM**4CT-E	0	0	0	0*3
	RAV-SM**7CTP-E	0	0	0	0*3
High Wall type	RAV-SM**7KRT-E	x	0	0	0*3

1\* A2A HEX: VN-M\*\*HE

2\* New Controller: RBC-AMS51E-ES, RBC-AMS51E-EN

3\* Initial setting OFF. To change set up 8°C, please set according to Installation Manual of indoor units

	RBC-AMS51E-ES/RBC-AMS54E-ES	RBC-AMT32E/RBC-AMS41E
0	0%, 50%, Option 50-100% per 1%	Option 50-100% per 1%
X	NA	NA





Codes (DN Codes) for changing settings

Codes in the table below are necessary for local advanced control.


Code	Description	Value	Default
01	Lighting-up hours of the filter sign	0000: None, 0001: 150H 0002: 2500H, 0003:5000H 0004: 10000H	0002
03	Central control address	0001 to 0064 0099: Unfixed	0099
13	Indoor unit address	0001 to 0064	0001
28	Auto restart after power failure	0000: Invalid, 0001: Valid	0000
31	Single operation of the fan. (On-Off operation for the Air to Air heat exchanger ONLY)	0000: Invalid, 0001: Valid	0000
48	Imbalanced fan speed ventilation. 0000: Normal, 0001: SA (High > EA (Low) Active, 0002: SA (Low) < EA (High) Active. * High maybe Extra High	0000: 0001: 0002:	0000
49	24 Hour ventilation	0001: Invalid, 0002: Valid	0001
4b	Delayed operation. (Delaying the Air to Air heat exchanger operation to reduce the air conditioning load when starting running the AC.)	0000; Invalid, 0001 to 0006: (Setting value x 10 minutes delay.)	0000
4C	Night-time heat purge. (Setting for the time before the night-time heat purge operation starts) (0000: Night-time heat purge OFF)	0000: Invalid, 0001-0048 Start after, (Setting value x 1 hour. 1 to 48 hours)	0000
4d	Setting of the exhausting fan operation below -15°C (OA) (The supply fan stops when the temperature (OA) is below -15°C)	0000: Exhaust fan run 0001: Exhaust fan stop	0000
4E	Setting of the linked operation with external devices. (Specifies whether the ON/OFF operation of the Air to Air Heat Exchanger is linked with the external device operation.)	0000: ON/OFF Linked 0001: ON Linked 0002: OFF Linked	0000
5d	Maximum Fan Speed Selection	0000: High, 0001: Extra High	0000
EA	Changing the ventilation mode. (Compatible with systems without a remote controller.)	0001: Bypass mode 0002: Heat exchanger mode 0003: Automatic mode	0003
Eb	Changing the ventilation fan speed. (High maybe Extra High. Compatible with systems without a remote controller.)	0002: High, 0003: Low, 0004: Imbalanced	0002
Ed	Changing the operation output. 0000: On during normal operation, 0001: On during normal operation, 24 hour ventilation, or night time heat purge operation, 0002: On during 24 hour ventilation or night time heat purge operation, 0003: On when SA fan is running, 0004: On when EA fan is running.	0000: 0001: 0002: 0003: 0004:	0000
EE	Changing the abnormal signal / Bypass mode signal output. 0000: On when an abnormal signal is detected, 0001: On when the bypass mode signal is detected.	0000: On abnormal 0001: On bypass	0000
F6	Application control kit	0000: Invalid, 0001: Valid	0000



## VN-M HE Air to Air Heat Exchanger Configurations

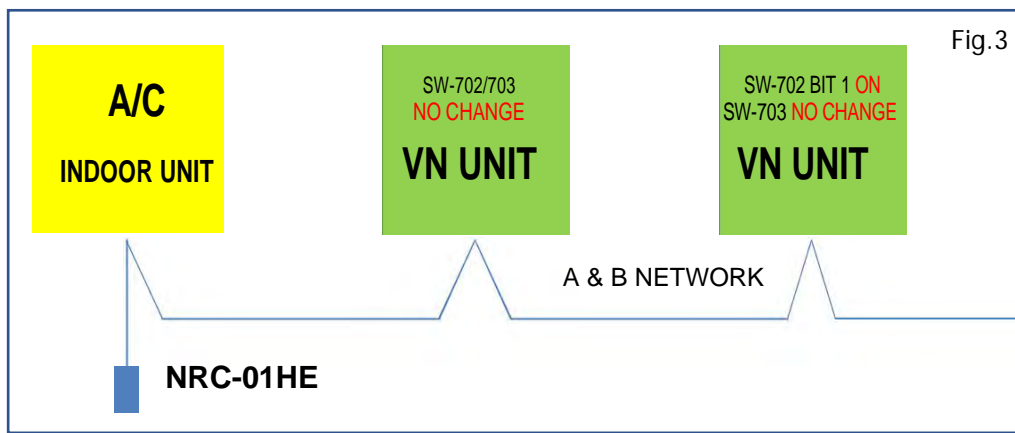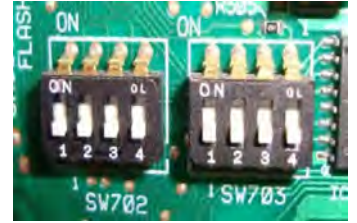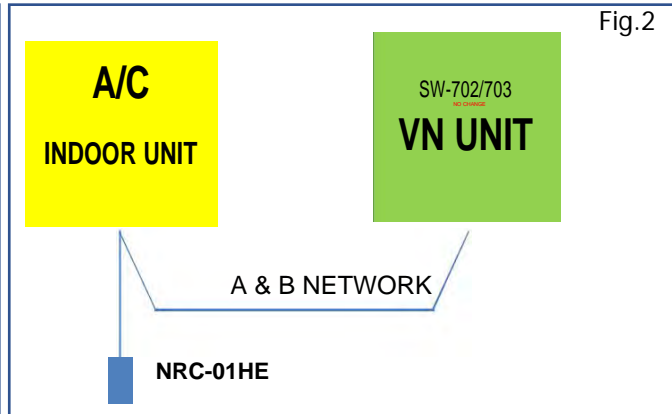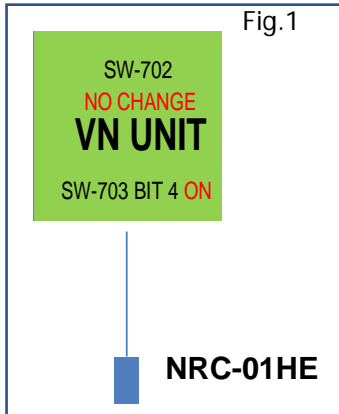




SW702	Number
ALL OFF	1
Bit 1 ON	2
Bit 2 ON	3
Bit 1 & 2 ON	4
Bit 3 ON	5

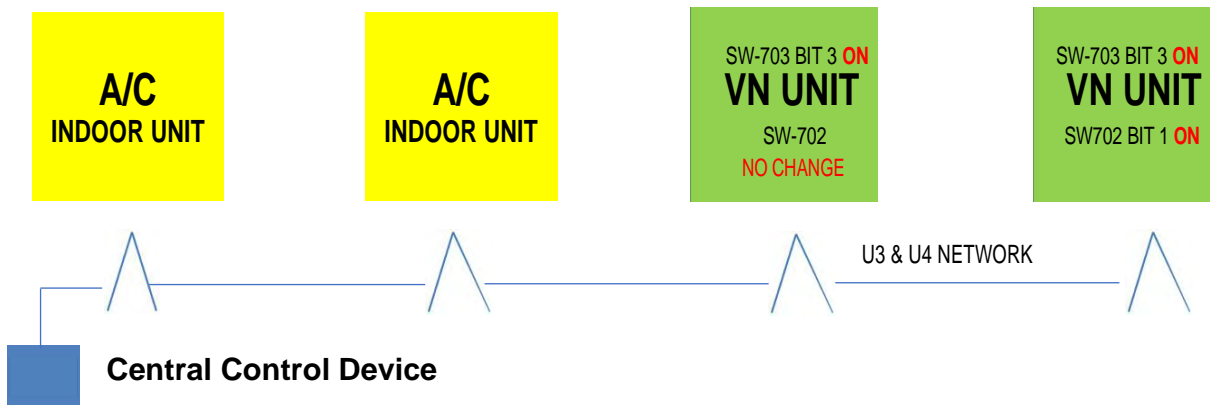


CONTROLLER MODEL		ON/OFF CONTROL	TIME CLOCK CONTROL	FULL CONTROL
RBC-AMT31-E		NO	NO	NO
RBC-AMT32-E/AMTU31-E		NO	NO	NO
RBC-AMS41-E		NO	YES	NO
RBC-AMS51/54/55E-ES* /AMSU51-ES		YES*	YES*	NO
NRC-01HE	Fig. 1	YES	NO	YES
	Fig. 2 & Fig. 3	YES	NO	NO

\*RBC-AMS51/54/55E-ES offers control when paired with a compatible A/C Indoor Unit


**VN-M HE1 Air to Air Heat Exchanger Configurations**

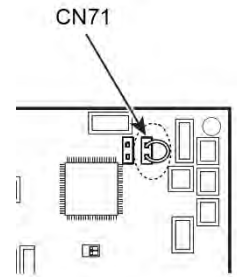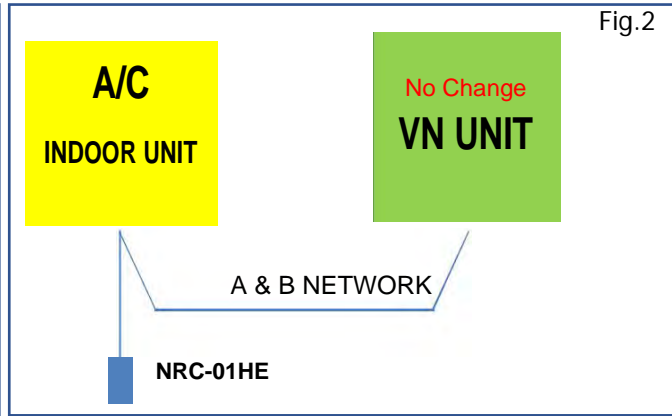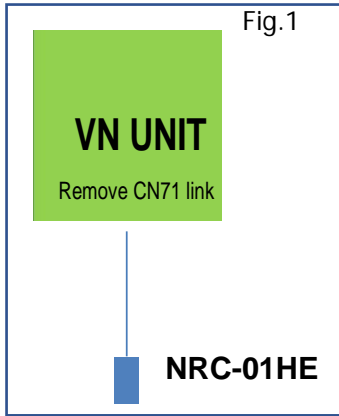

On the "Header Unit" the "CN71" link needs removing. The "CN71" link remains in position on follower units.

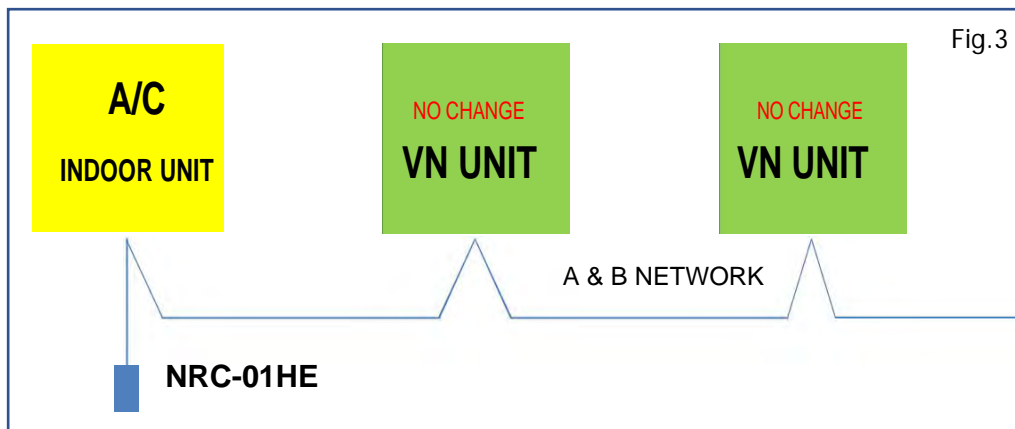

Configuration is generally automatic, with "CN71" link removed on the header, apply power to the units within the "Group", addressing will be carried out automatically.

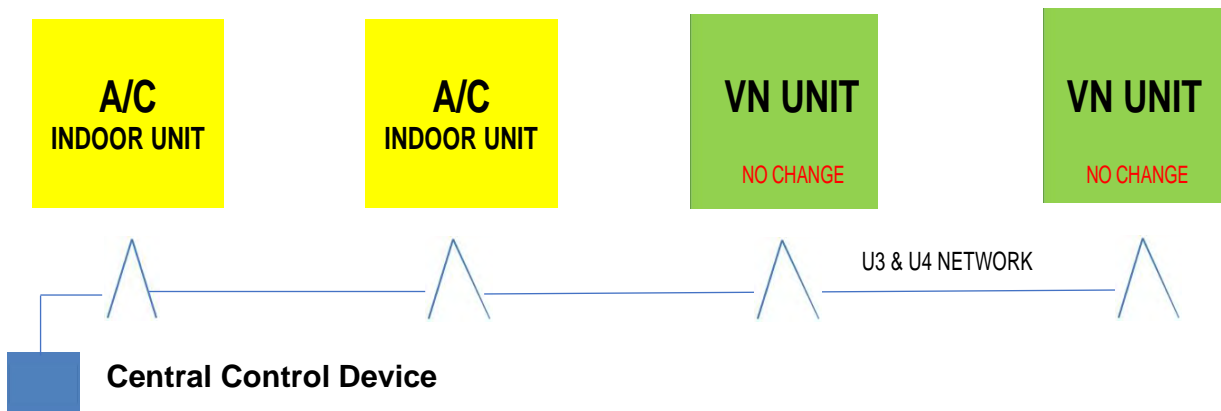

**VN-M####HE1 - If manual addressing is required.**


Using the RBC-NRC01HE remote controller, with power on.

**Press and HOLD**, for 4 seconds; **"TEST, SET and CL"**.

The controller will display **"10"** on the right-hand display.  
Using the **Temp up/down** buttons, scroll **10** to **13**.  
Change the left-hand display using the **"Time"** Up/down buttons  
Selecting a unique number between 1 (Header) – 64 (Follower),  
Groups can comprise of up to 8 units.

Press **"SET"** then Press **"TEST"**

When you press the **"Unit"** button the middle window will  
Display, the system number, always fixed at 31, and the indoor  
unit number between 1 to 64, pressing the **"Unit"** button again  
will display the next unit in the group, 31 – 2 etc.

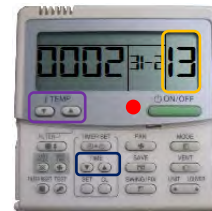

NOTES

## Network Addressing VRF Systems, Mini VRF/SMMS/SMMSi/SMMSe/SHRM/SHRMI/SHRMe

*When setting up a central remote controller, which includes more than one VRF outdoor system, each VRF outdoor system needs to have a system address set, factory setting is 1.*


*On SMMSe and SHRMe a "system" can comprise of up to 3 outdoor units, "Lead" outdoor displays "U1" "follower" outdoor units display "U2 – U3"*

Additional systems may be addressed up to a system number of 28.

This is achieved via "Dip switches" SW13 & 14 at the "Lead" – "U1" Outdoor Unit

System Address	SW13				SW14			
	1	2	3	4	1	2	3	4
1				X	X	X	X	X
2				X	O	X	X	X
3				X	X	O	X	X
4				X	O	O	X	X
5				X	X	X	O	X
6				X	O	X	O	X
7				X	X	O	O	X
8				X	O	O	O	X
9				X	X	X	X	O
10				X	O	X	X	O
11				X	X	O	X	O
12				X	O	O	X	O
13				X	X	X	O	O
14				X	O	X	O	O
15				X	X	O	O	O
16				X	O	O	O	O
17				O	X	X	X	X
18				O	O	X	X	X
19				O	X	O	X	X
20				O	O	O	X	X
21				O	X	X	O	X
22				O	O	X	O	X
23				O	X	O	O	X
24				O	O	O	O	X
25				O	X	X	X	O
26				O	O	X	X	O
27				O	X	O	X	O
28				O	O	O	X	O

O = ON    X = OFF

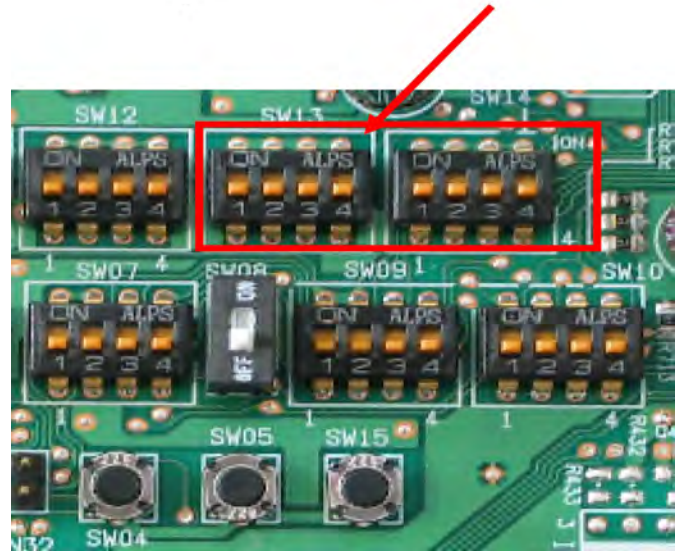



**NOTE.**

In addition to setting the system address, SW30 bit 2 will need turning **ON**, on all lead outdoor units (U1) except the system with the lowest system number.

Example,

Three systems, addressed as system **1** (SW13 bit 4 off, SW14 bits 1 to 4 off, -Default), system **2** (SW13 bit 4 off, SW14 bits 1 on, bits 2 to 4 off), System **3** (SW13 bit 4 off, SW14 bits 1 off, bit 2 on, bit 3 & 4 off).

As system 1 is the lowest system number, (1) switch SW30 bit 2 **OFF** (default). And on, for system 2 (U1) and system 3 (U1).

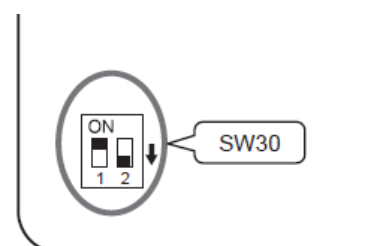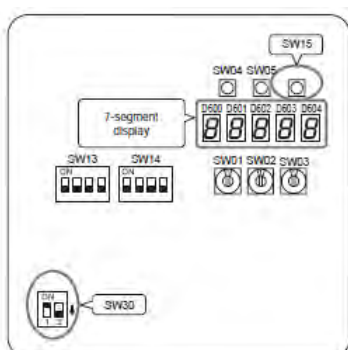

**IMPORTANT NOTE.**

Toshiba has introduced a new range of indoor unit's; the new range are identified as MM\*-**UP**#####\*\*.

The new units are fully compatible with previous generations of SMMS\* and SHRM\* systems, both indoor and outdoor plus the new SMMSu system.

These replace the MM\*-AP#####\*\* range of indoor units.

The new generation indoor units utilise both communication platforms, TCC-Link and TU2C-Link.

When new "UP" indoor units are installed and are to be connected to either a central remote device or a BMS interface, **but without a local remote controller installed**, additional manual configuration is required.

Configuration is carried out using one of the new "U" series remote controllers, RBC-ASCU11-E, RBC-AMTU31-E or RBC-AMSU51-ES, previous generation remotes are unable to access the new "DN Codes" required to re-configure the equipment.


Using one of the listed remotes, access the "DN Codes" settings, scroll through the codes until **DN Code 103** is reached, data will be shown as "0000" change this to "0001", follow the relevant instructions associated with each remote controller to "Fix/Lock" the new configuration.

If this code is NOT changed and there is no local remote controller connected a fault code of "E03" – Communication error between indoor unit and central control device. Will be displayed.

**Network Addressing VRF Systems,**  
**SMMSu - ONLY**

SMMSu systems utilise either TCC-Link or TU2C-Link control logic, which requires manual configuration via the "DIP" switches in the lead outdoor unit, (U1).

**Turn ON, SW100 bit 2 and SW101 bit 1.**

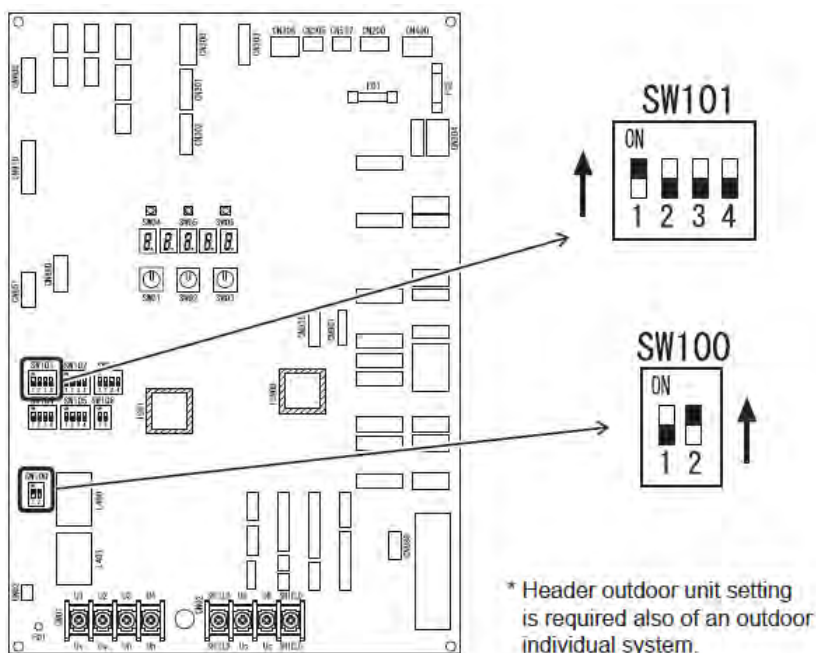

If not set as above an error code of E19, (Header not detected) will be displayed on the U1, (Lead) outdoor unit.




When setting up a central remote controller/BMS interface, which includes more than one VRF outdoor system, each VRF outdoor system needs to have a system address set, factory setting is 1. On SMMSu a "system" can comprise of up to 5 outdoor units, "Lead" outdoor displays "U1" "follower" outdoor units display "U2 – U5"

Additional systems may be addressed up to a system number of 28.

This is achieved via "Dip switches" SW101 & 102 at the "Lead" – "U1" Outdoor Unit

System Address	SW101				SW102			
	1	2	3	4	1	2	3	4
1				X	X	X	X	X
2				X	X	X	X	O
3				X	X	X	O	X
4				X	X	X	O	O
5				X	X	O	X	X
6				X	X	O	O	O
7				X	X	O	O	X
8				X	X	O	O	O
9				X	O	X	X	X
10				X	O	X	X	O
11				X	O	X	O	X
12				X	O	X	O	O
13				X	O	O	X	X
14				X	O	O	X	O
15				X	O	O	O	X
16				X	O	O	O	O
17				O	X	X	X	X
18				O	X	X	X	O
19				O	X	X	O	X
20				O	X	X	O	O
21				O	X	O	X	X
22				O	X	O	X	O
23				O	X	O	O	X
24				O	X	O	O	O
25				O	O	X	X	X
26				O	O	X	X	O
27				O	O	X	O	X
28				O	O	X	O	O

O = ON    X = OFF

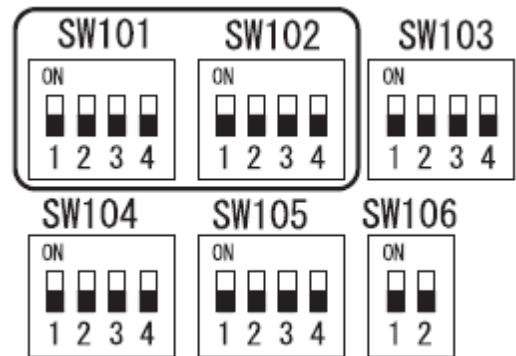

**NOTE.**


In addition to setting the system address, SW100 bit 1 will need turning ON, on the lowest addressed system.

Example,

Three systems, addressed as system **1** (SW101 bit 4 off, SW102 bits 1 to 4 off,-Default), system **2** (SW101 bit 4 off, SW104 bits 1 to 3 off, bit 4 on), System **3** (SW101 bit 4 off, SW102 bits 1 & 2 off, bit 3 on, bit 4 off).

As system 1 is the lowest system number, (1) switch SW100 bit 1 **ON**. And off (default), for system 2 (U1) and system 3 (U1).

Failure to follow the above will produce a E23 (Communication error) fault code.

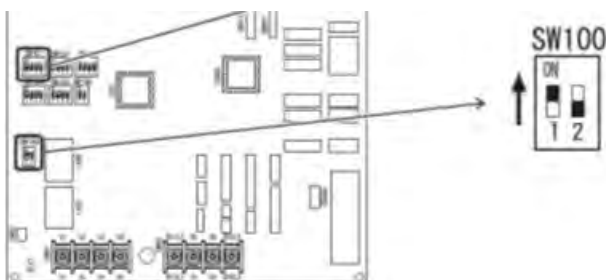


## Definition of address

### Indoor unit address

“Indoor unit address” This enables the outdoor unit to recognize each individual indoor unit.

A unique address is allocated to every indoor unit within a refrigeration system.

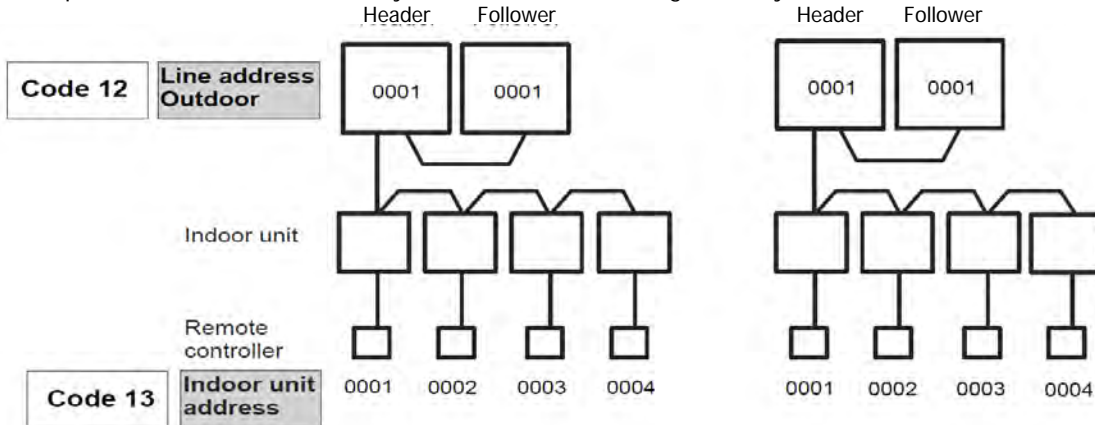

**Group address (VRF)** in case of DI/SDI, please refer to Address setup procedure (when using DI/SDI only or using DI/SDI and VRF) page 75

“Group address” This is the address that recognizes the group control and determines the header indoor unit and follower indoor unit.


Group address and the header indoor unit is decided automatically when the automatic address setting is performed.

(Which indoor unit becomes the header unit is indefinite when automatic address setting is performed.)

Indoor unit of individual control : Group address = 0

Header indoor unit of group control : Group address = 1


Follower indoor unit of group control: Group address = 2

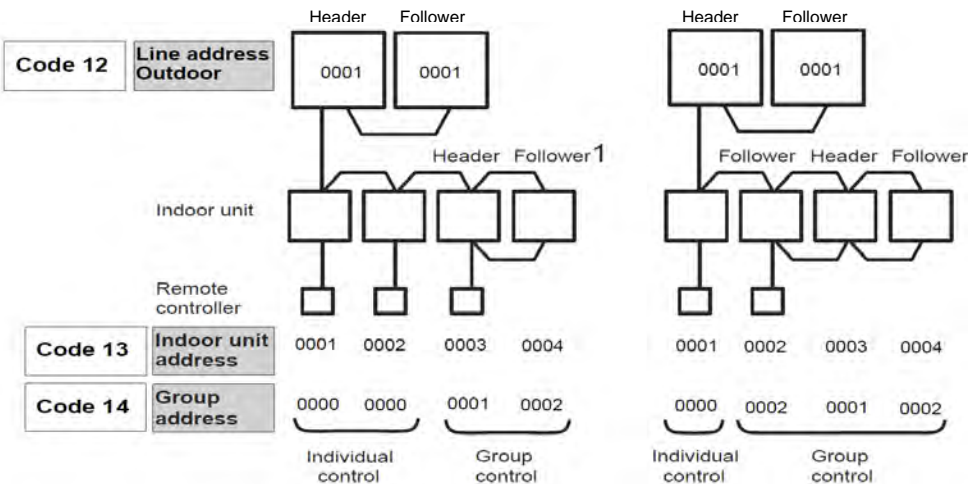

### Line Address (System Address)

“Line address” is the address in which the line (refrigerant system) indoor units are connected.

This line address is set by a switch setting on the interface P.C. board on the header outdoor unit Factory setting: Line address is '1'.

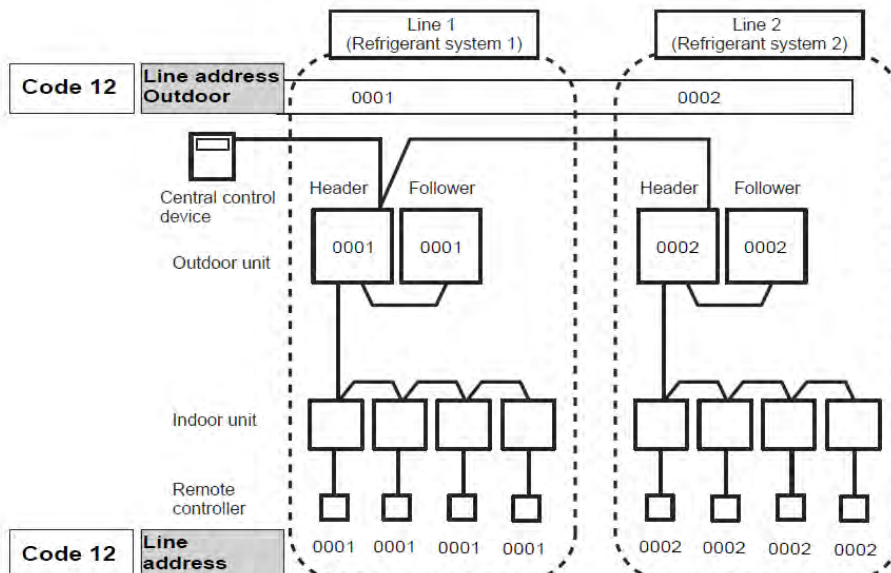


## Network Addressing DI/SDI and VRF Systems

### Central control address

“Central control address” is used to make the central control devices recognize each indoor unit.

Address can be set from the central control devices either automatically or manually, or from wired remote controller devices manually.

In the case of group control in the VRF systems, one central control address is allocated to each indoor unit in a group control.

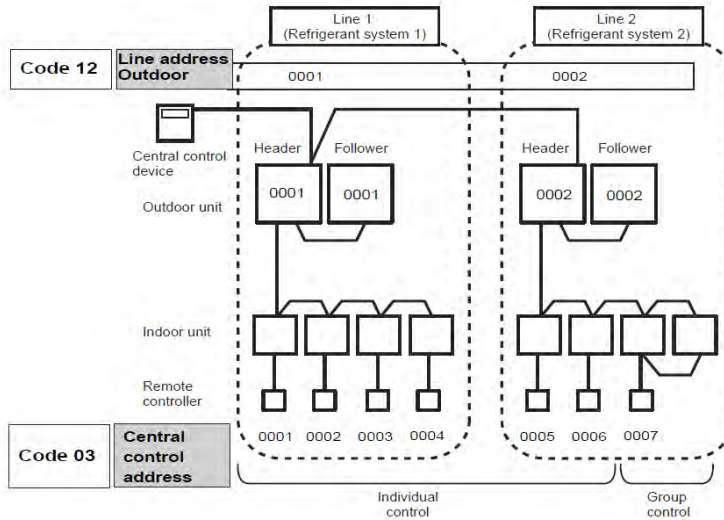

### Zone address (Zone No.)

“Zone address” is to be set when the central remote controller is used for each zone.


Zone address is set by a switch setting on the central remote controller.

Central remote controller can divide all indoor units into a max. 4 zones.

The zone to which the indoor unit belongs is decided by its central control address.

<Central control address/zone/group correspondence table>

Central control Address	Zone	Group	Central control Address	Zone	Group	Central control Address	Zone	Group	Central control Address	Zone	Group
1	1	1	17	2	1	33	3	1	49	4	1
2		2	18		2	34		2	50		2
3		3	19		3	35		3	51		3
4		4	20		4	36		4	52		4
5		5	21		5	37		5	53		5
6		6	22		6	38		6	54		6
7		7	23		7	39		7	55		7
8		8	24		8	40		8	56		8
9		9	25		9	41		9	57		9
10		10	26		10	42		10	58		10
11		11	27		11	43		11	59		11
12		12	28		12	44		12	60		12
13		13	29		13	45		13	61		13
14		14	30		14	46		14	62		14
15		15	31		15	47		15	63		15
16		16	32		16	48		16	64		16
									99		Not set up

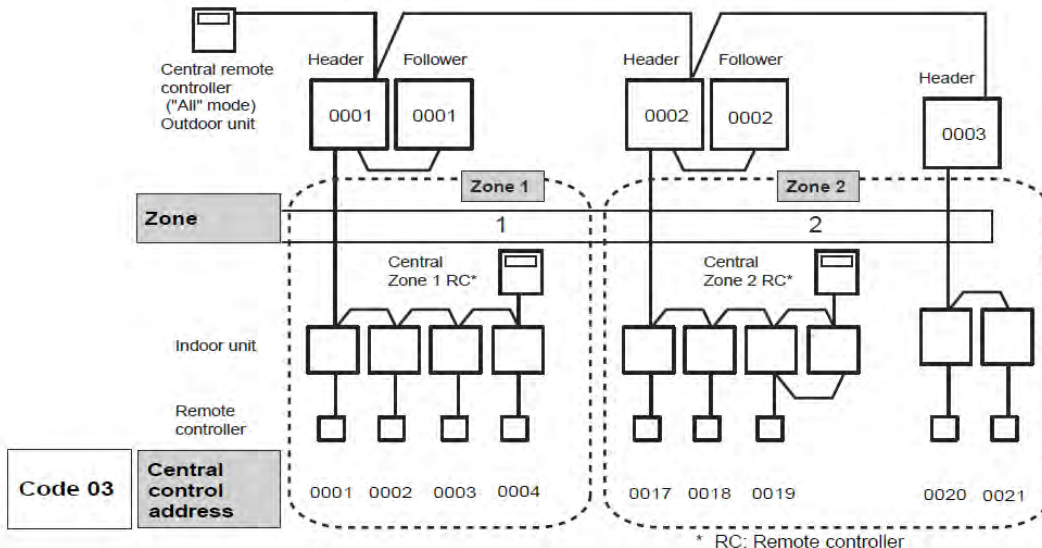

When using BMS-CM1280TLE or BMS-CM1280FTL, you can allocate a zone to each of the 64 central control addresses.

## Terminology

Terms for explaining DI/SDI used in section are redefined to:

- Indoor Unit No. N-n =outdoor unit line address N (Max30) –indoor unit address n (max64)
- Group address 0=single (not group control)
- 1=Master unit in group control
- 2=sub unit in group control

### Master unit:

The representative of multiple indoor units in group operation sends/receives signal to/from the remote controllers and sub indoor units. It has no relation with an indoor unit which communicates serially with the outdoor units. Also, this unit communicates with the central controller. The operation mode and setup temperature range are reflected on the remote controller LCD. (Except air direction adjustment of louver)

### Sub unit:

Indoor units other than master unit in group operation. Basically, sub units do not send/receive signals to/from the remote controller.

### Header unit (Representative unit) (Master twin):


This unit communicates with the indoor unit (follower) which serial-communicates with the outdoor units and sends/receives signal (command from compressor) to/from the outdoor units as the representative of the cycle control in the outdoor units of the identical line address within the minimum unit which configures one of the refrigerating cycles of twin.

### Follower unit (Subordinate unit) (Sub twin):

Indoor units excluding the header unit in Twin. This unit communicates with Header indoor unit in the identical line address and performs control synchronized with Header unit. This unit does not perform the signal send /receive operation with the outdoor units. No judgement for serial signal error.

## Basic configuration

The basic DI/SDI connection configuration of each type of model is shown below.

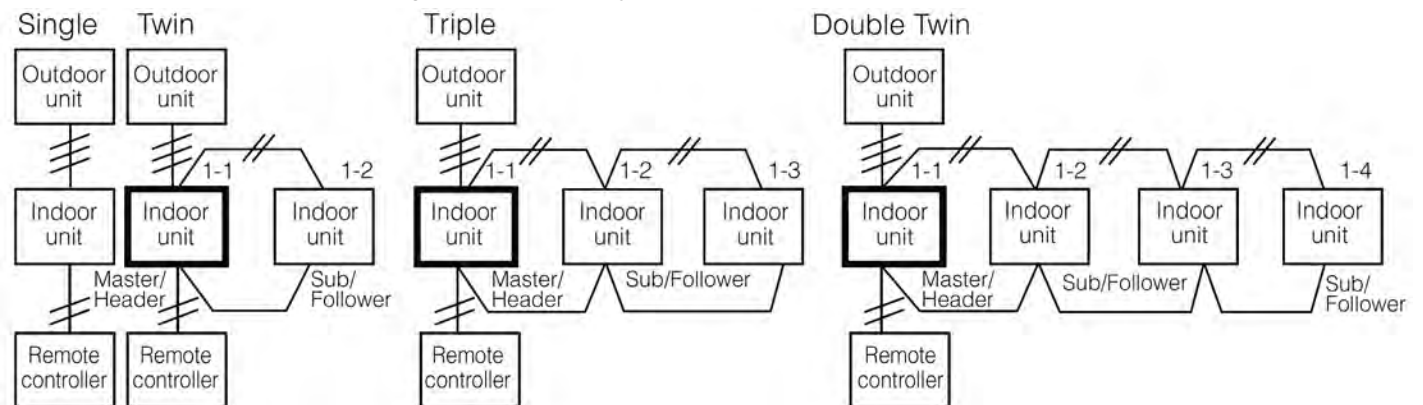


## Address re-setup for group control

After turning on the power and finishing automatic address setting, check the Indoor Unit No using the wired remote controller. If the line address is not unified in the devices in a refrigerant line, unify the line address using the wired remote controller. If group control is used, assign the group address “1” to any one of the indoor units and “2” to the rest of the units. Confirm that each indoor unit in a group has a unique Indoor Unit No (E08 error is not indicated on the wired remote controller).


## Standard configuration (One outdoor unit)

In this case, address setting can be made by using auto addressing.

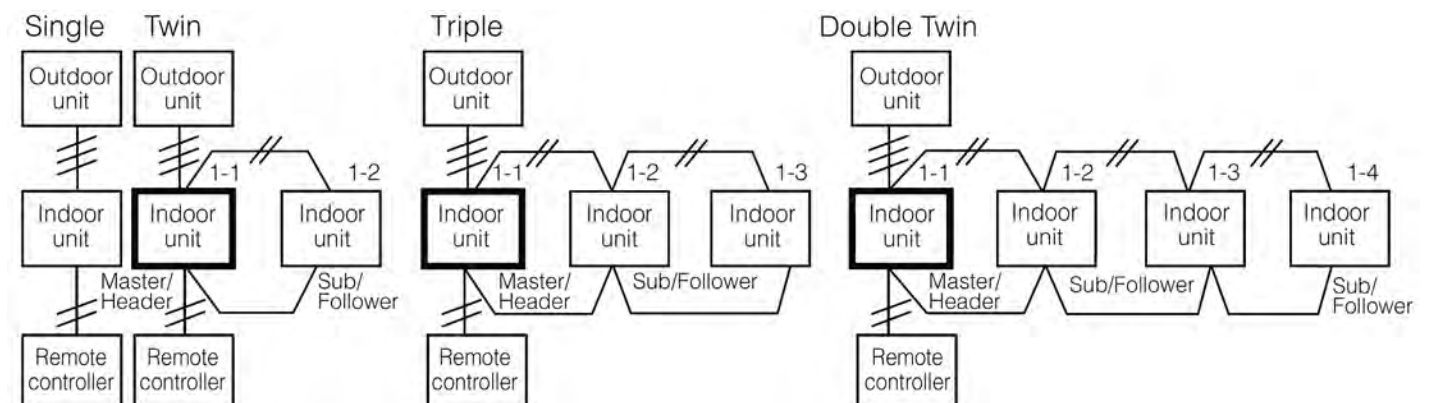


## Group configuration (single only)

In this case, address setting can be made by using auto addressing.

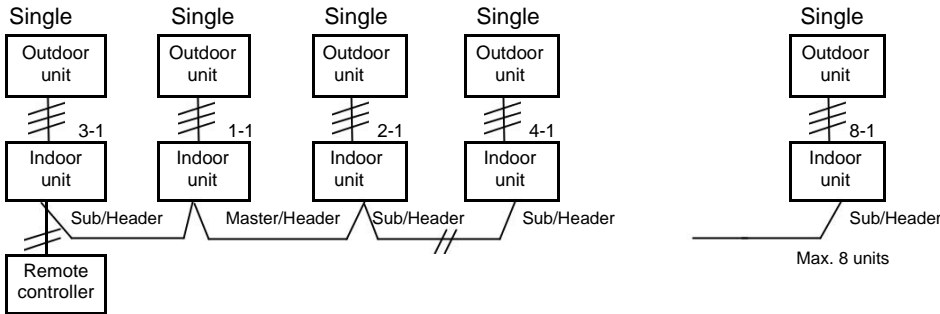


## Multiple Group configuration (combination of single/twin/triple)

In this case, manual re-addressing is required.

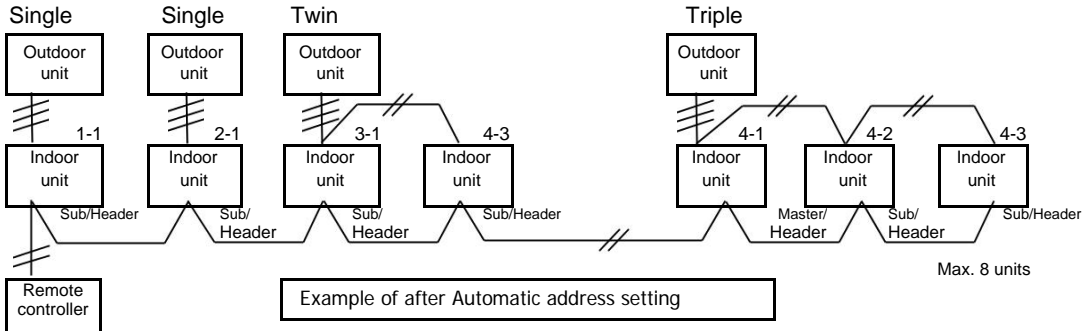

Example of after Automatic address setting  
Change the setting manually for correct operation

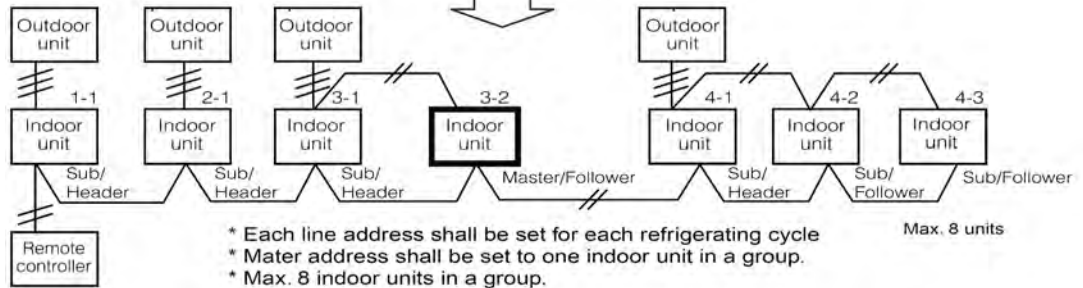

- \* Each line address shall be set for each refrigerating cycle
- \* Mater address shall be set to one indoor unit in a group.
- \* Max. 8 indoor units in a group.

## Connection and Address re-setup example for central control

### "1:1Model" Connection Interface TCB-PCNT30TLE2


When controlling the super-digital inverter and the digital inverter, the adaptor named "1:1 model" connection interface (TCB-PCNT30TLE2) is necessary.

SDI series 4 4-way discharge cassette type, etc. need metal case TCB-PX30MUE additionally for fixing. Some of Hi-wall Type does not need "1:1Model" Connection Interface. Please refer to installation manual of each model.

### Cabling connection of control wiring

Attach an adaptor per 1 group in the group control operation (including individual control).


Connect the adaptor to the Master indoor unit in the group control.

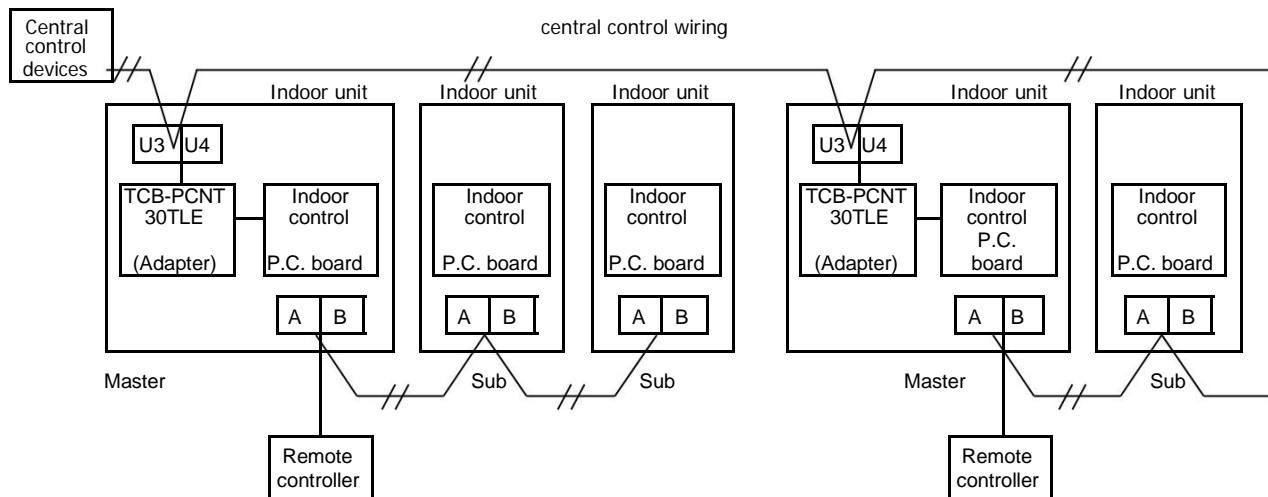




## Network Addressing DI/SDI and VRF Systems

A central control connection example of a system where both VRF and DI/SDI are used is shown below. The VRF and DI/SDI subsystems are connected through the central control wiring and to the central control devices.

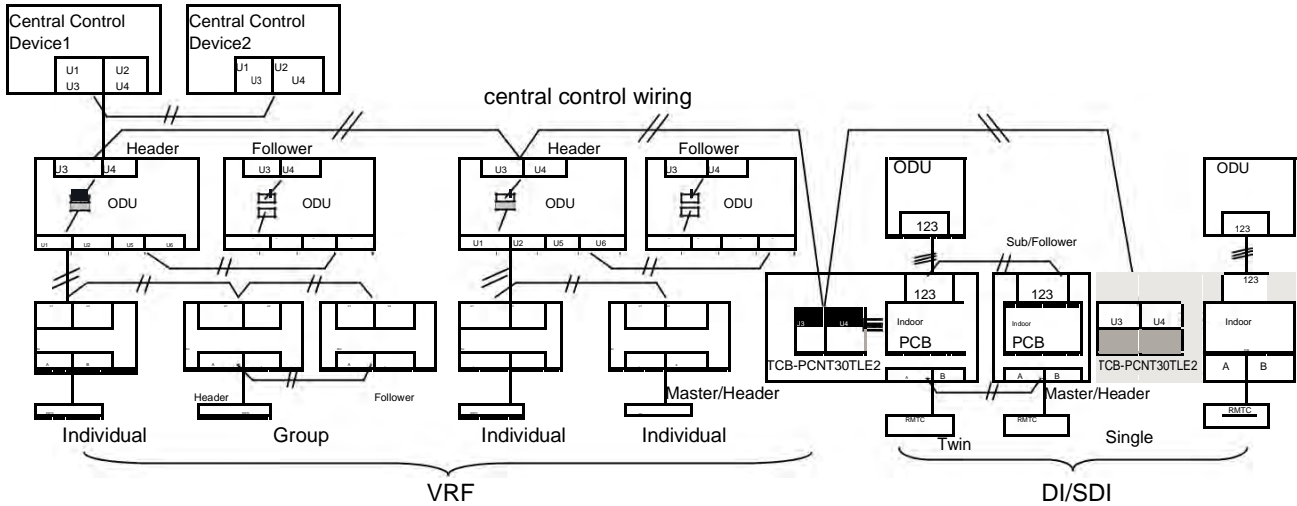


After automatic address setup, it is necessary to change the line address from the wired remote controller for each system. **Reason:** After automatic address setup, all of the line addresses will become "1" except in a group control and then a duplicated address error "E08" will be outputted.

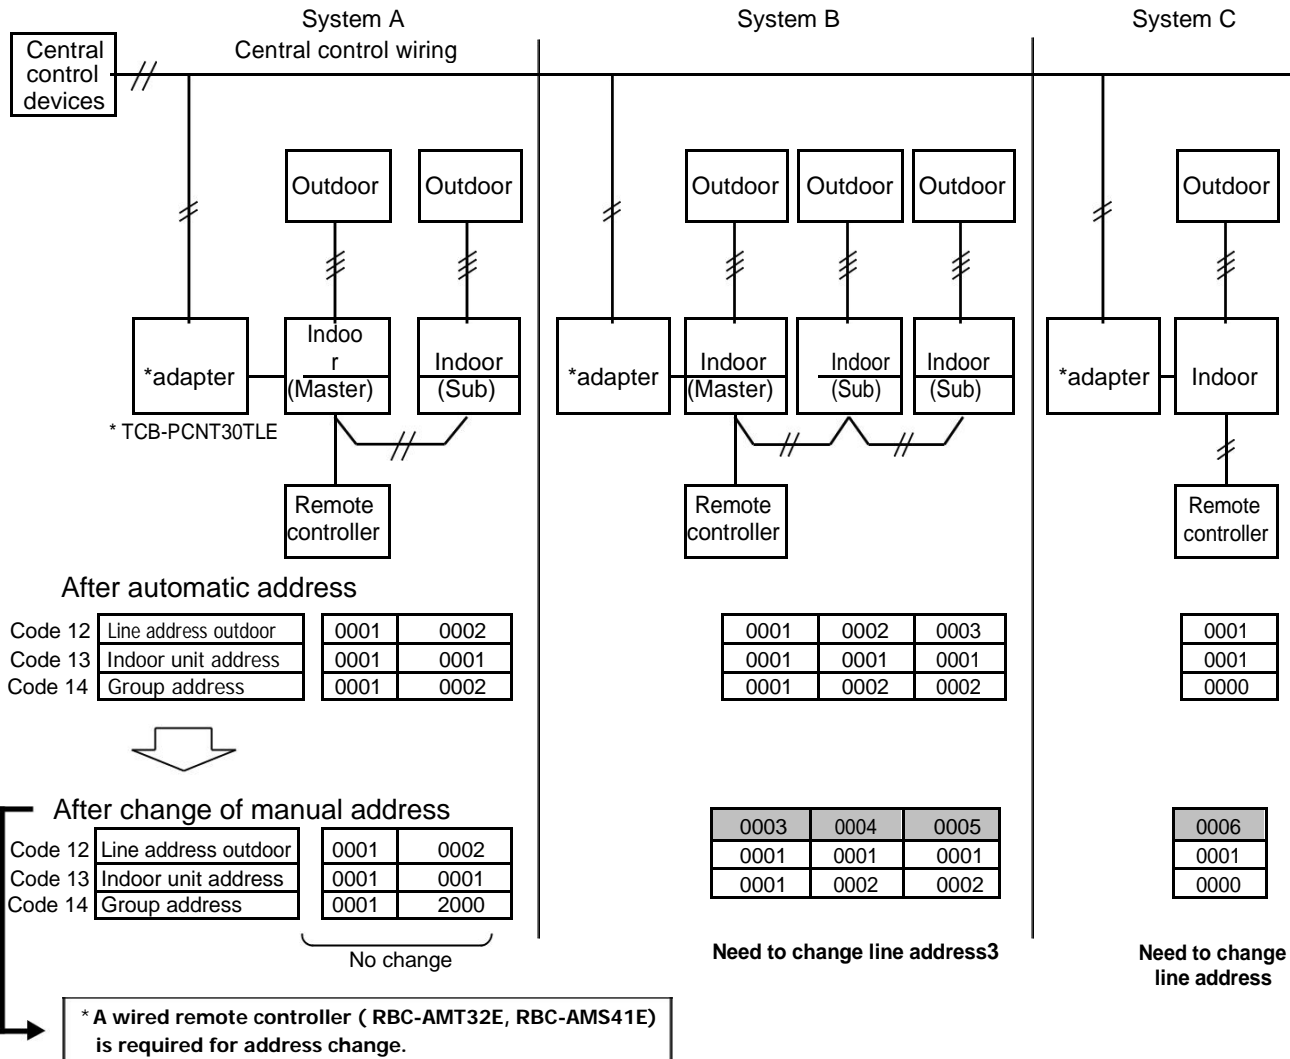

- Set up a line address for each refrigerant system.
- Set up a line address so that it is not duplicated with other systems. (If the central control is conducted with VRF systems, set up a line address so that it is not also duplicated with line address of the VRF systems.)
- When performing a central control of over 30 systems, the address setup method needs to be changed. (including a VRF system)

When the central control is performed for indoor units using twin control in a group operation, it may be required to change the group address. (Adapter is attached to the Master indoor unit.)

**Reason:** The central control device communicates with each individual indoor unit, the Master indoor unit of the group control and the Master indoor unit of the twin control. However, as the address is automatically set up, which unit will become the Master unit is indefinite. Therefore, if the unit attached with adapter does not become the Master indoor unit, the central control function will become unavailable.

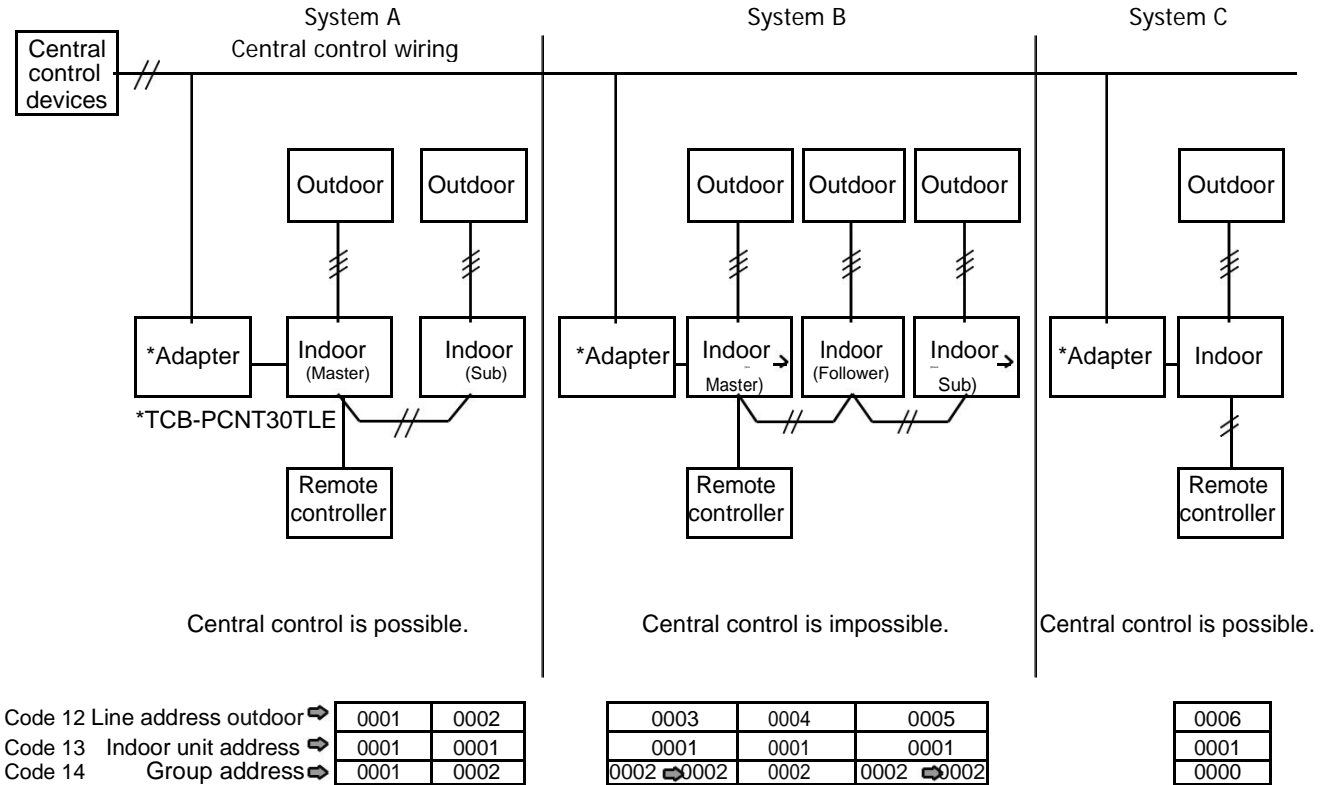

**\*A wired remote controller (RBC-AMT21E, RBC-AMT32(31)E, RBC-AMS41E) is required for address change.**

### Address setup procedure (when using DI/SDI only, or using DI/SDI and VRF)

When an outdoor unit and an indoor unit are connected, or when an outdoor unit is connected to each indoor unit respectively in the group operation even if multiple refrigerant lines are provided, the automatic address setup completes with power -ON of the outdoor unit after group construction check (refer to the note below). The operation of the remote controller is not accepted while automatic address works. (Approx.4 to 5 minutes)

### CAUTIONS

1. Set up address after the wiring has been completed.
2. "1:1Model" Connection Interface TCB-PCNT30TLE2 is necessary for DI/SDI for central control. Some Hi-wall Type do not need "1:1Model" Connection Interface. Please refer to the installation manual of each model. Connect the central control devices to U3/U4 wires of the central control system.
3. When "1:1Model" Connection Interface is used for the group control or twin, triple or quad system, the interface must be connected to the Master unit of the indoor unit. (Connection to Sub unit is unavailable). One "1:1Model" Connection Interface per one group.
4. In group operation, be sure to turn on power supplies to all indoor units in group control within 3 minutes. When power supply of the Master unit is not turned on, there is a possibility that the Master unit exchanges with Sub unit. (If Master unit is exchanged, the central control is unavailable.)

**Note)**

If group construction is abnormal, the automatic address sequence starts automatically. Normal condition is below.

1. There is no duplicated indoor unit address.
2. There is no invalid indoor unit address.
3. Individual unit and master/sub units are not intermingled.
4. Only a unit for Individual.
5. A master indoor unit and 1 or more sub indoor units for group.

## Second Controller


- ⇒ Options available
  - 2 x wired controllers
  - 1 wired + 1 infra-red controller
- ⇒ Full group control from either
  - ⇒ Connection may be anywhere within group
  - ⇒ Changes updated

The sub-controller must be set – this can be done from either controller. The choice of sub-controller makes little difference unless it is required to act as the temperature sensor

## Temperature Sensing

Both infrared and wired controllers are able to supply a temperature value to the indoor unit. This may be more representative than the standard, return air sensor but is not available from sub controllers of either type. To set the room sensor:

- ⇒ Infrared controller – press MAIN SENSOR
- ⇒ Wired controller – selected from configuration menu

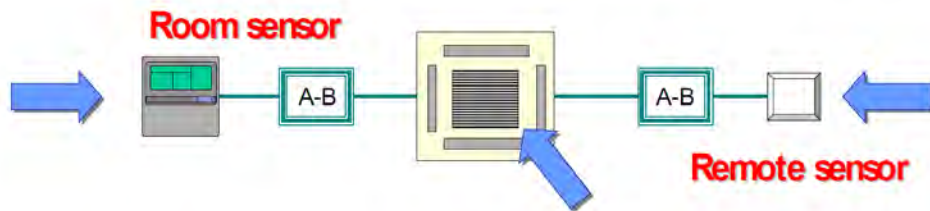

Should the infrared controller lose contact with the indoor unit, return air temperature control will automatically resume. A further option for remote sensing is available – The remote sensor. Is a Wall Mounted device, (1.5m from the floor). The sensor should NOT be ceiling mounted.

This is connected to terminals A-B whether or not a wired controller is used. The indoor unit must, in this case, be set to use the standard, return air sensor (Configuration code "32" - 0000), – this sensor automatically takes over in this case. This value will be used to provide control to all indoor units within the group.

### NOTES

NOTES

NOTES



NOTES

**Contact details:**

**Cool Designs Ltd**  
**Technical Support**  
**07590 775510 / 07706 293028**  
Monday – Friday 07.30 to 19.30

Email: [support@cooldesignsltd.co.uk](mailto:support@cooldesignsltd.co.uk)

Web site: [www.cdlweb.info](http://www.cdlweb.info)

**TOSHIBA** Air Conditioning  
24/7 technical support  
0870 843 0333 (Option 7)

Text back service  
07624 803 017  
(Type fault code in lower case no spaces)



[Try our on-line training videos on YouTube.](#)

Cool Designs Ltd reserves the right to change the product specifications, data and images without notice



**Cool Designs Ltd**

Raising the Standards in Air Conditioning Distribution